Service Manual

PIONEER®
The Art of Entertainment

ORDER NO.
RRV1976

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D307

● Refer to the service manual RRV1925 for VSX-D307/KUXJI.

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	The voltage can be converted by the following method.
	VSX-D307		
SDXJI	○	AC110V/120–127V/220V/240V	With the voltage selector
SDXJI/NC	○	AC110V/120–127V/220V/240V	With the voltage selector

CONTENTS

1. CONTRAST OF MISCELLANEOUS PARTS 2
2. SCHEMATIC DIAGRAM 4

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V . Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 501 Orchard Road, #10-00 Wheelock Place, Singapore 238880

Ⓒ **PIONEER ELECTRONIC CORPORATION 1998**

T–ZZM MAY 1998 Printed in Japan

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 → 56 x 10^1 → 561 ····· RD1/4PU 5 6 1 J
47k → 47 x 10^3 → 473 ····· RD1/4PU 4 7 3 J
0.5 → R50 ····· RN2H R 5 0 K
1 → 1R0 ····· RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k → 562 x 10^1 → 5621 ····· RN1/4PC 5 6 2 1 F

● *Reference Nos. indicate the pages and Nos. in the service manual for the base model.*

■ CONTRAST TABLE

VSX-D307/SDXJI,/SDXJI/NC and VSX-D307/KUXJI are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.			Remarks
			VSX-D307 /KUXJI	VSX-D307 /SDXJI	VSX-D307 /SDXJI/NC	
		ASSEMBLIES				
	NSP	COMPLEX Assy	AWK7425	AWK7427	AWK7427	
P5- 7		├PRIMARY Assy	AWX7067	AWX7073	AWX7073	
P6- 1		└FRONT Assy	AWX7062	AWX7075	AWX7075	
P5- 9		FM/AM TUNER Unit	AXX7046	AXX7047	AXX7047	
		PACKING				
P3- 3		Operating Instructions (English)	ARB7136	Not used	Not used	
P3- 3		Operating Instructions (English/Spanish/Chinese)	Not used	ARE7161	ARE7161	
P3- 4	NSP	Warranty Card	ARY1051	Not used	Not used	
P3-11		Packing Case	AHD7557	AHD7585	AHD7615	
		Caution 220V Label	Not used	ARR1003	ARR1003	Put on the set.
		EXTERIOR SECTION				
P5-10	⚠	Power Transformer (T1)	ATS7205	ATS7206	ATS7206	
P5-11	⚠	Fuse(FU2: 8A)	REK1086	Not used	Not used	
P5-11	⚠	Fuse(FU2: 4A)	Not used	REK1133	REK1133	
P5-12	⚠	Fuse(FU1: 10A)	REK1087	REK1132	REK1132	
	⚠	Fuse(FU3: 4A)	Not used	REK1133	REK1133	No.1
P5-13	⚠	AC Power Cord	PDG1057	ADG1157	ADG1157	
P5-14		Cord Stopper	CM-22C	CM-22B	CM-22B	
P5-17		Rear Panel	ANC7627	ANC7631	ANC7689	
	⚠	Voltage Selecter	Not used	AKX-507	AKX-507	No.2
	⚠	Voltage Selecter	Not used	AKX1004	AKX1004	No.3
	NSP	Fuse Card	Not used	AAX7647	AAX7647	No.4
	NSP	Fuse Card	Not used	AAX7648	AAX7648	No.5
		FRONT PANEL SECTION				
P6-4	NSP	Getter	AAX7631	AAX7632	AAX7632	

Note: ● The numbers in the remarks column correspond to the numbers on "EXPLOEDED VIEWS".
● For ASSEMBLIES, refer to “CONTRAST OF PCB ASSEMBLIES” and “2. SCHEMATIC DIAGRAM”.

■ EXPLODED VIEWS

● EXTERIOR SECTION

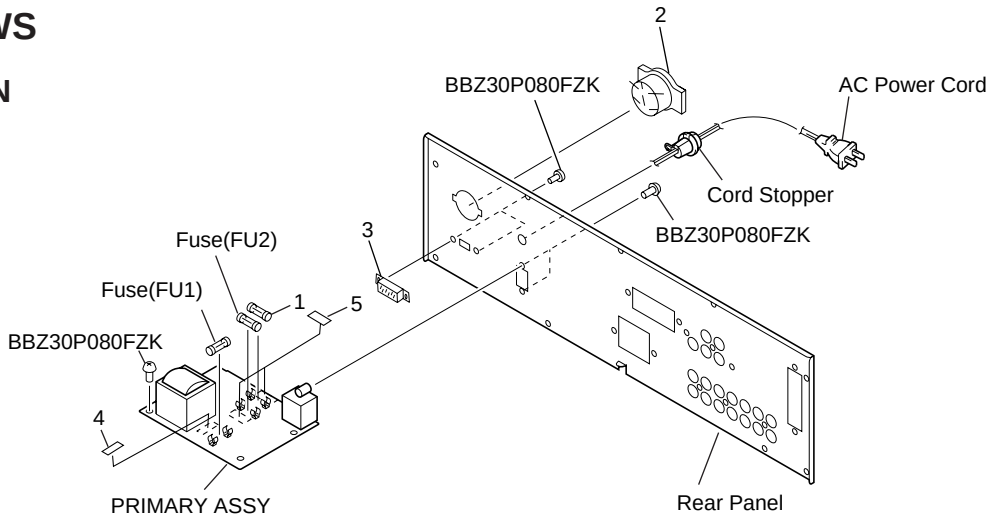

■ CONTRAST OF PCB ASSEMBLIES

● COMPLEX ASSY

AWK7427 and AWK7425 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWK7425	AWK7427	
	FRONT ASSY	AWX7062	AWX7075	
	PRIMARY ASSY	AWX7067	AWX7073	
	Board-in Jumper (J1)	DB115NB0	Not used	
NSP	Board-in Jumper (J2)	DB615NB0	Not used	

DF FRONT ASSY

AWX7075 and AWX7062 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7062	AWX7075	
	D515	Not used	1SS254	
	R541	Not used	RD1/4PU102J	

HF PRIMARY ASSY

AWX7073 and AWX7067 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7067	AWX7073	
	H903,H904 Fuse Clip	Not used	AKR1004	
	R901 2.2MΩ(1/2W)	RCN1080	Not used	
⚠	T901 Power Transformer	ATT1223	ATT1193	
NSP	3P Terminal	Not used	AKC-081	
	903 Ground Plate	VNF-091	Not used	

2. SCHEMATIC DIAGRAM

2.1 FRONT ASSY

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

●The differences of adjacencies to Key switches



DF FRONT ASSY (AWX7075)

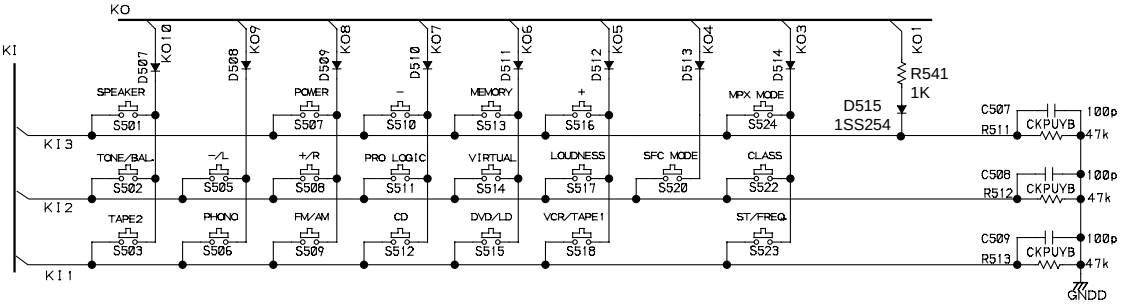

2.2 PRIMARY ASSY

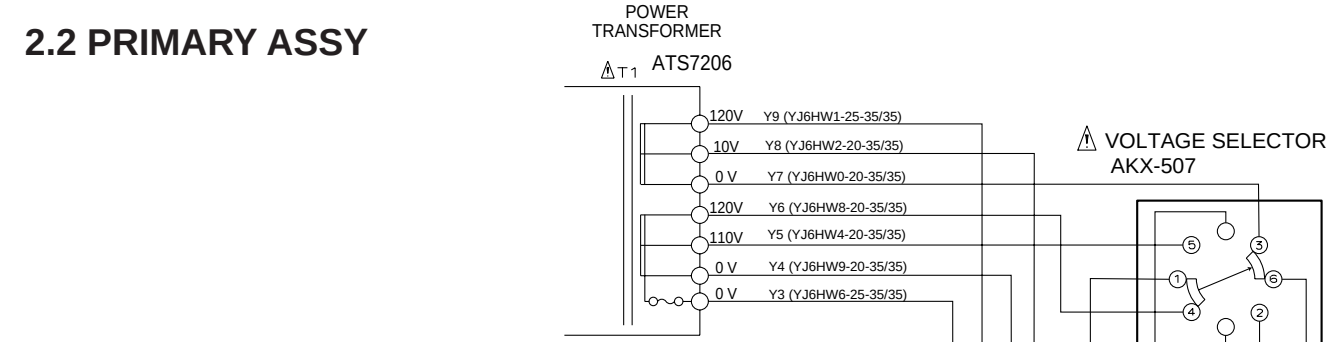

HF PRIMARY ASSY (AWX7073)

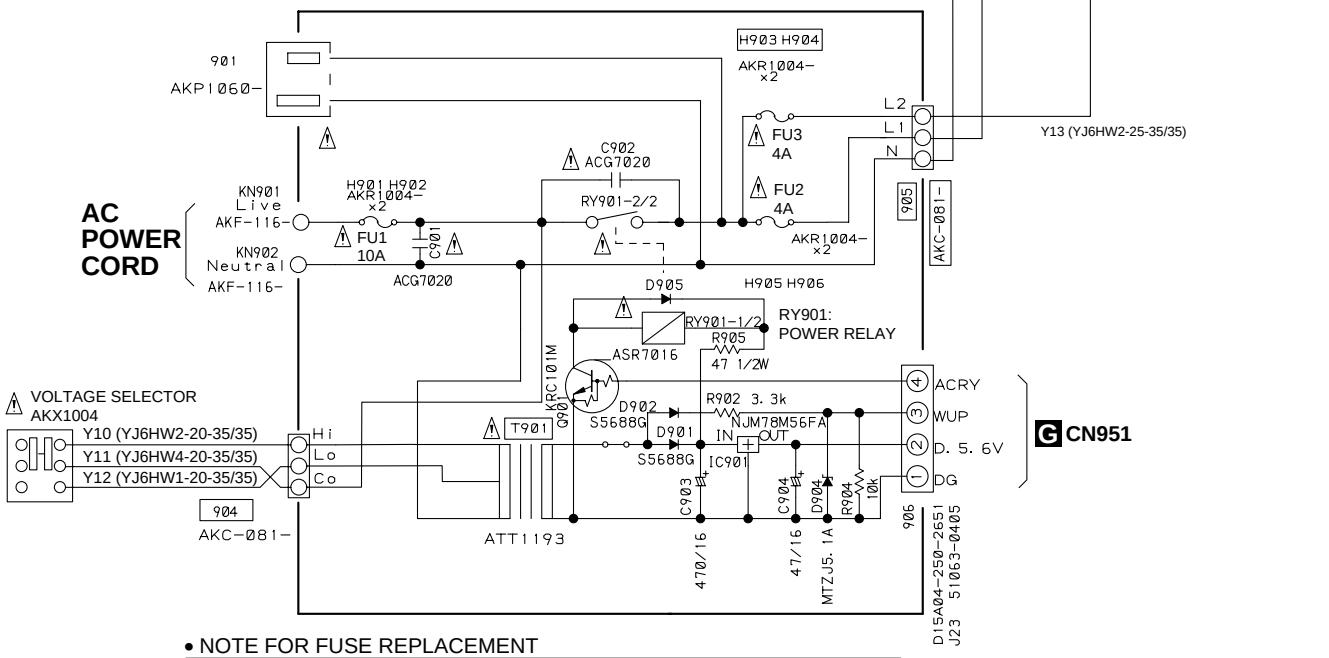

• NOTE FOR FUSE REPLACEMENT

CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE WITH SAME TYPE AND RATINGS ONLY.

PIONEER®
The Art of Entertainment

Service Manual

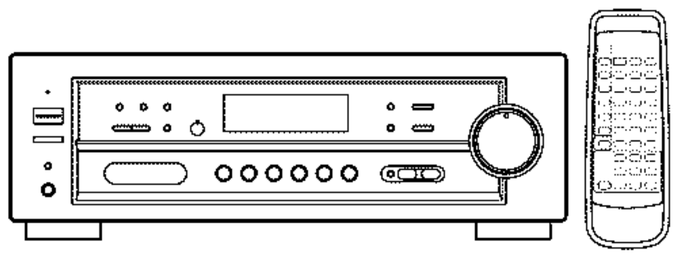

ORDER NO.
RRV1925

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D307

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	VSX-D307		
KUXJ	○	AC120V	
KUXJI	○	AC120V	
KCXJI	○	AC120V	

CONTENTS

1. SAFETY INFORMATION 2
2. EXPLODED VIEWS AND PARTS LIST 3
3. SCHEMATIC DIAGRAM 8
4. PCB CONNECTION DIAGRAM 24
5. PCB PARTS LIST 30
6. ADJUSTMENT 35
7. GENERAL INFORMATION 36
   7.1 PARTS 36
      7.1.1 IC 36
      7.1.2 DISPLAY 38
   7.2 DISASSEMBLY 39
   7.3 DIAGNOSIS 41
   7.4 BLOCK DIAGRAM 42
8. PANEL FACILITIES AND SPECIFICATIONS .. 44

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 501 Orchard Road, #10-00 Lane Crawford Place, Singapore 0923

© PIONEER ELECTRONIC CORPORATION 1998

T - IZM MAR. 1998 Printed in Belgium

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).
When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

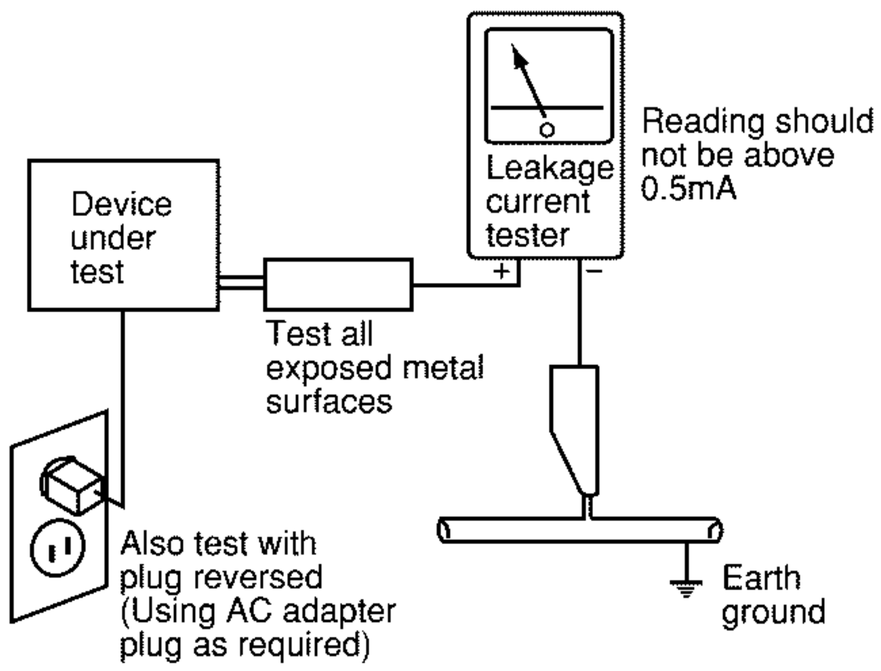
Device under test
Leakage current tester
Reading should not be above 0.5mA
+
–
Test all exposed metal surfaces
Also test with plug reversed (Using AC adapter plug as required)
Earth ground

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.
The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on the product are used for disassembly.*

2.1 PACKING

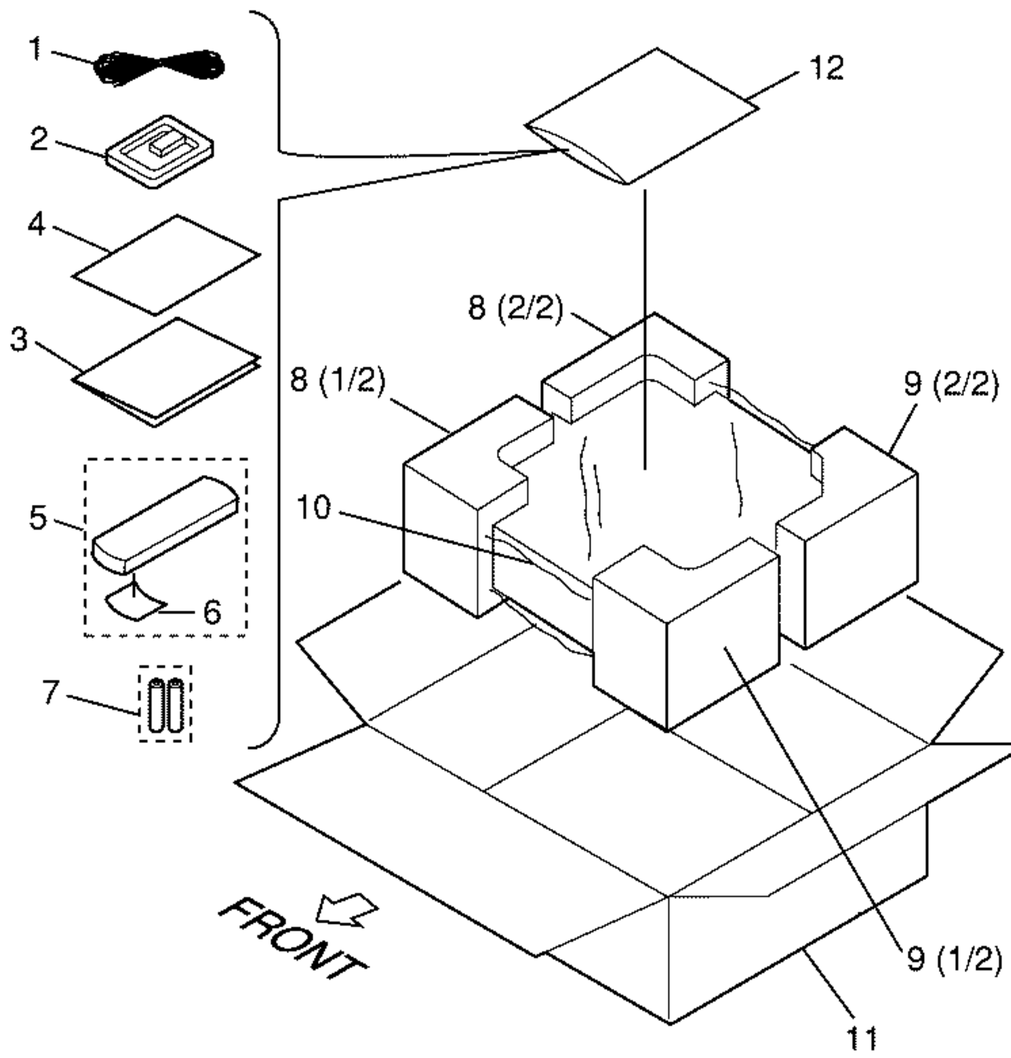

(1) PACKING PARTS LIST

Mark	No.	Description	Part No.
	1	FM Antenna	ADH7004
	2	AM Loop Antenna	ATB7009
	3	Operating Instructions	See Contrast table (2)
NSP	4	Warranty Card	See Contrast table (2)
	5	Remote Control Unit (CU-VSX124)	AXD7161
	6	Battery Cover	RZN1156
NSP	7	Dry Cell Battery (R6P, AA)	VEM-013
	8	Left Pad	AHA7203
	9	Right Pad	AHA7204
	10	Packing Sheet	AHG1218
	11	Packing Case	See Contrast table (2)
	12	Polyethylene Bag (0.03×230×340)	Z21-038

(2) CONTRAST TABLE

VSX-D307/KUXJ, KUXJI and KCXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.			Remarks
			VSX-D307/KUXJ	VSX-D307/KUXJI	VSX-D307/KCXJI	
	3	Operating Instructions (English)	ARB7136	ARB7136	Not used	
	3	Operating Instructions (English/French)	Not used	Not used	ARE7159	
NSP	4	Warranty Card	ARY1051	ARY1051	ARY1075	
	11	Packing Case	AHD7595	AHD7557	AHD7582	

■ Accessories

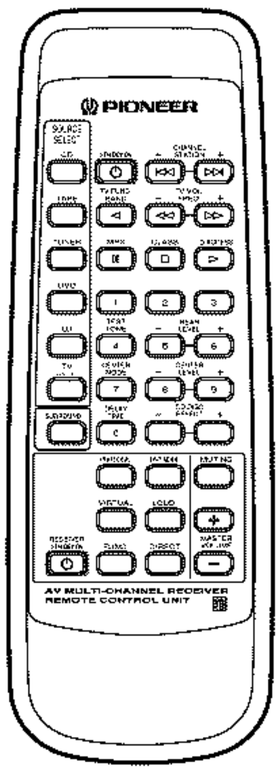

Remote Control Unit
(CU-VSX124 : AXD7161)

FM Antenna : ADH7004

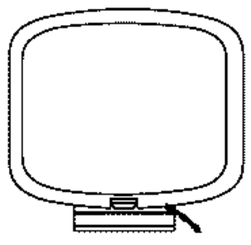

AM Loop Antenna : ATB7009

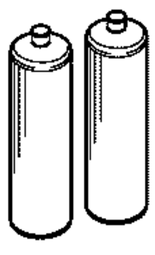

Dry Cell Battery : VEM-013
(size "AA" IEC R6P) × 2

2.2 EXTERIOR SECTION

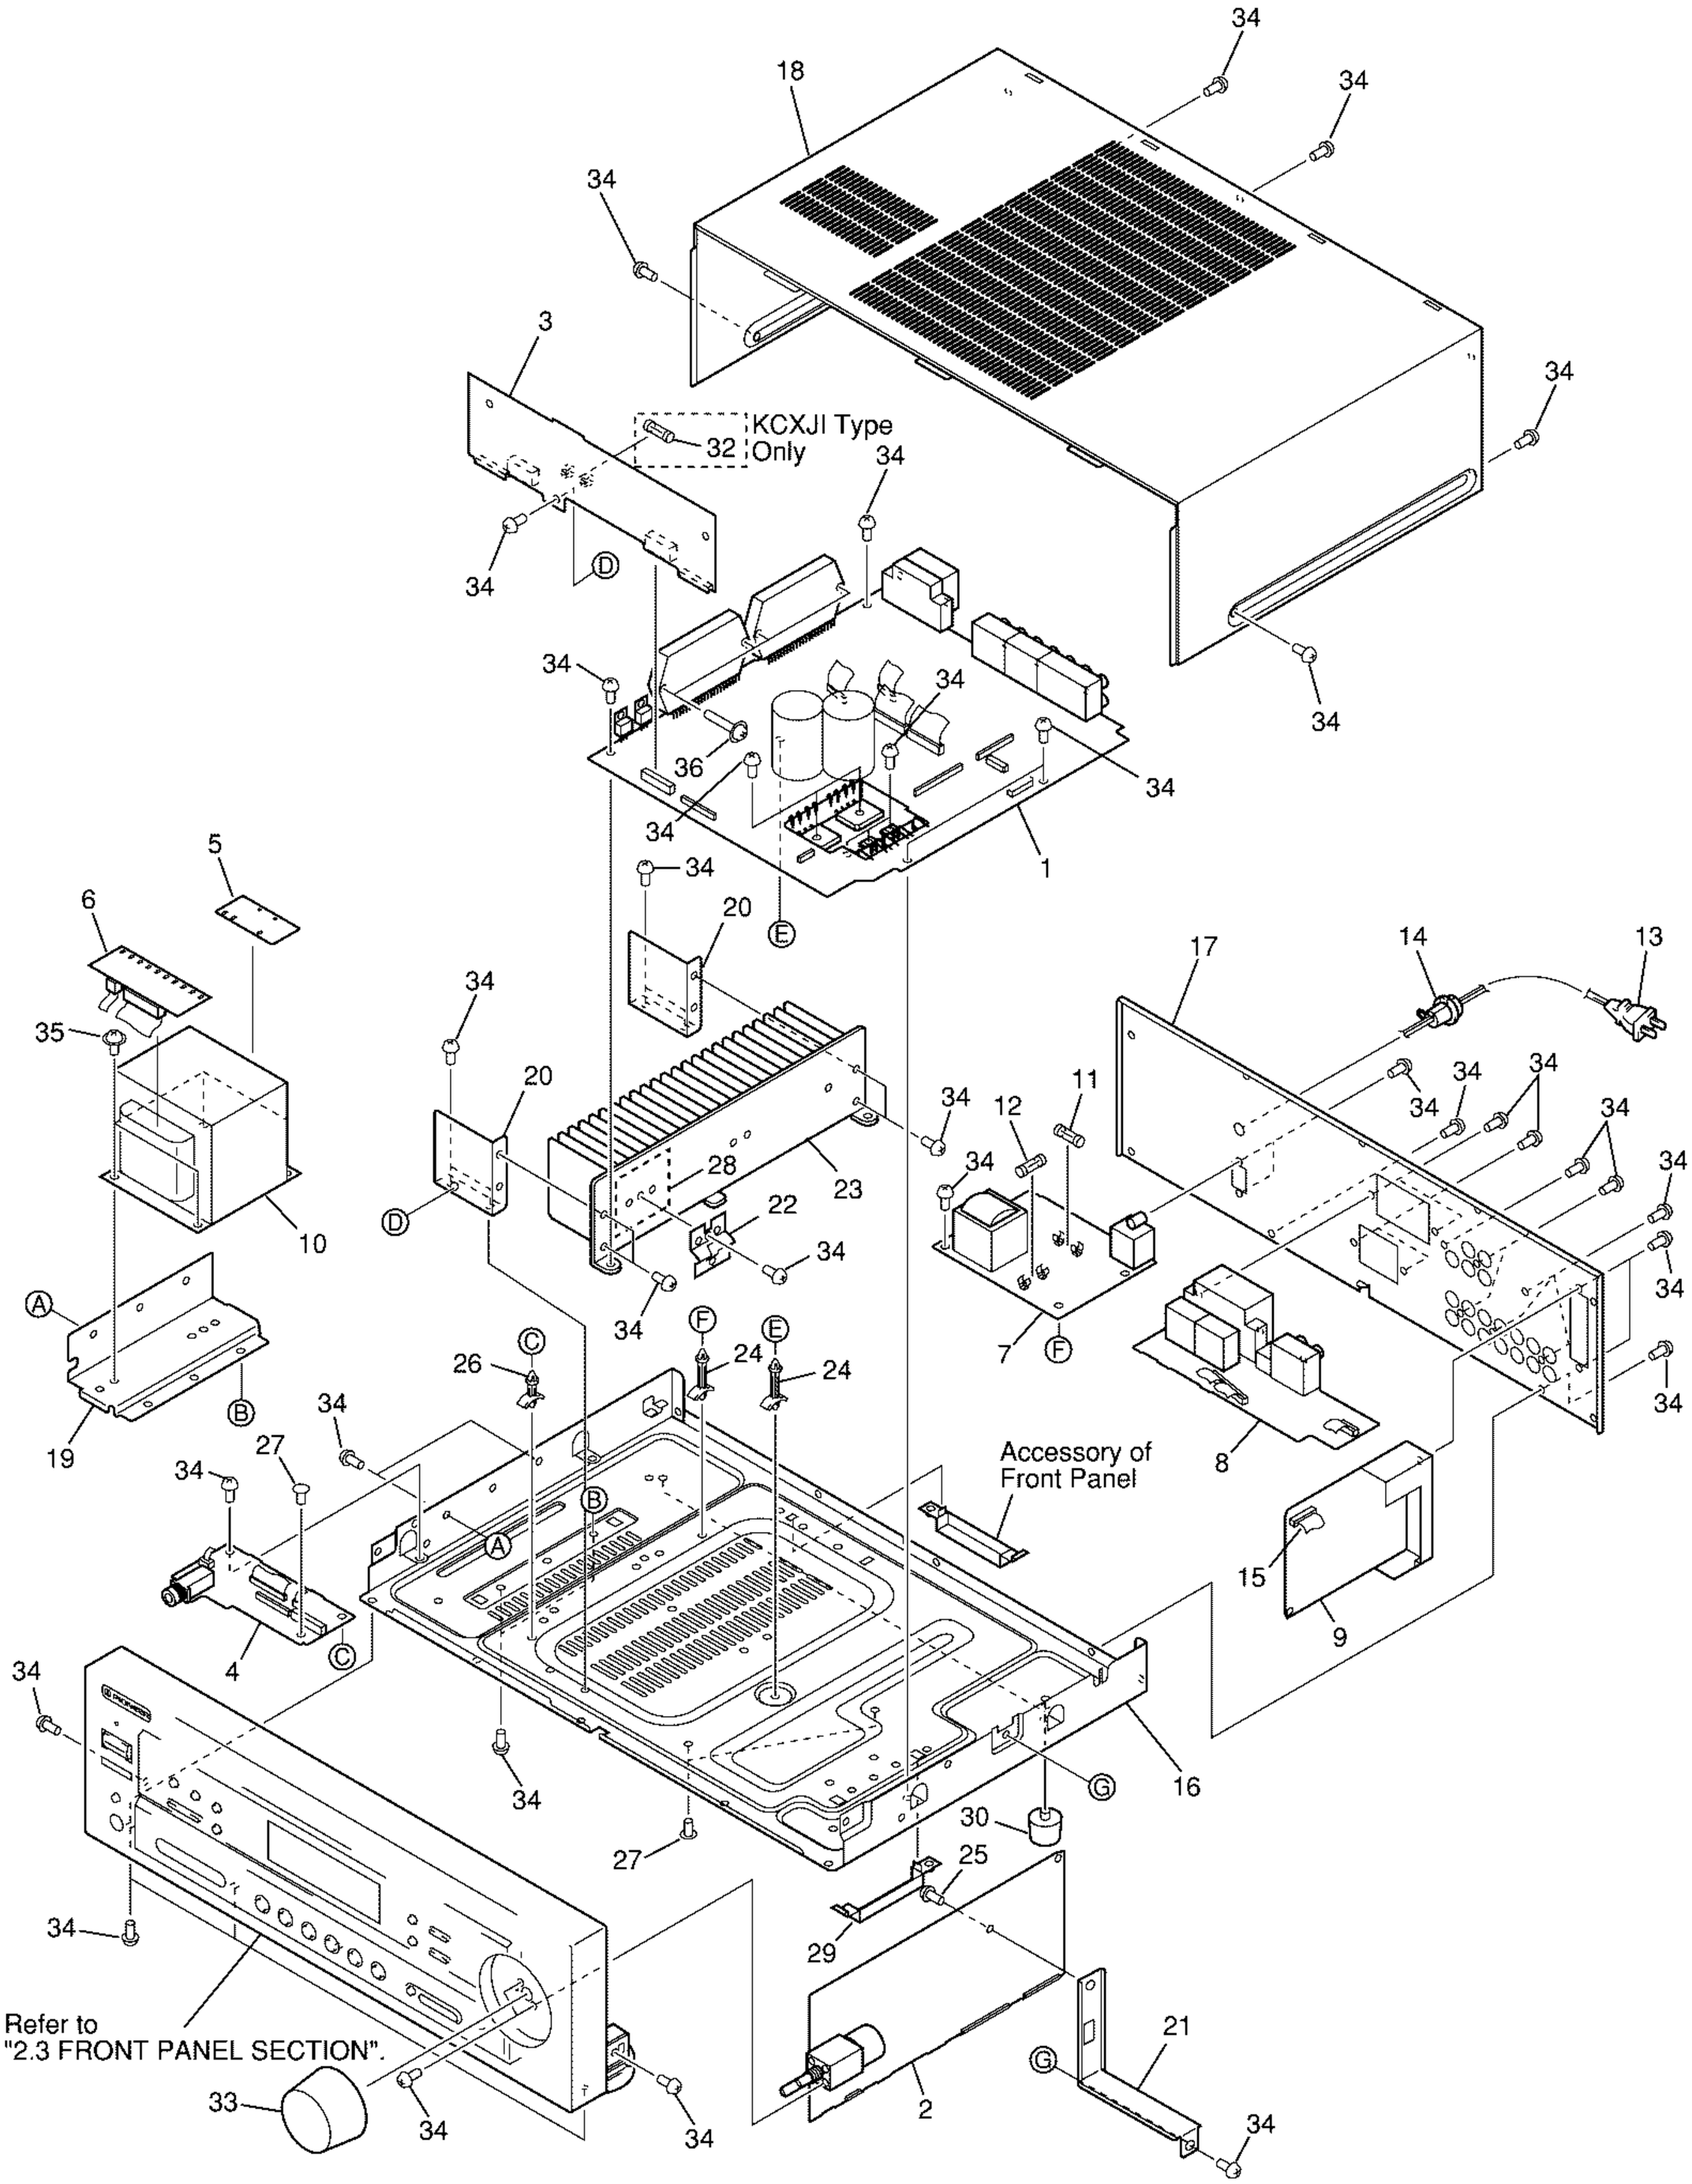

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MOTHER Assy	See Contrast table (2)
	2	VOLUME DSP Assy	AWX7064
NSP	3	CONNECTION Assy	See Contrast table (2)
	4	HEADPHONE Assy	AWX7066
NSP	5	TRANS 1 Assy	AWX7070
NSP	6	TRANS 2 Assy	AWX7071
	7	PRIMARY Assy	AWX7067
	8	FRONT SPEAKER Assy	AWX7068
	9	FM/AM TUNER Unit	AXX7046
⚠	10	Power Transformer (T1 : AC120V)	ATS7205
⚠	11	Fuse (FU2 : 8A)	REK1086
⚠	12	Fuse (FU1 : 10A)	REK1087
⚠	13	AC Power Cord	PDG1057
	14	Cord Stopper	CM-22C
	15	Flexible Cable 13P (J32) (MOTHER CN110-FM/AM TUNER Unit)	ADD7081
NSP	16	Under Base	ANA7067
	17	Rear Panel	See Contrast table (2)
	18	Bonnet Case	AZN7710
	19	T Angle	ANG7178
	20	H Angle	ANG7179
	21	PCB Angle	ANG7180
	22	FET Angle	ANG7186
NSP	23	Heat Sink	ANH7075
	24	PCB Support	AEC7006
	25	Push Rivet	AEC7025
	26	PCB Support	AEC7132
	27	Card Spacer	AEC7133
	28	Mica Sheet	AEE7026
	29	Screw Cover	AMR7199
	30	Foot Assy	REC1263
	31	• • • • •	
⚠	32	Fuse (FU91 : 10A)	See Contrast table (2)
	33	Round Knob	AAB7082
	34	Screw	BBZ30P080FZK
	35	Screw	ABA7044
	36	Screw	ABA7043

(2) CONTRAST TABLE

VSX-D307/KUXJ, KUXJI and KCXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.			Remarks
			VSX-D307/KUXJ	VSX-D307/KUXJI	VSX-D307/KCXJI	
	1	MOTHER Assy	AWX7058	AWX7058	AWX7177	
NSP	3	CONNECTION Assy	AWX7060	AWX7060	AWX7176	
	17	Rear Panel	ANC7663	ANC7627	ANC7691	
⚠	32	Fuse (FU91 : 10A)	Not used	Not used	REK1087	

2.3 FRONT PANEL SECTION

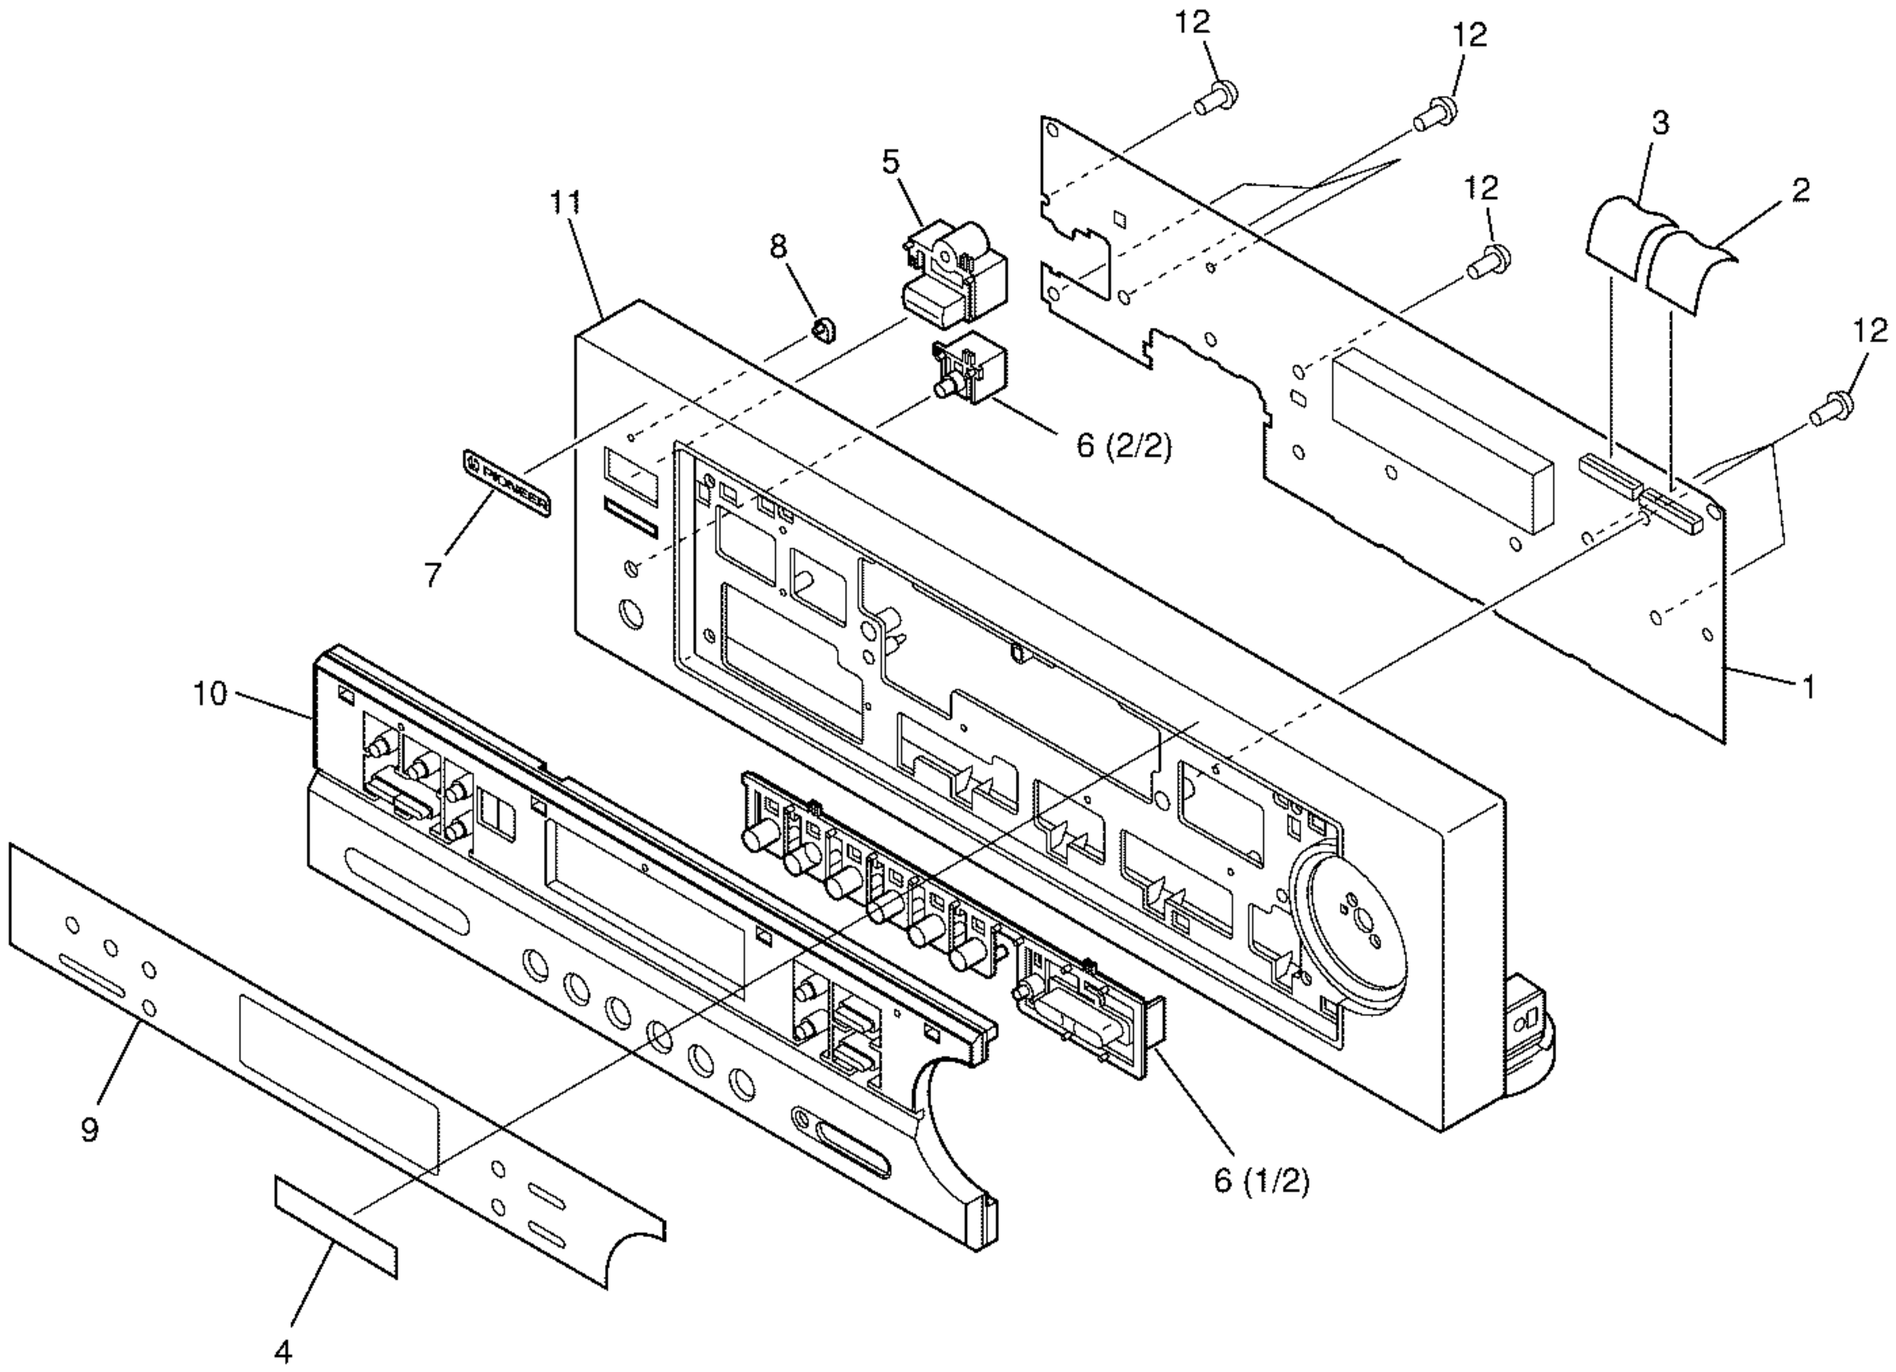

(1) FRONT PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	FRONT Assy	AWX7062
	2	Flexible Cable 20P (J31) (MOTHER CN109-FRONT CN501)	ADD7083
	3	Flexible Cable 20P (J35) (MOTHER CN111-FRONT CN502)	ADD7083
NSP	4	Getter	AAX7631
	5	Power Button	AAD7440
	6	Function Button	AAD7441
	7	PIONNER Badge	PAM1755
	8	LED Lens	PNW2019
	9	Sheet	AAK7539
	10	Sub Panel	AAP7040
	11	Front Panel	AMB7494
	12	Screw	BPZ30P080FMC

3. SCHEMATIC DIAGRAM

3.1 OVERALL CONNECTION DIAGRAM

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

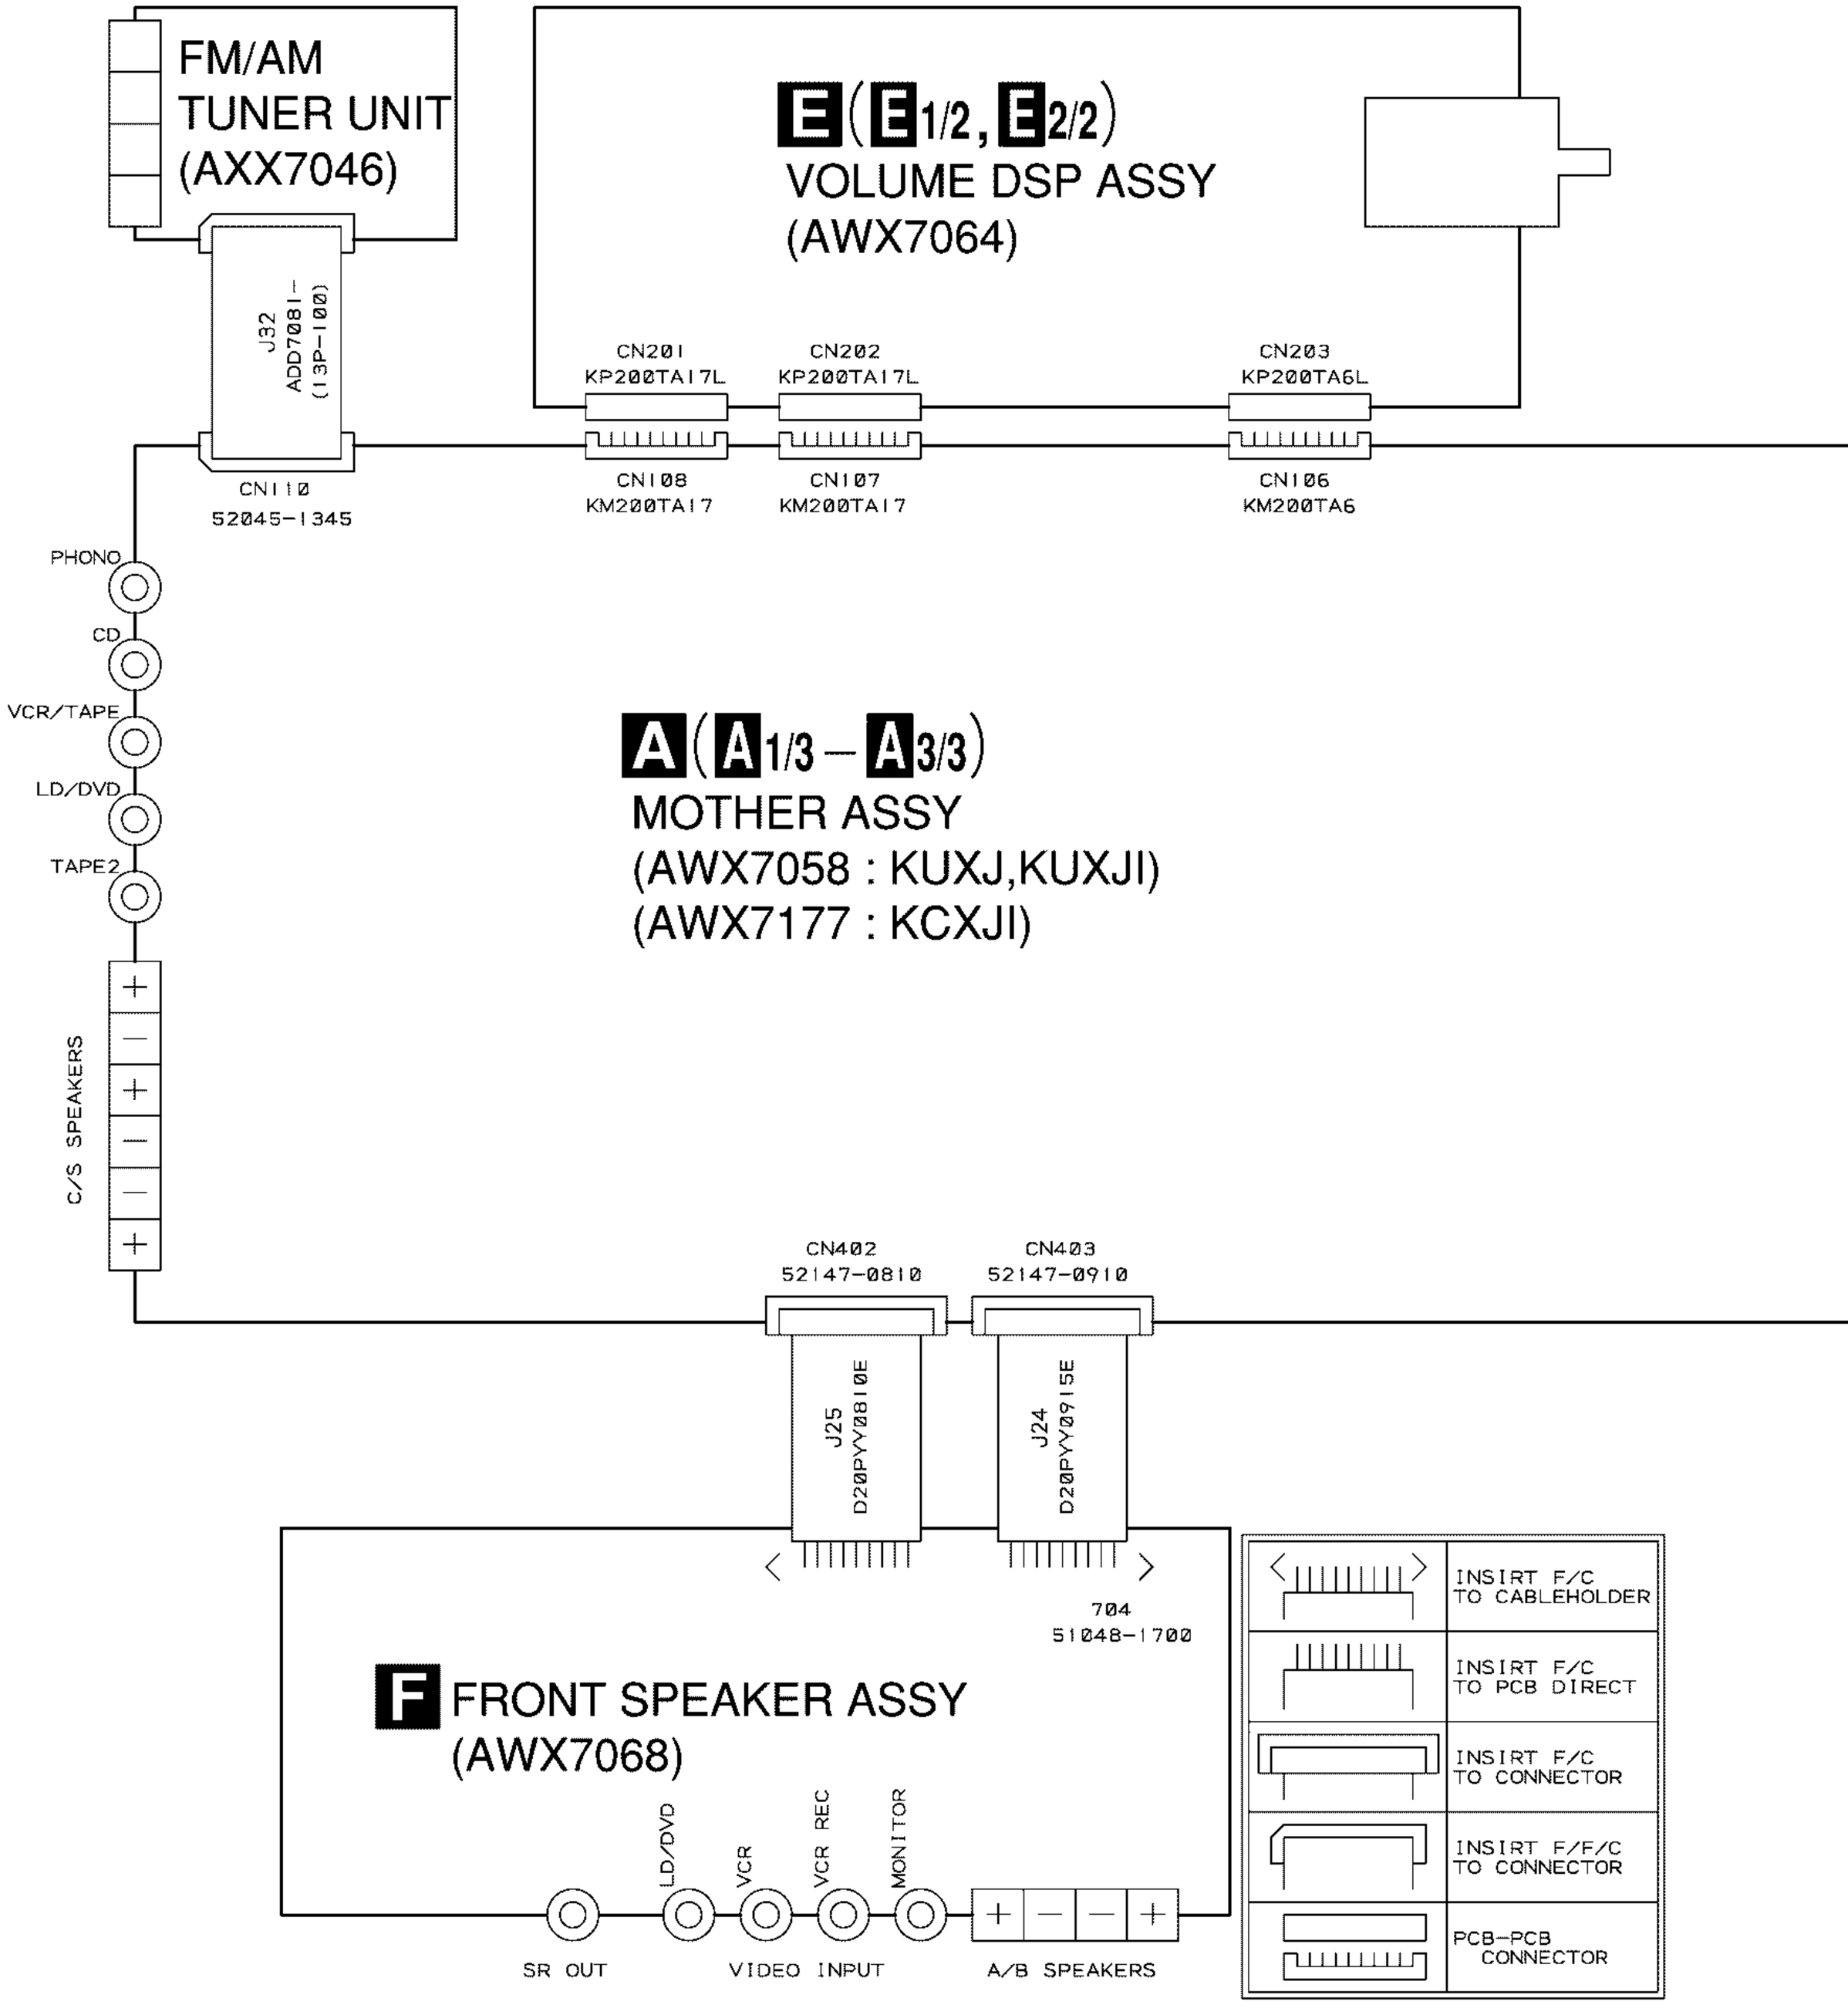

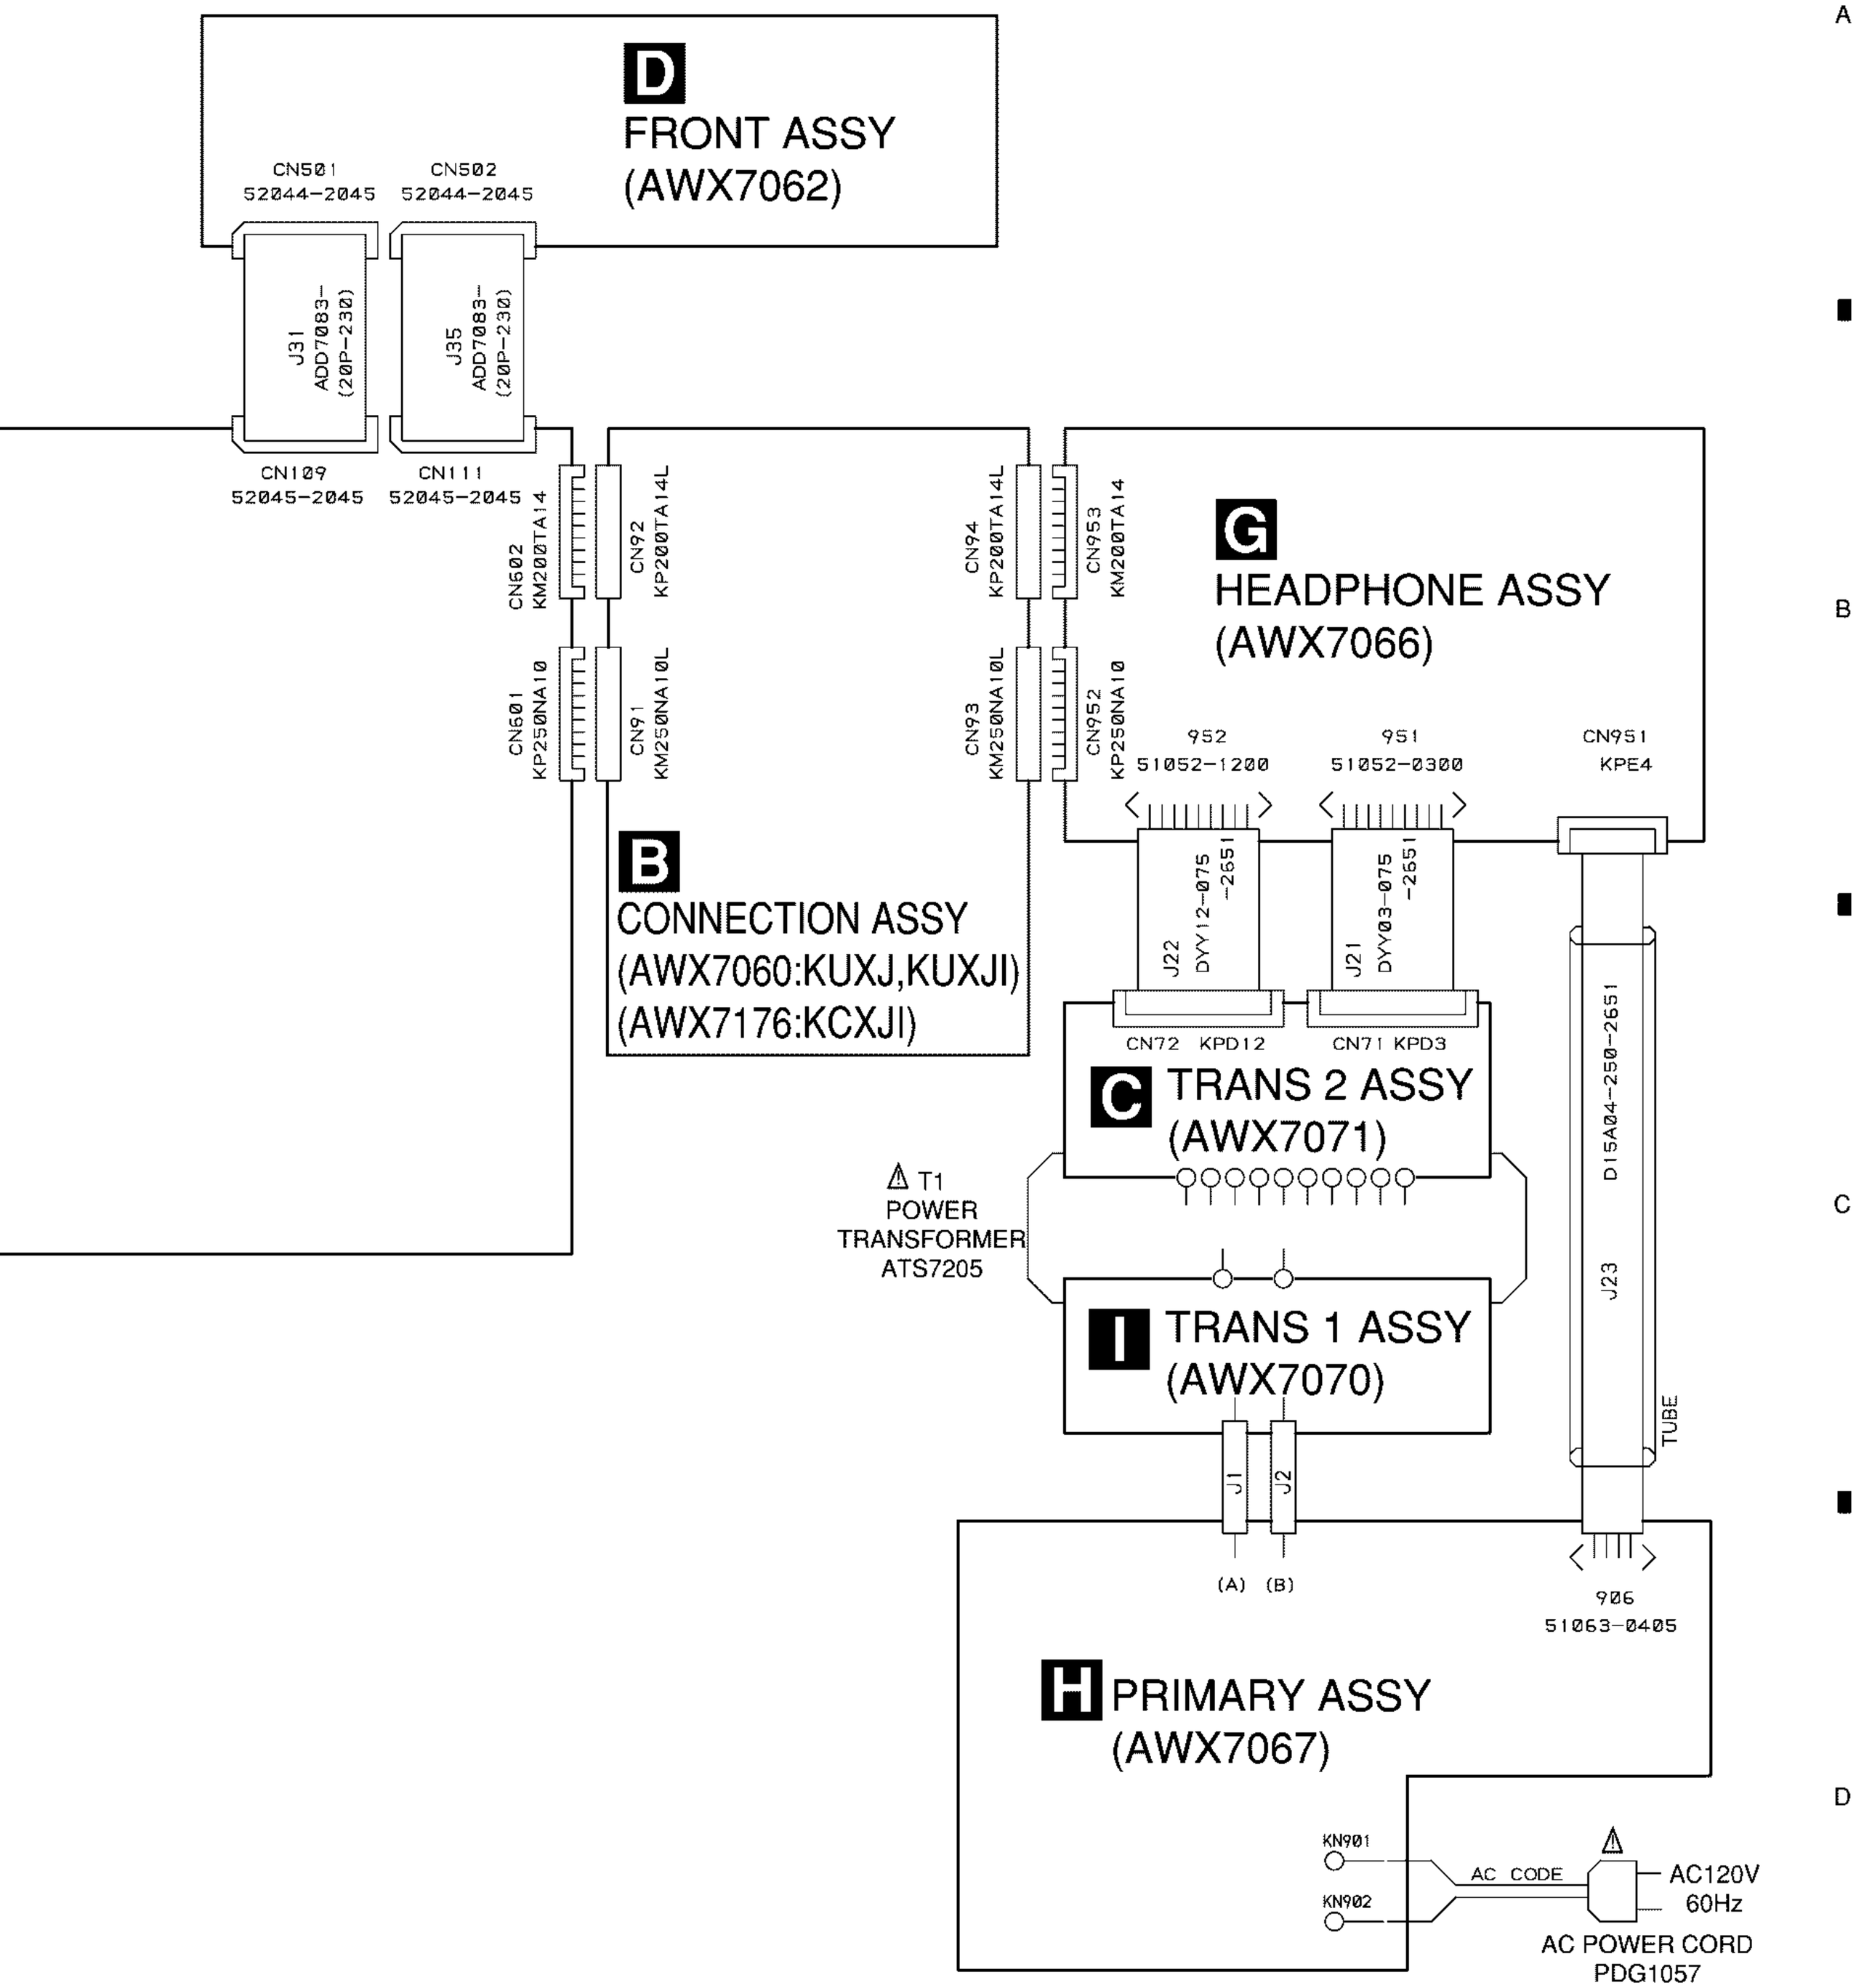
D
FRONT ASSY
(AWX7062)
CN501
52044-2045
CN502
52044-2045
J31
ADD7083-
(20P-230)
J35
ADD7083-
(20P-230)
CN109
52045-2045
CN111
52045-2045
CN602
KM200TA14
CN92
KP200TA14L
CN601
KP250NA10
CN91
KM250NA10L
CN94
KP200TA14L
CN953
KM200TA14
CN93
KM250NA10L
CN952
KP250NA10
G
HEADPHONE ASSY
(AWX7066)
952
51052-1200
951
51052-0300
CN951
KPE4
B
CONNECTION ASSY
(AWX7060:KUXJ,KUXJI)
(AWX7176:KCXJI)
J22
DYY12-075
-2651
J21
DYY03-075
-2651
CN72 KPD12
CN71 KPD3
C
TRANS 2 ASSY
(AWX7071)
⚠ T1
POWER
TRANSFORMER
ATS7205
D15A04-250-2651
J23
TUBE
I
TRANS 1 ASSY
(AWX7070)
J1
J2
(A) (B)
906
51063-0405
H
PRIMARY ASSY
(AWX7067)
KN901
KN902
AC CODE
AC120V
60Hz
AC POWER CORD
PDG1057

3.2 MOTHER ASSY (1/3)

A 1/3 MOTHER ASSY
(AWX7058:KUXJ,KUXJI)
(AWX7177:KCXJI)

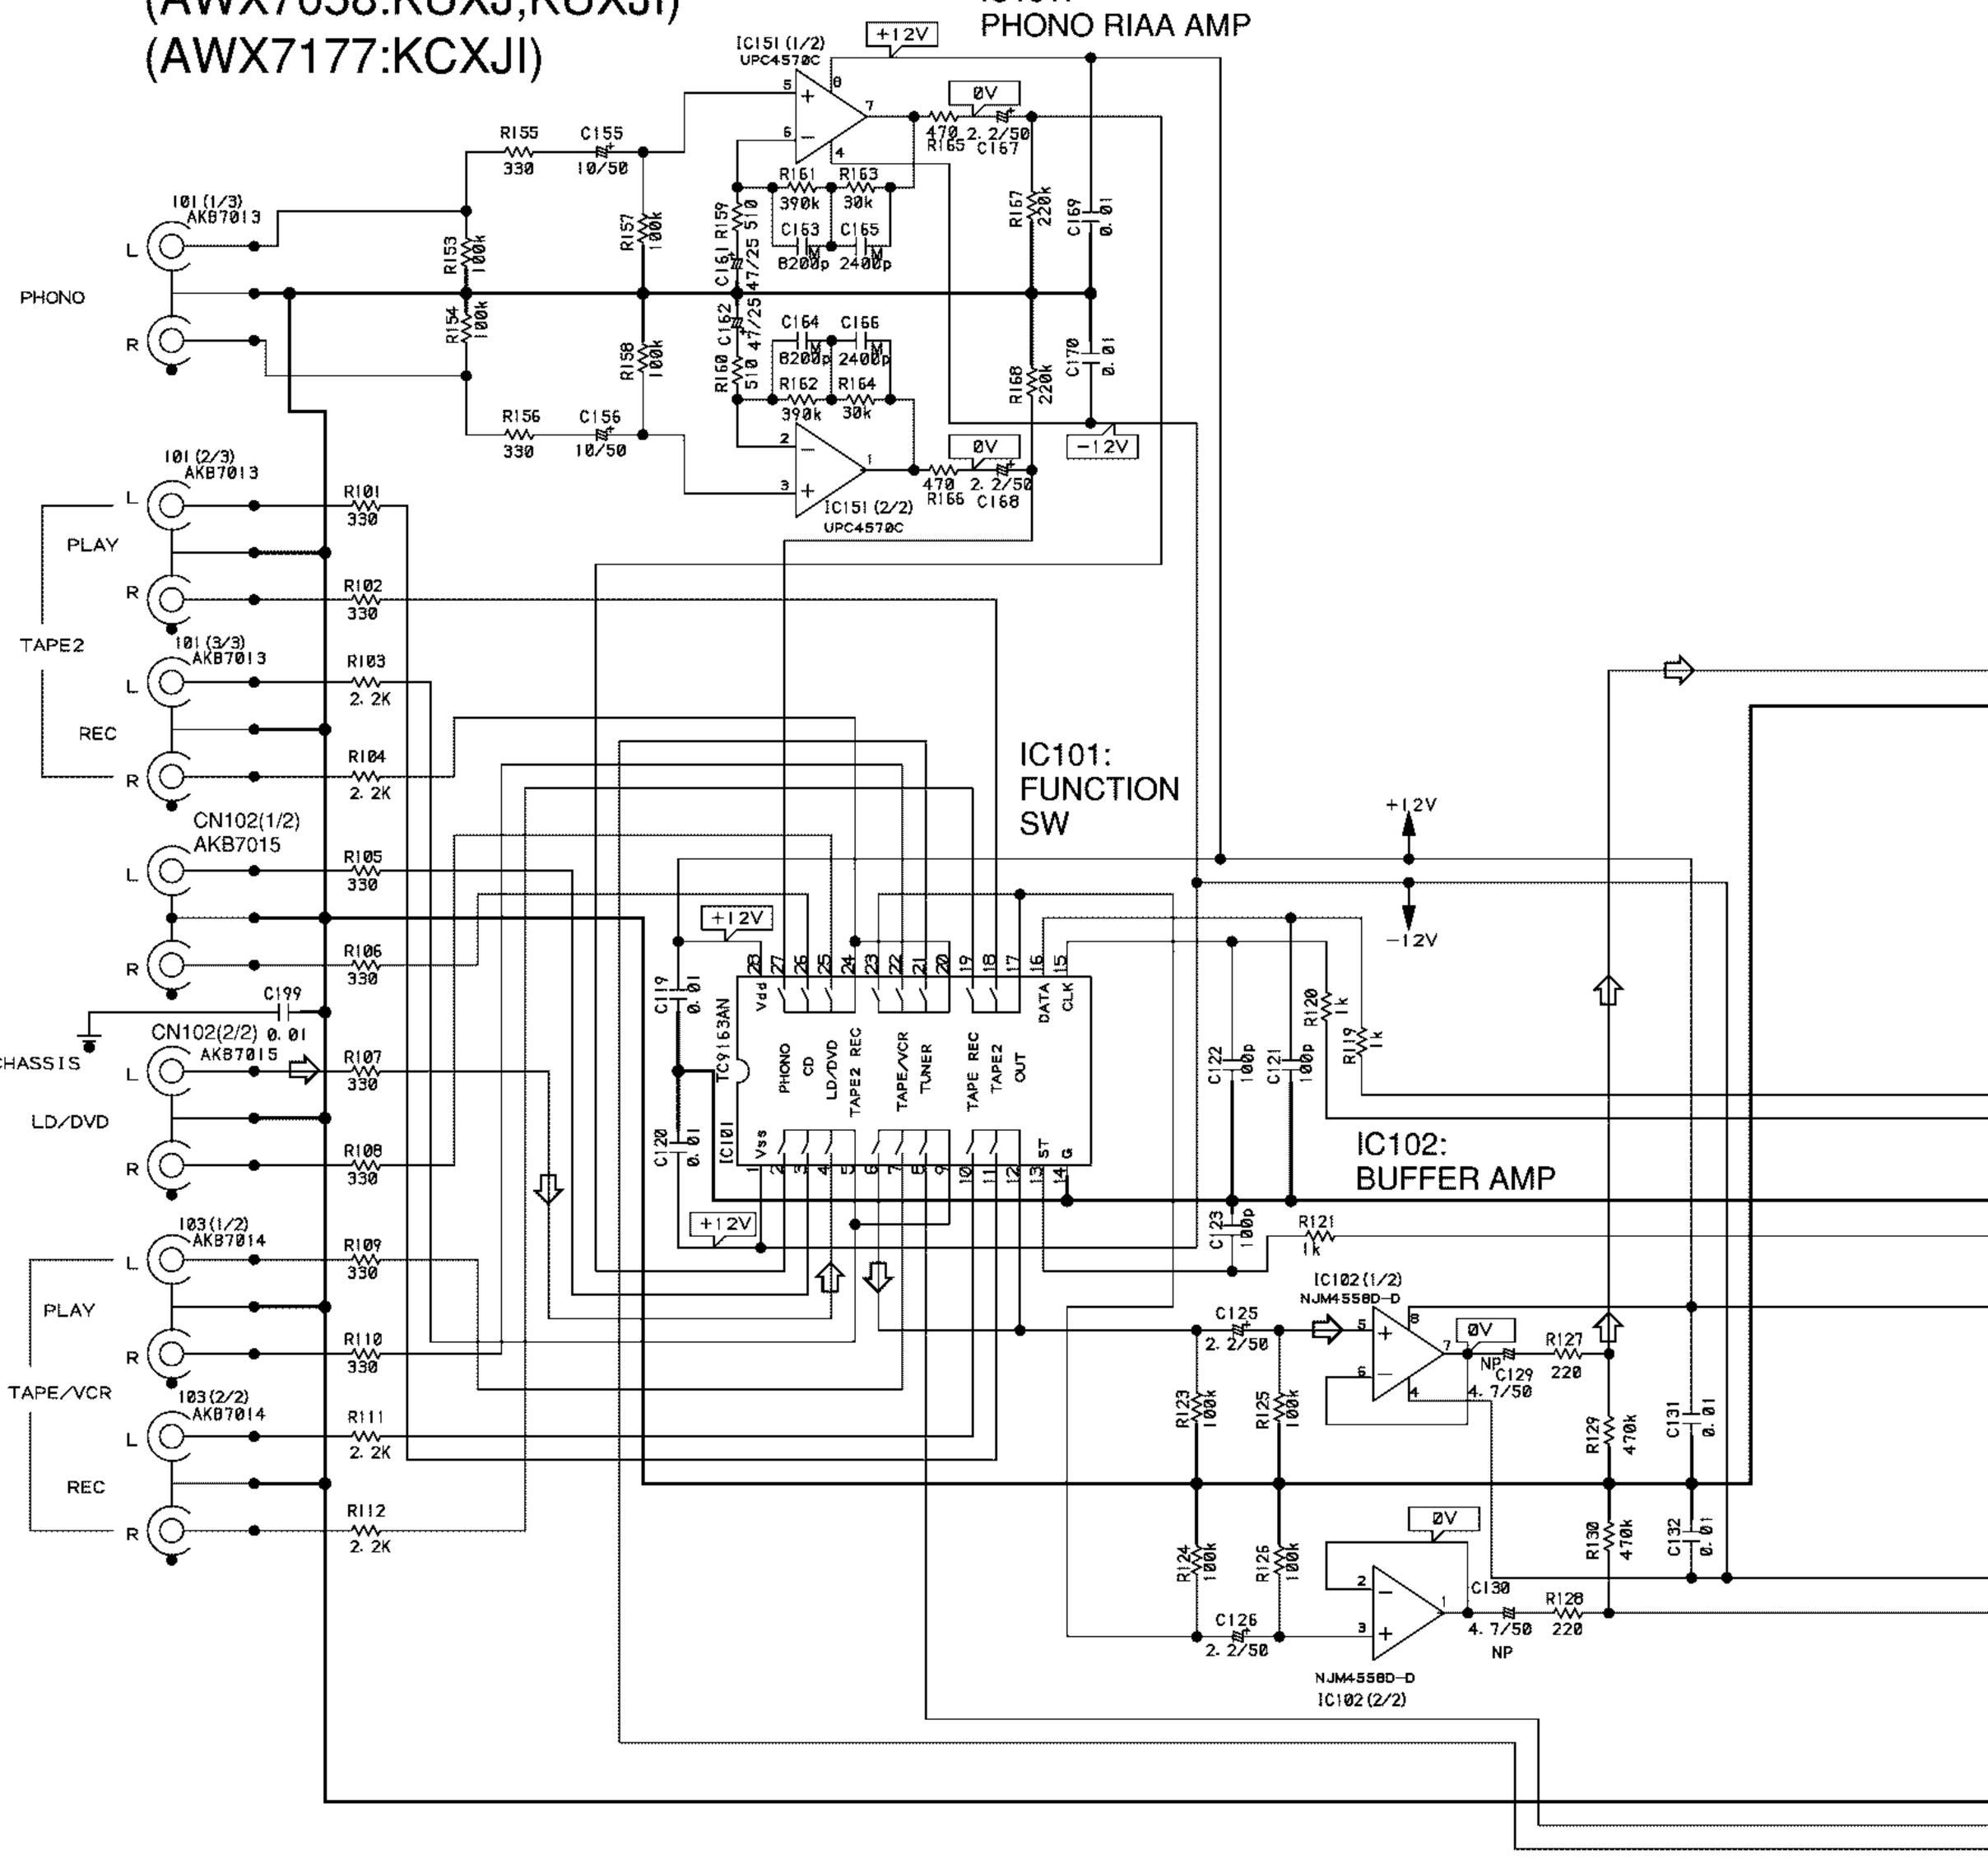

NOTES: NO INDICATED PARTS IS....

RESISTOR: PDI/4PU***J-T
CEMICAL CAPASITOR: CEAT***M**-T
CERAMIC CAPASITOR: CCC... or CKC...
DIODE: 1SS254-T

⇨ : AUDIO SIGNAL ROUTE
(C) ⇨ : AUDIO SIGNAL ROUTE (CENTER)
(S) ⇨ : AUDIO SIGNAL ROUTE (SURROUND)

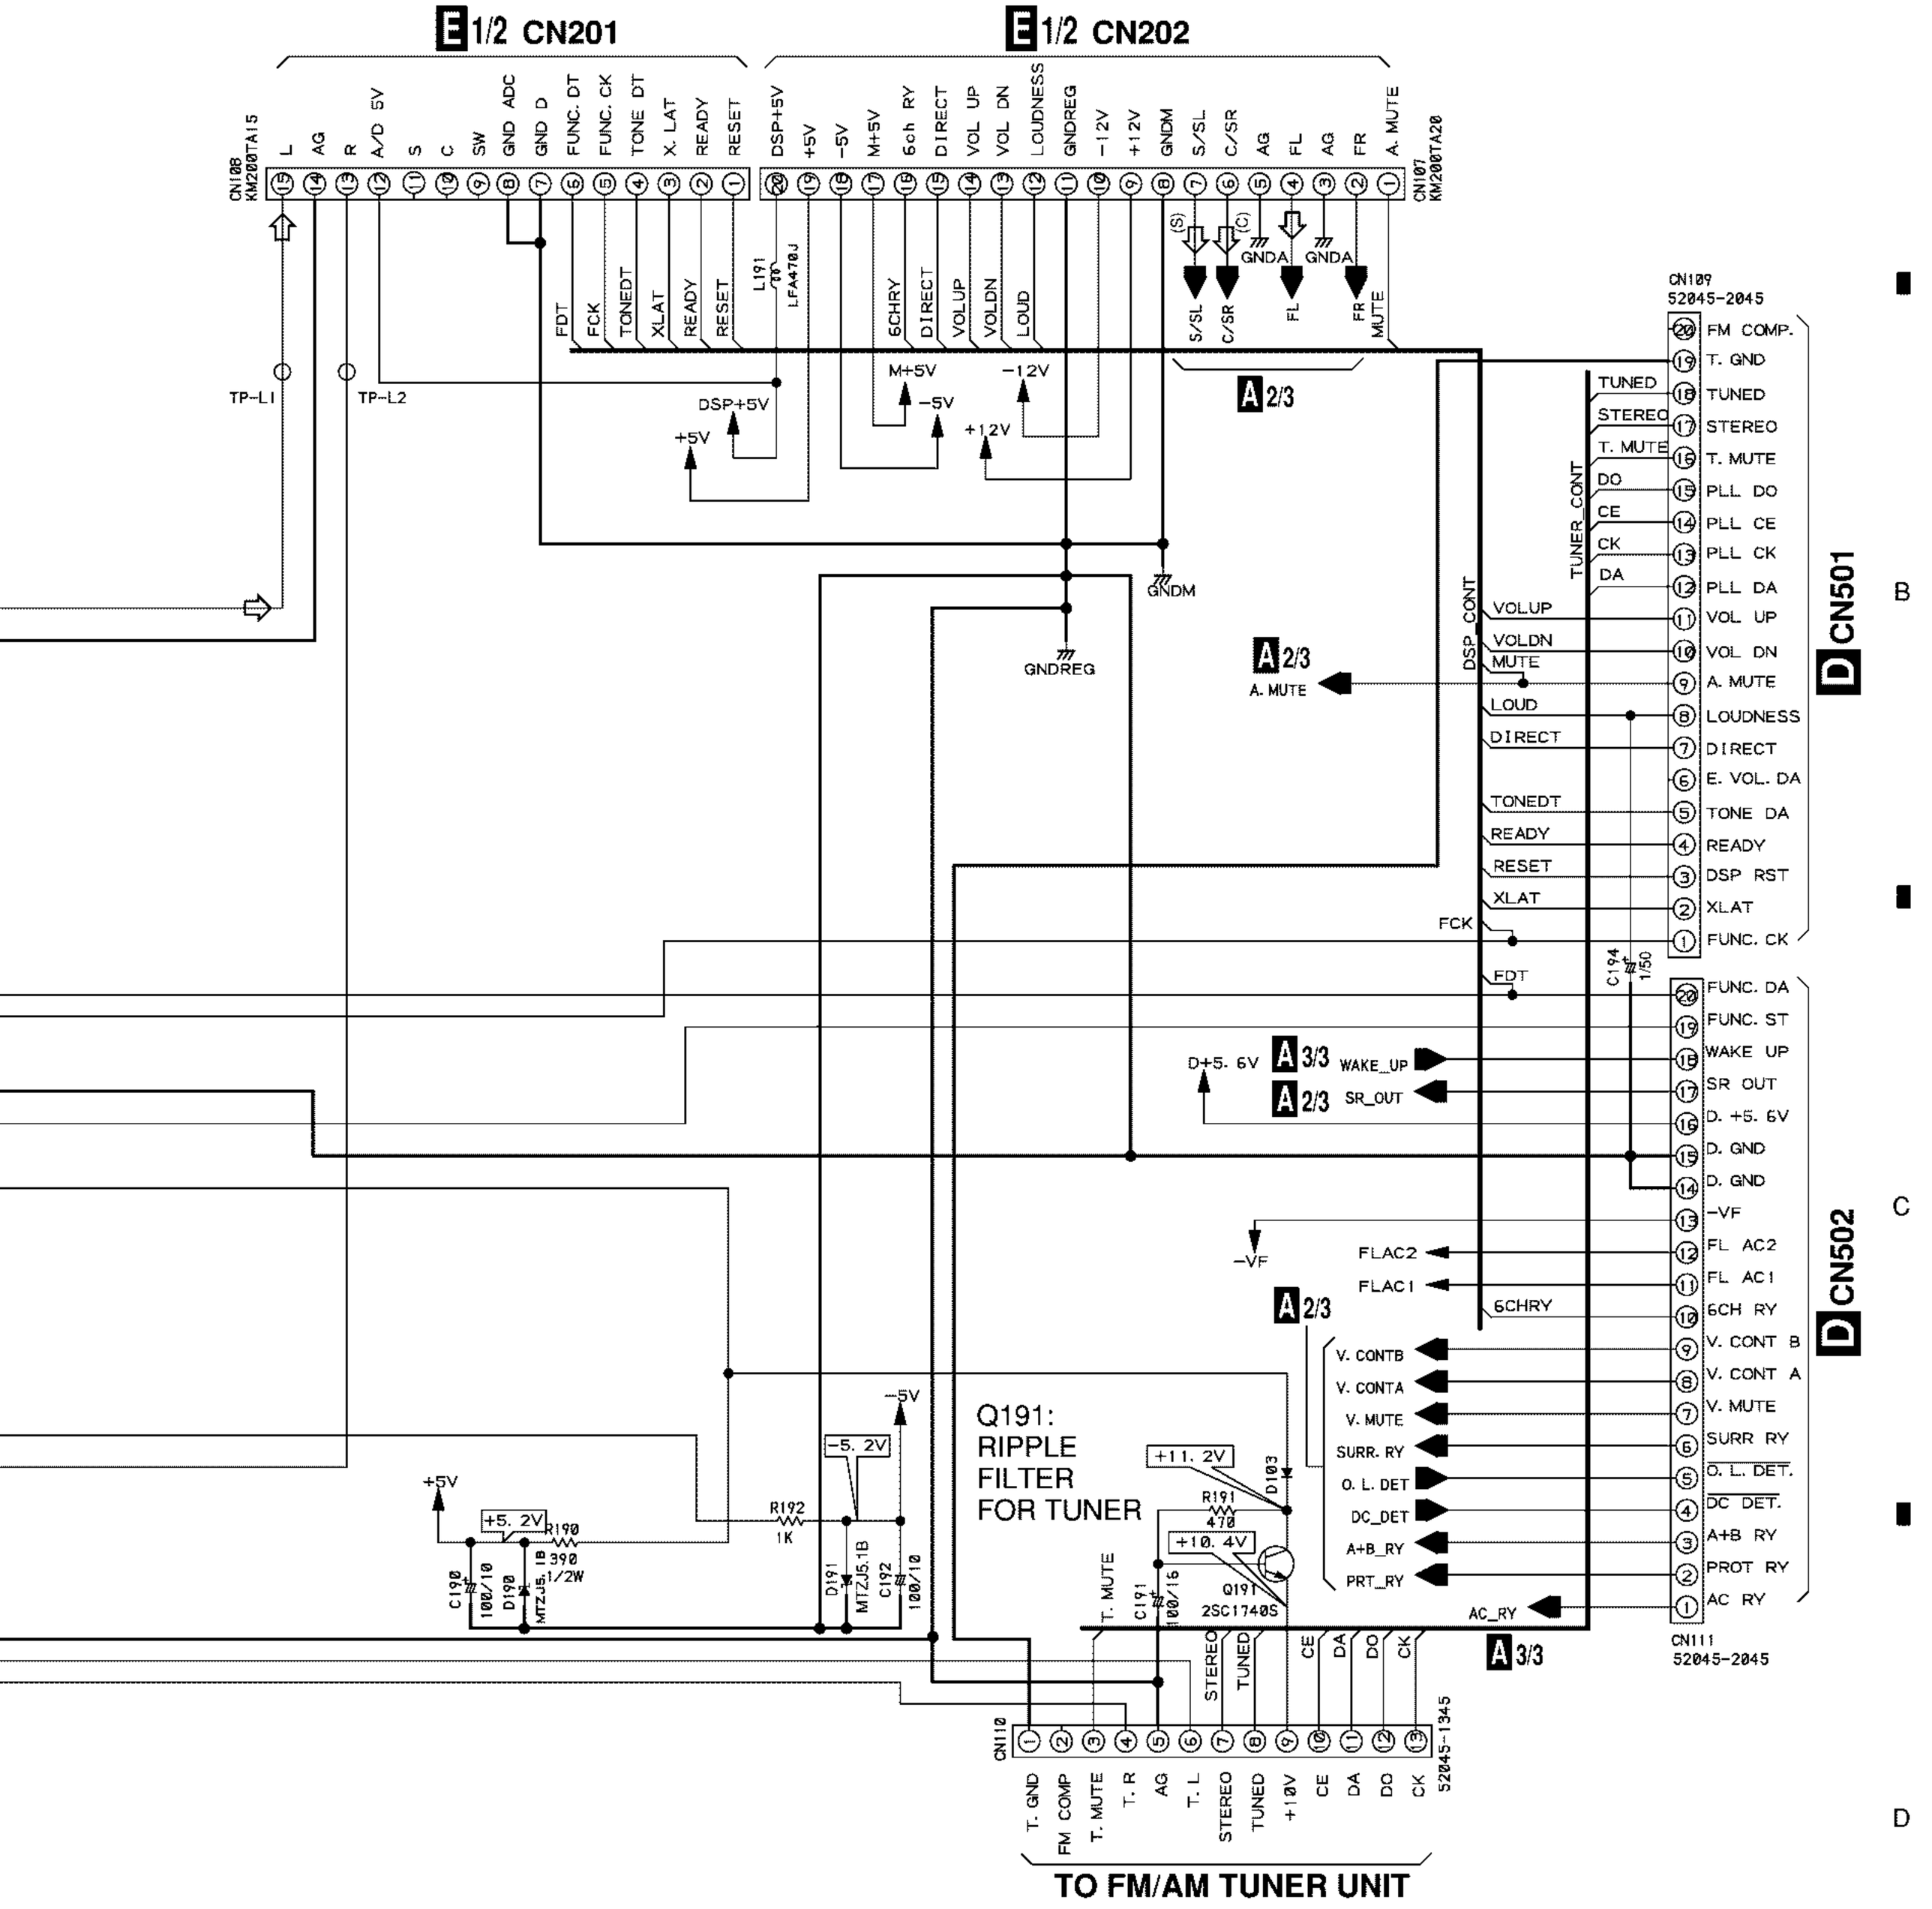
E 1/2 CN201
E 1/2 CN202
CN108 KM200TA15
CN107 KM200TA20
L
AG
R
A/D 5V
S
C
SW
GND ADC
GND D
FUNC. DT
FUNC. CK
TONE DT
X. LAT
READY
RESET
DSP+5V
+5V
-5V
M+5V
6ch RY
DIRECT
VOL UP
VOL DN
LOUDNESS
GNDREG
-12V
+12V
GNDM
S/SL
C/SR
AG
FL
AG
FR
A. MUTE
L191 LFA470J
FDT
FCK
TONEDT
XLAT
READY
RESET
6CHRY
DIRECT
VOLUP
VOLDN
LOUD
MUTE
(S)
(C)
GNDA
GNDA
TP-L1
TP-L2
A 2/3
CN109 52045-2045
FM COMP.
T. GND
TUNED
STEREO
T. MUTE
PLL DO
PLL CE
PLL CK
PLL DA
VOL UP
VOL DN
A. MUTE
LOUDNESS
DIRECT
E. VOL. DA
TONE DA
READY
DSP RST
XLAT
FUNC. CK
TUNER_CONT
DSP_CONT
D CN501
C194 1/50
FUNC. DA
FUNC. ST
WAKE UP
SR OUT
D. +5. 6V
D. GND
D. GND
-VF
FL AC2
FL AC1
6CH RY
V. CONT B
V. CONT A
V. MUTE
SURR RY
O. L. DET.
DC DET.
A+B RY
PROT RY
AC RY
D CN502
D+5. 6V
A 3/3
WAKE_UP
SR_OUT
FLAC2
FLAC1
V. CONTB
V. CONTA
V. MUTE
SURR. RY
O. L. DET
DC_DET
A+B_RY
PRT_RY
AC_RY
CN111 52045-2045
Q191: RIPPLE FILTER FOR TUNER
+11. 2V
D103
R191 470
+10. 4V
Q191 2SC1740S
T. MUTE
C191 100/16
+5. 2V
R190 390 1/2W
C190 100/10
D190 MTZJ5. 1B
R192 1K
-5. 2V
D191 MTZJ5. 1B
C192 100/10
CN110 52045-1345
T. GND
FM COMP
T. MUTE
T. R
AG
T. L
STEREO
TUNED
+10V
CE
DA
DO
CK
TO FM/AM TUNER UNIT

3.3 MOTHER ASSY (2/3)

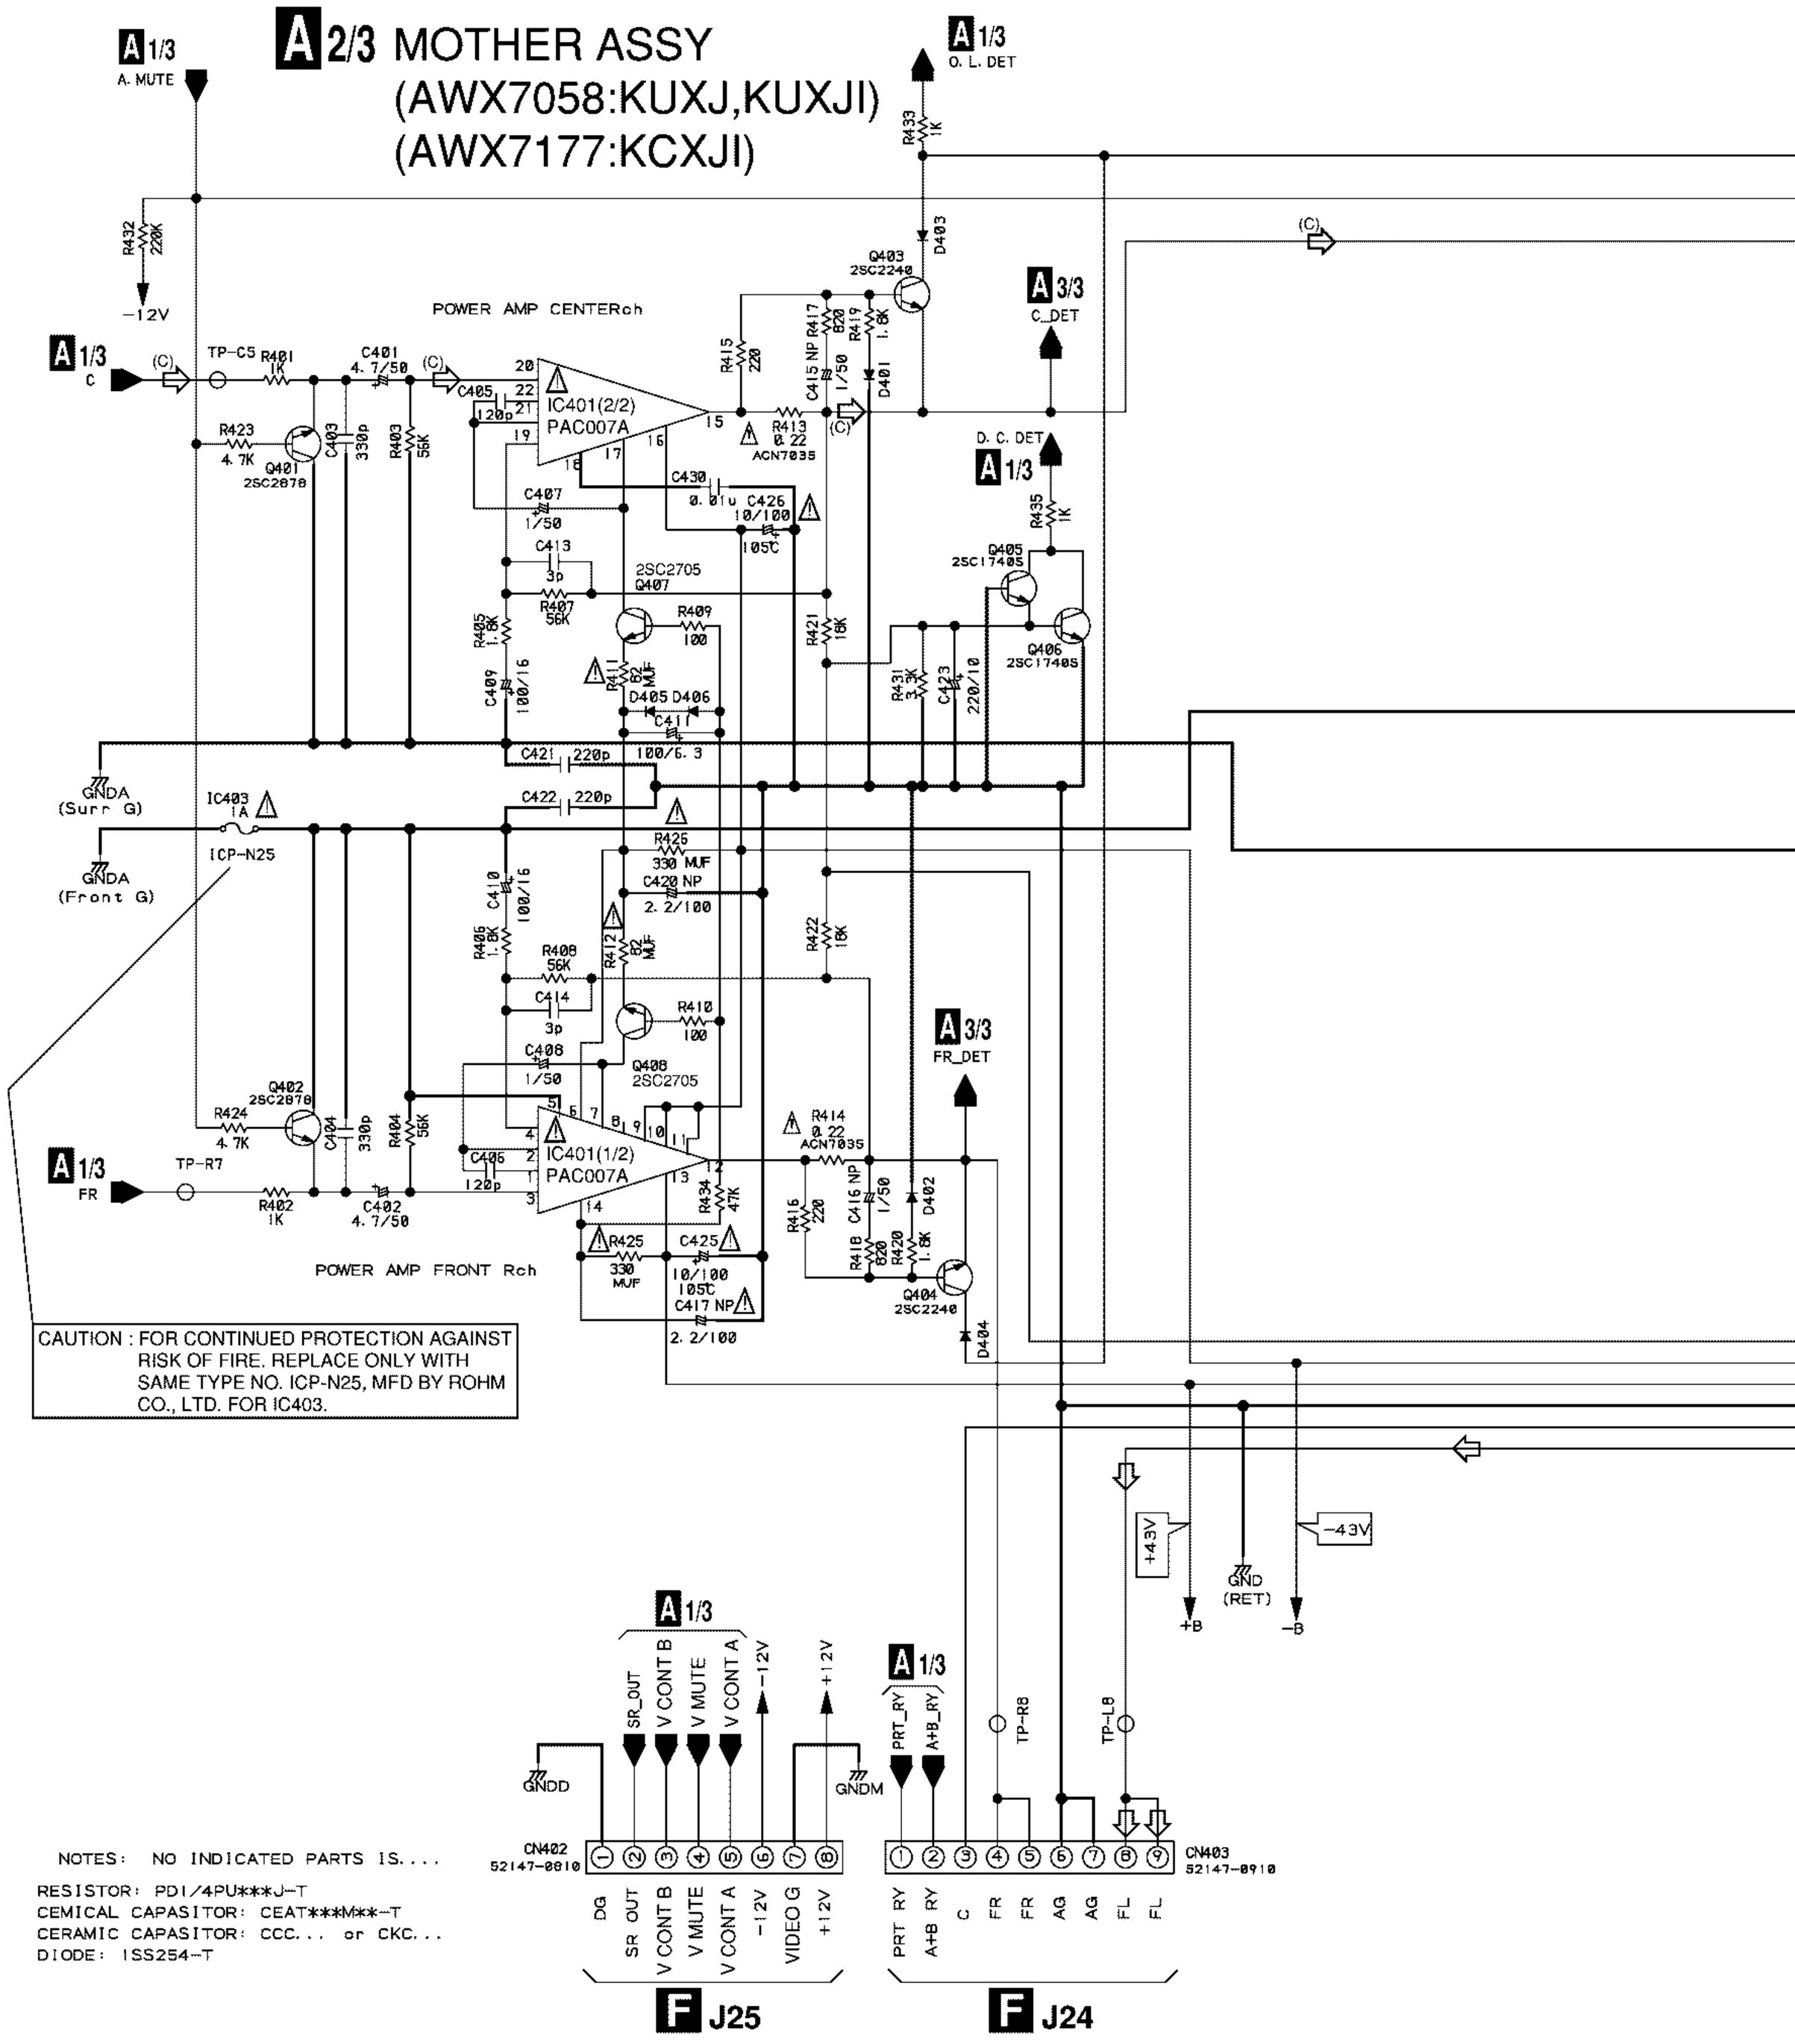

NOTES: NO INDICATED PARTS IS....

RESISTOR: PDI/4PU***J-T
CEMICAL CAPASITOR: CEAT***M**-T
CERAMIC CAPASITOR: CCC... or CKC...
DIODE: ISS254-T

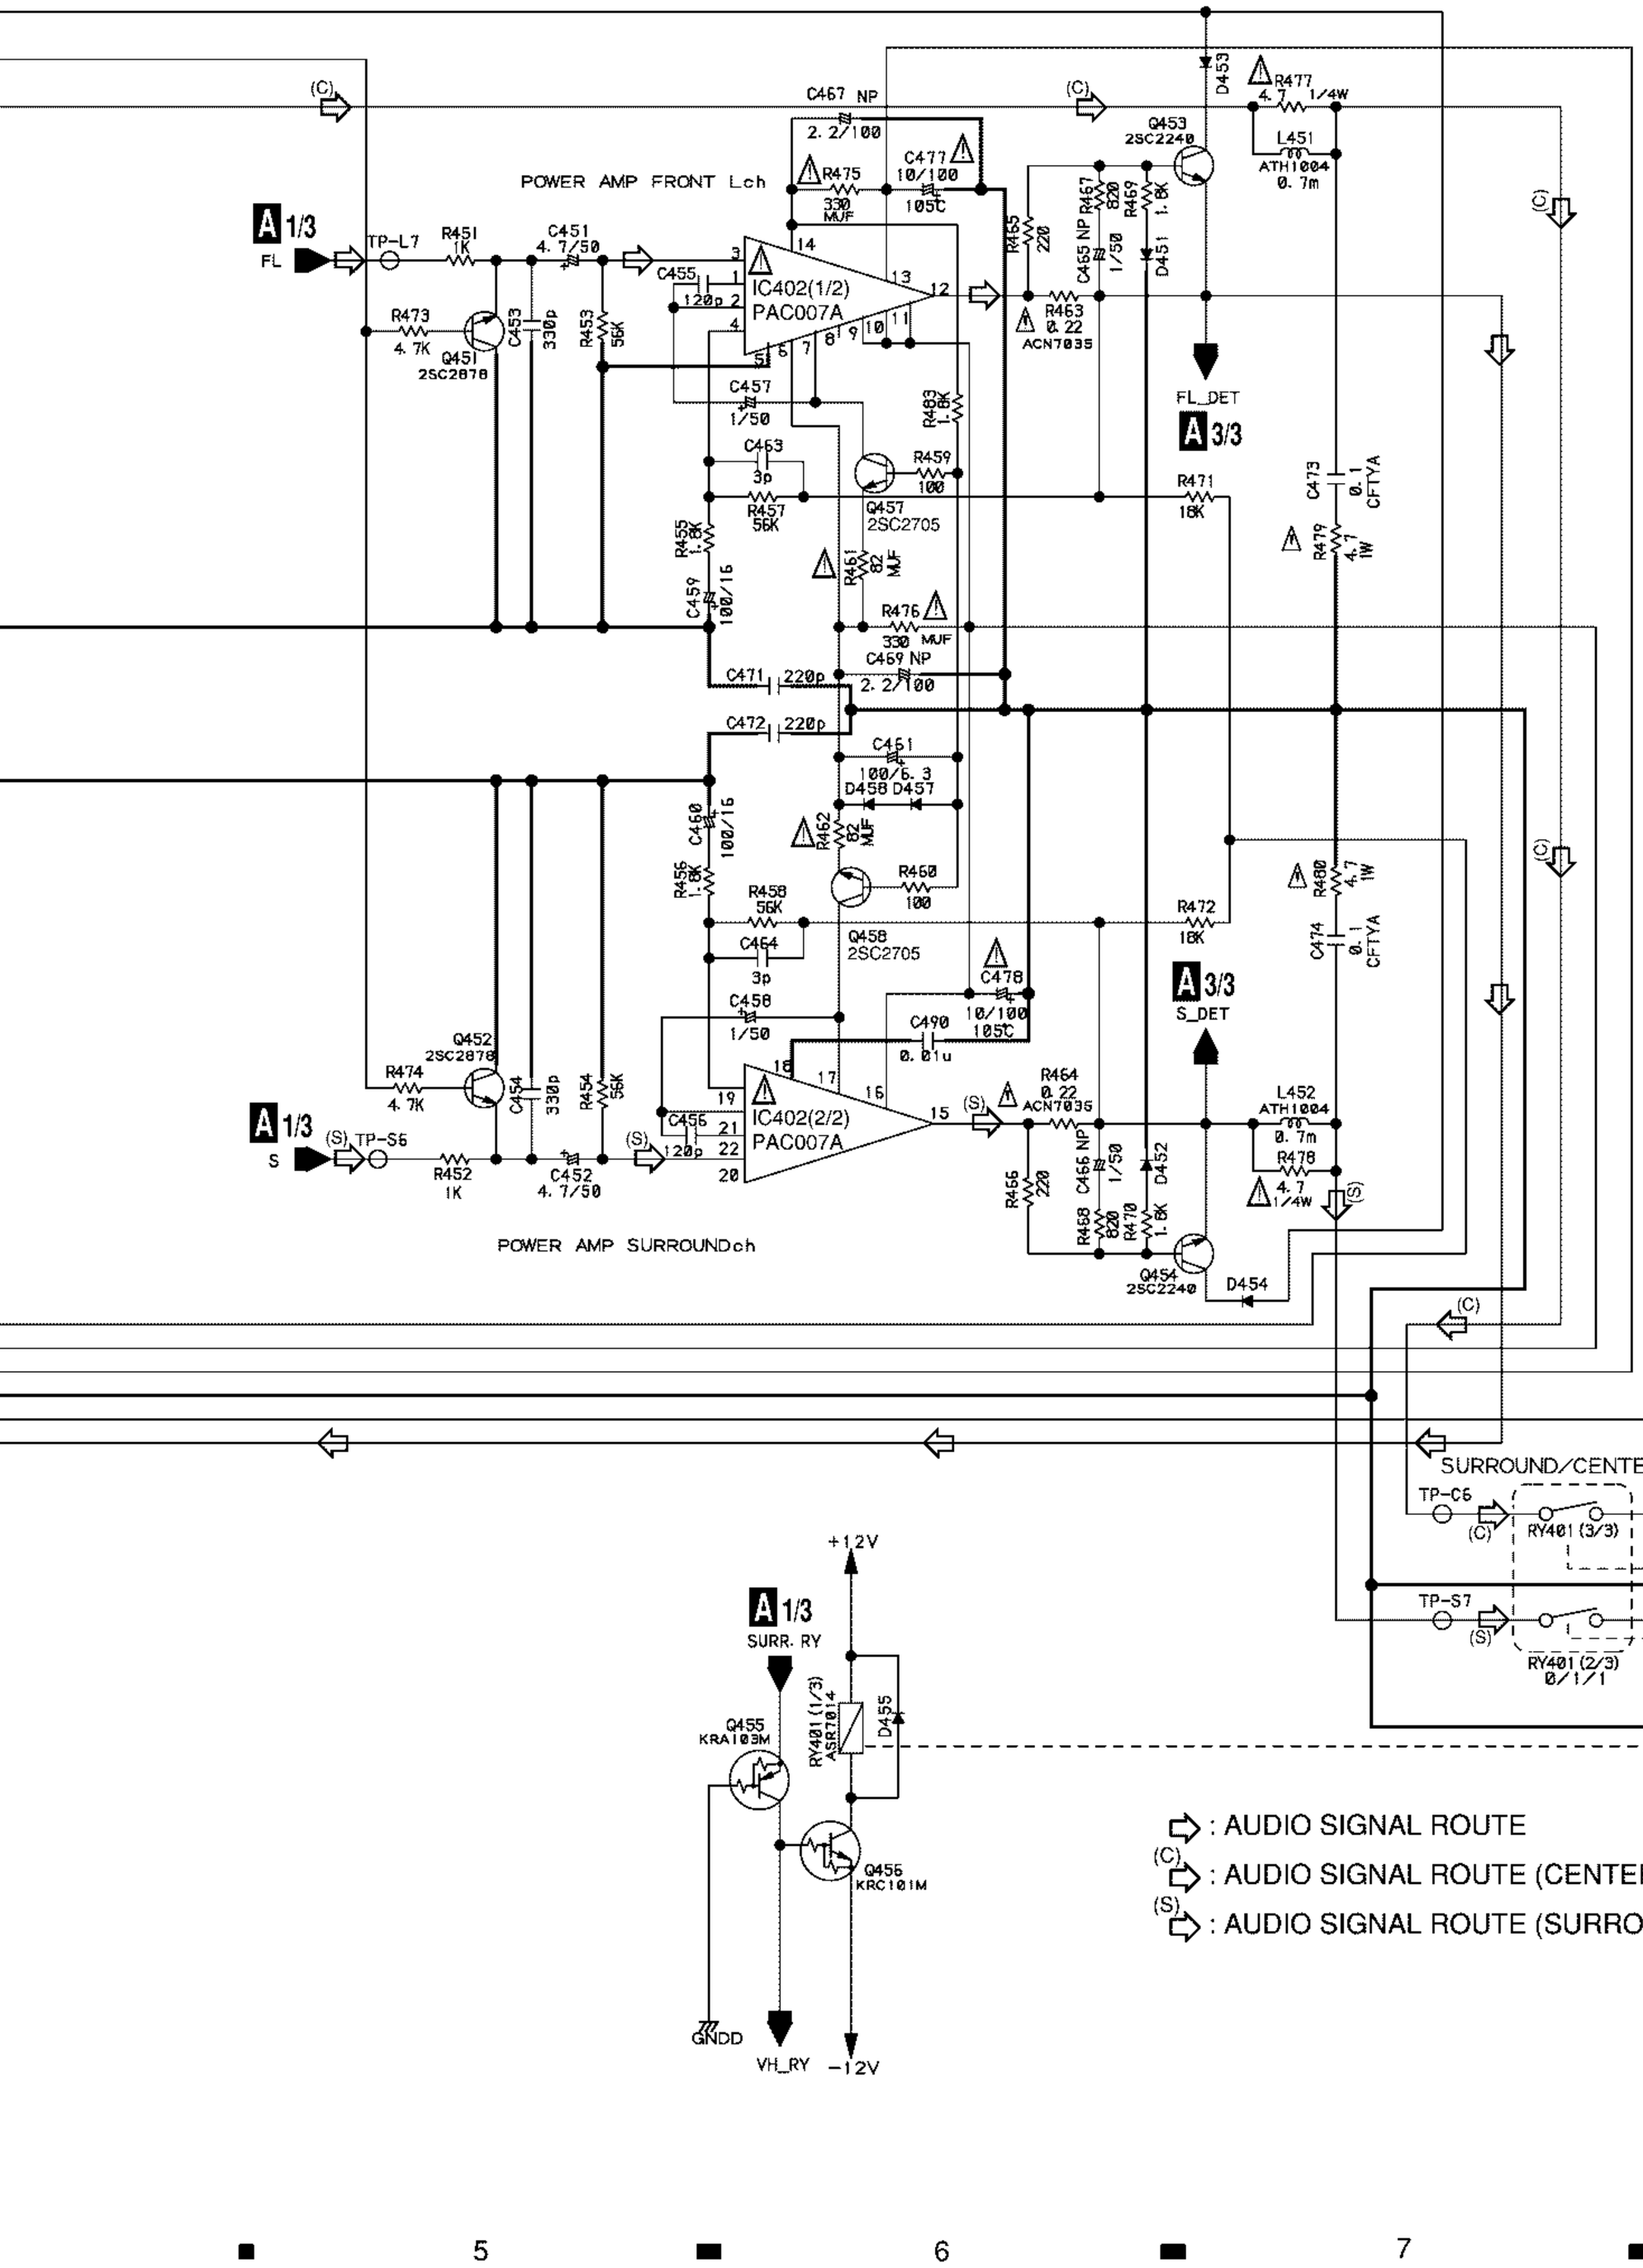
POWER AMP FRONT Lch
POWER AMP SURROUNDch
IC402(1/2) PAC007A
IC402(2/2) PAC007A
FL_DET
S_DET
SURROUND/CENTER RY
SURR. RY
RY401 (1/3) ASR7014
RY401 (2/3) Ø/1/1
RY401 (3/3)
CN401 AKE1053
+12V
-12V
VH_RY
GNDD
: AUDIO SIGNAL ROUTE
(C) : AUDIO SIGNAL ROUTE (CENTER)
(S) : AUDIO SIGNAL ROUTE (SURROUND)

3.4 MOTHER (3/3), CONNECTION AND TRANS 2 ASSEMBLIES

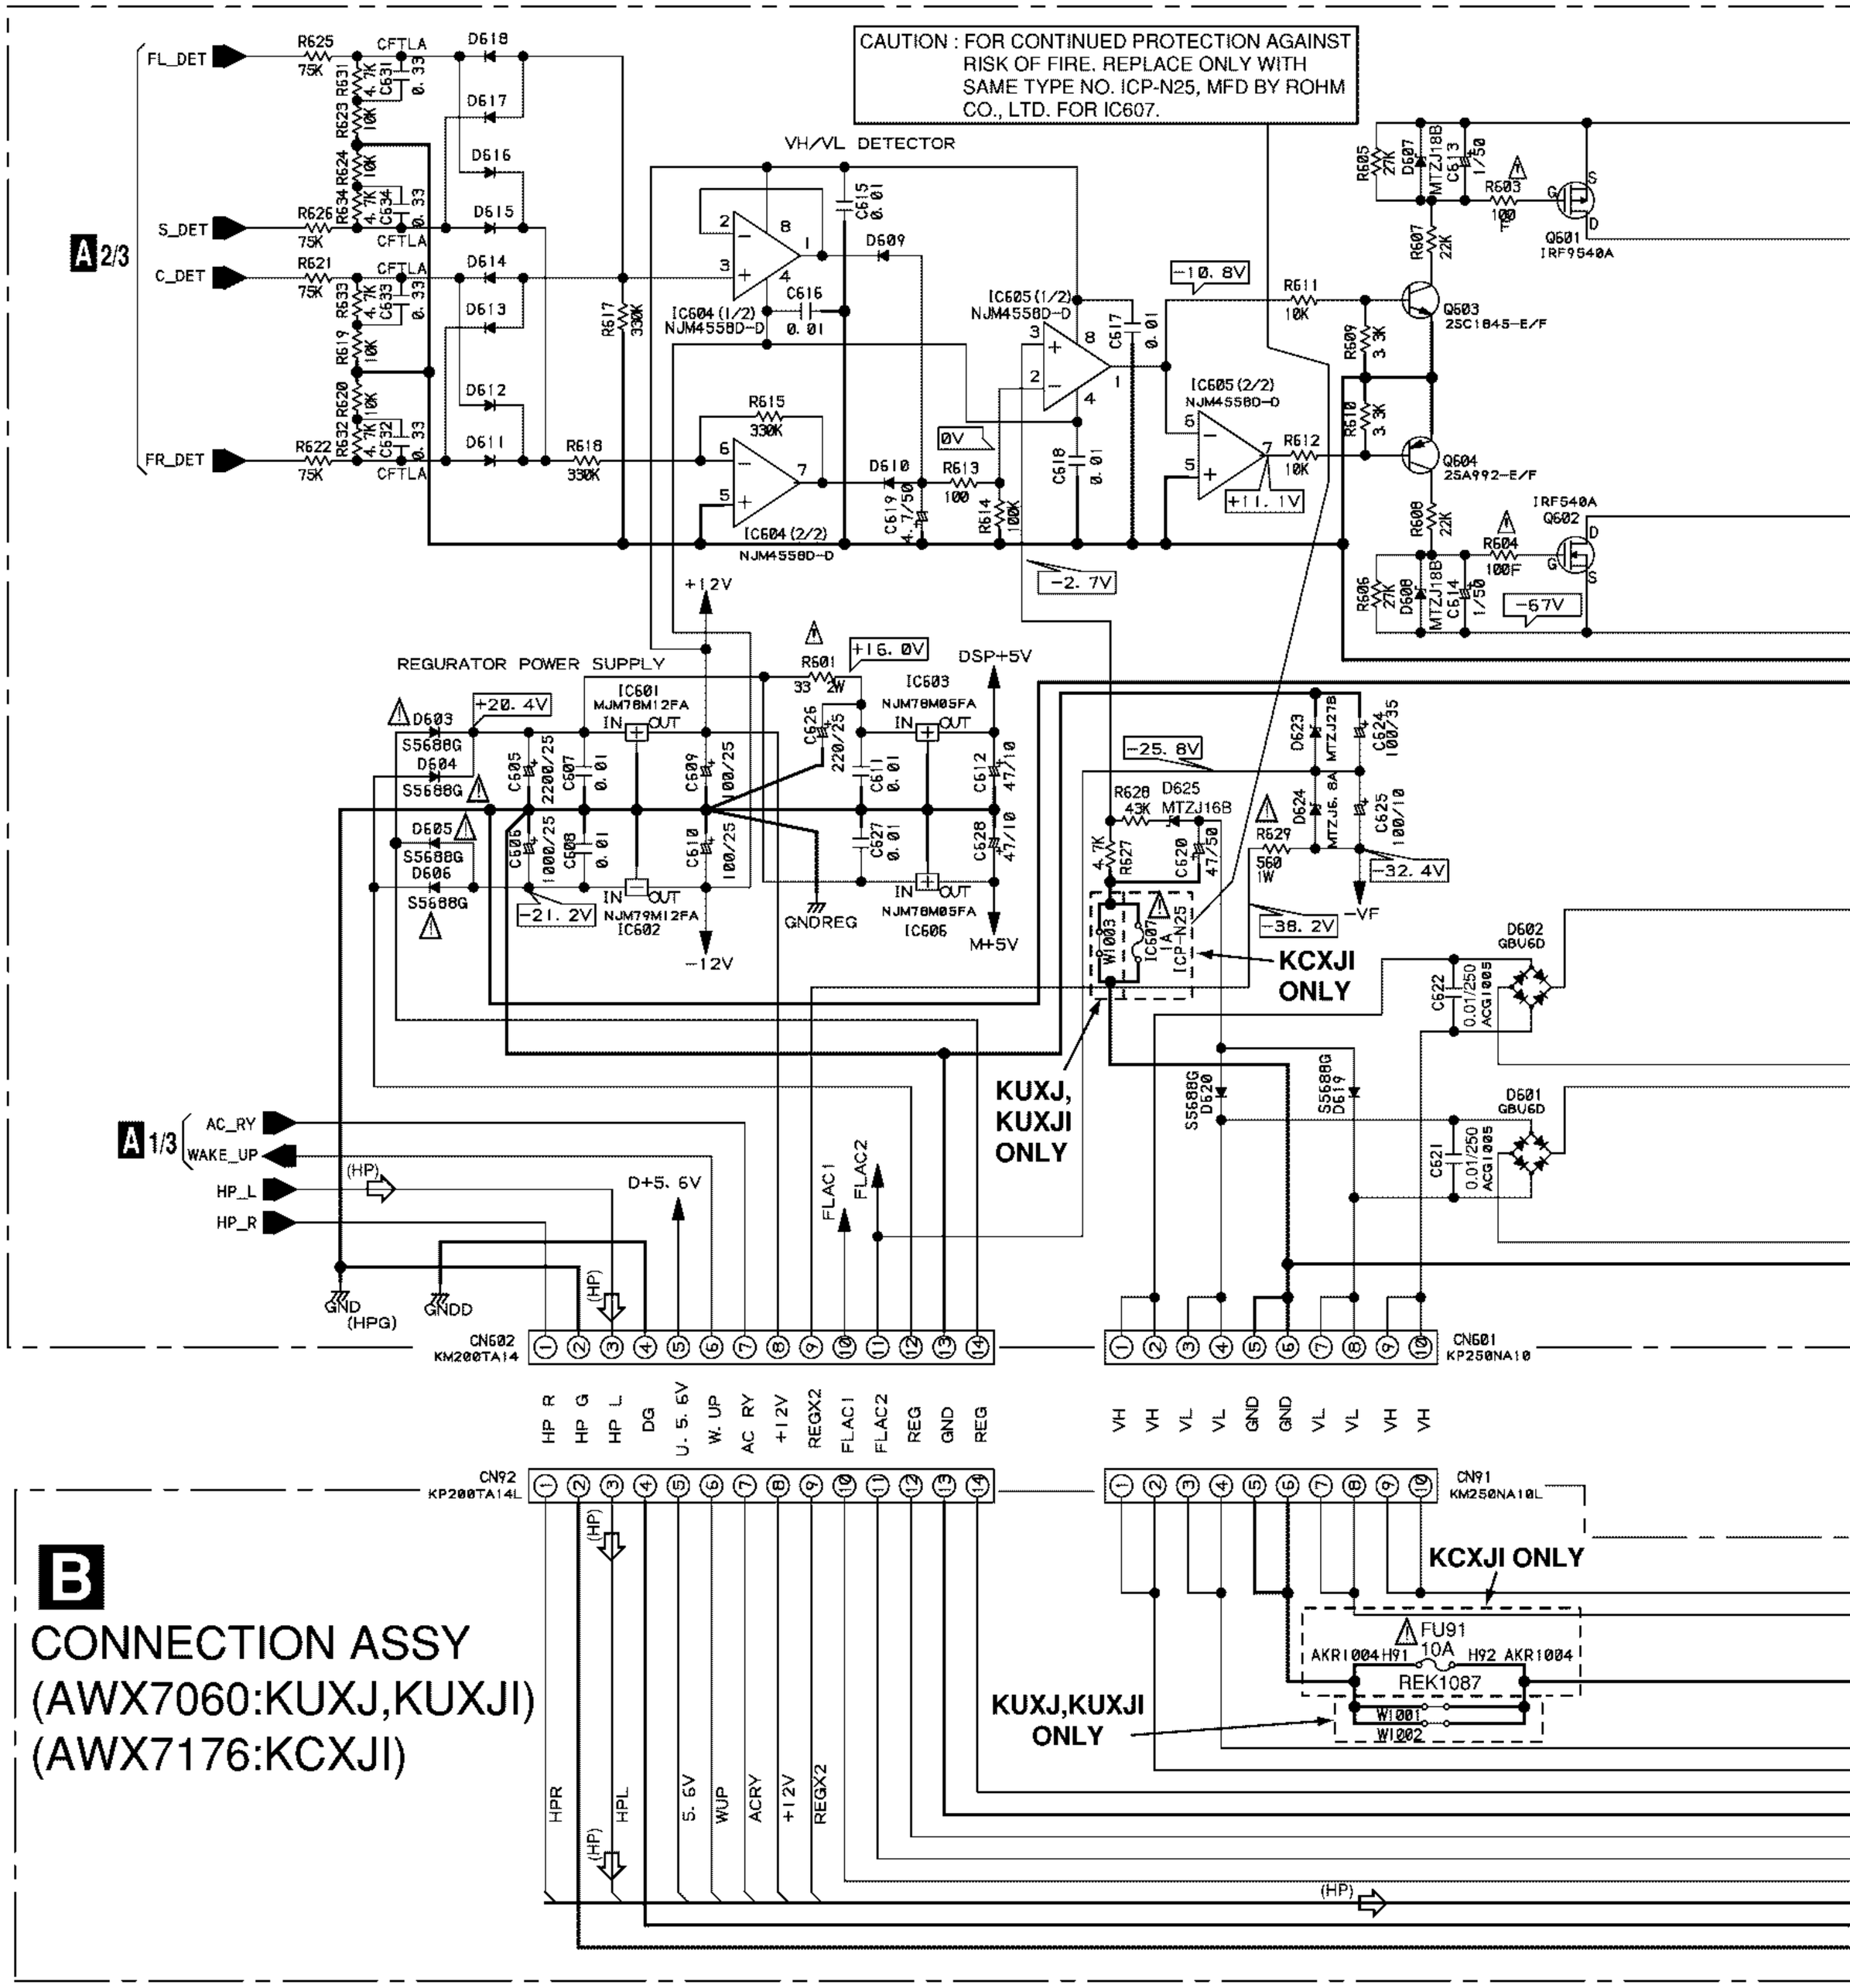

- NOTE FOR FUSE REPLACEMENT

CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE AND RATINGS ONLY.

A 3/3 B

5 6 7 8

A

B

C

D

E 1/2 CN203

(HP) : AUDIO SIGNAL ROUTE (HEADPHONE)

+67V

CN106 KM200TA6

A. MUTE, HP L, HP G, HP R, +12V, −12V

HEAD PHONE AMP

IC651 (1/2) NJM4558D-D

R653 1K, C653 10/50, R651 10K, Q651 2SC2878, C551 0.01, C552 0.01, R655 100K, R657 10K, R659 47K, C657 100/16, R663 33 1/4MUF, R661 4.7K, Q653 2SC2878, HP_L

R652 10K, Q652 2SC2878, R658 10K, R660 47K, R654 1K, C654 10/50, IC651 (2/2) NJM4558D-D, R662 4.7K, Q654 2SC2878, C658 100/16, R664 33 1/4MUF, HP_R

AMP POWER SUPPLY

C603 100/100, C604 100/100, C501 ACH7018 6200/71, C502 ACH7018 6200/71

+B +43V

GND (RET)

−43V −B

A 3/3 MOTHER ASSY (AWX7058:KUXJ,KUXJI) (AWX7177:KCXJI)

NOTES: NO INDICATED PARTS IS....

RESISTOR: PD1/4PU***J-T
CEMICAL CAPASITOR: CEAT***M**-T
CERAMIC CAPASITOR: CCC... or CKC...
DIODE: 1SS254-T

G CN952

CN93 KM250NA10L

VH, VH, VL, VL, GND, GND, VL, VL, VH, VH

G CN953

CN94 KP200TA14L

RRG, GND, REG, FLAC2, FLAC1, REGX2, +12V, AC RY, W. UP, U. 5. 6V, DG, HP L, HP G, HP R

(HP) HPL, HPR

(HP)

C TRANS 2 ASSY (AWX7071)

T1 POWER TRANSFORMER

IC71 AEK7015 3A

IC72 AEK7015 3A

CN71 KPD3: REG, GND, REG — G J21

CN72 KPD12: VL, VL, VL, VL, GND, GND, VH, VH, VH, VH, FLAC2, FLAC1 — G J22

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491003 MFD, BY LITTELFUSE INK. FOR IC71,IC72.

A 3/3 B C

3.5 FRONT ASSY

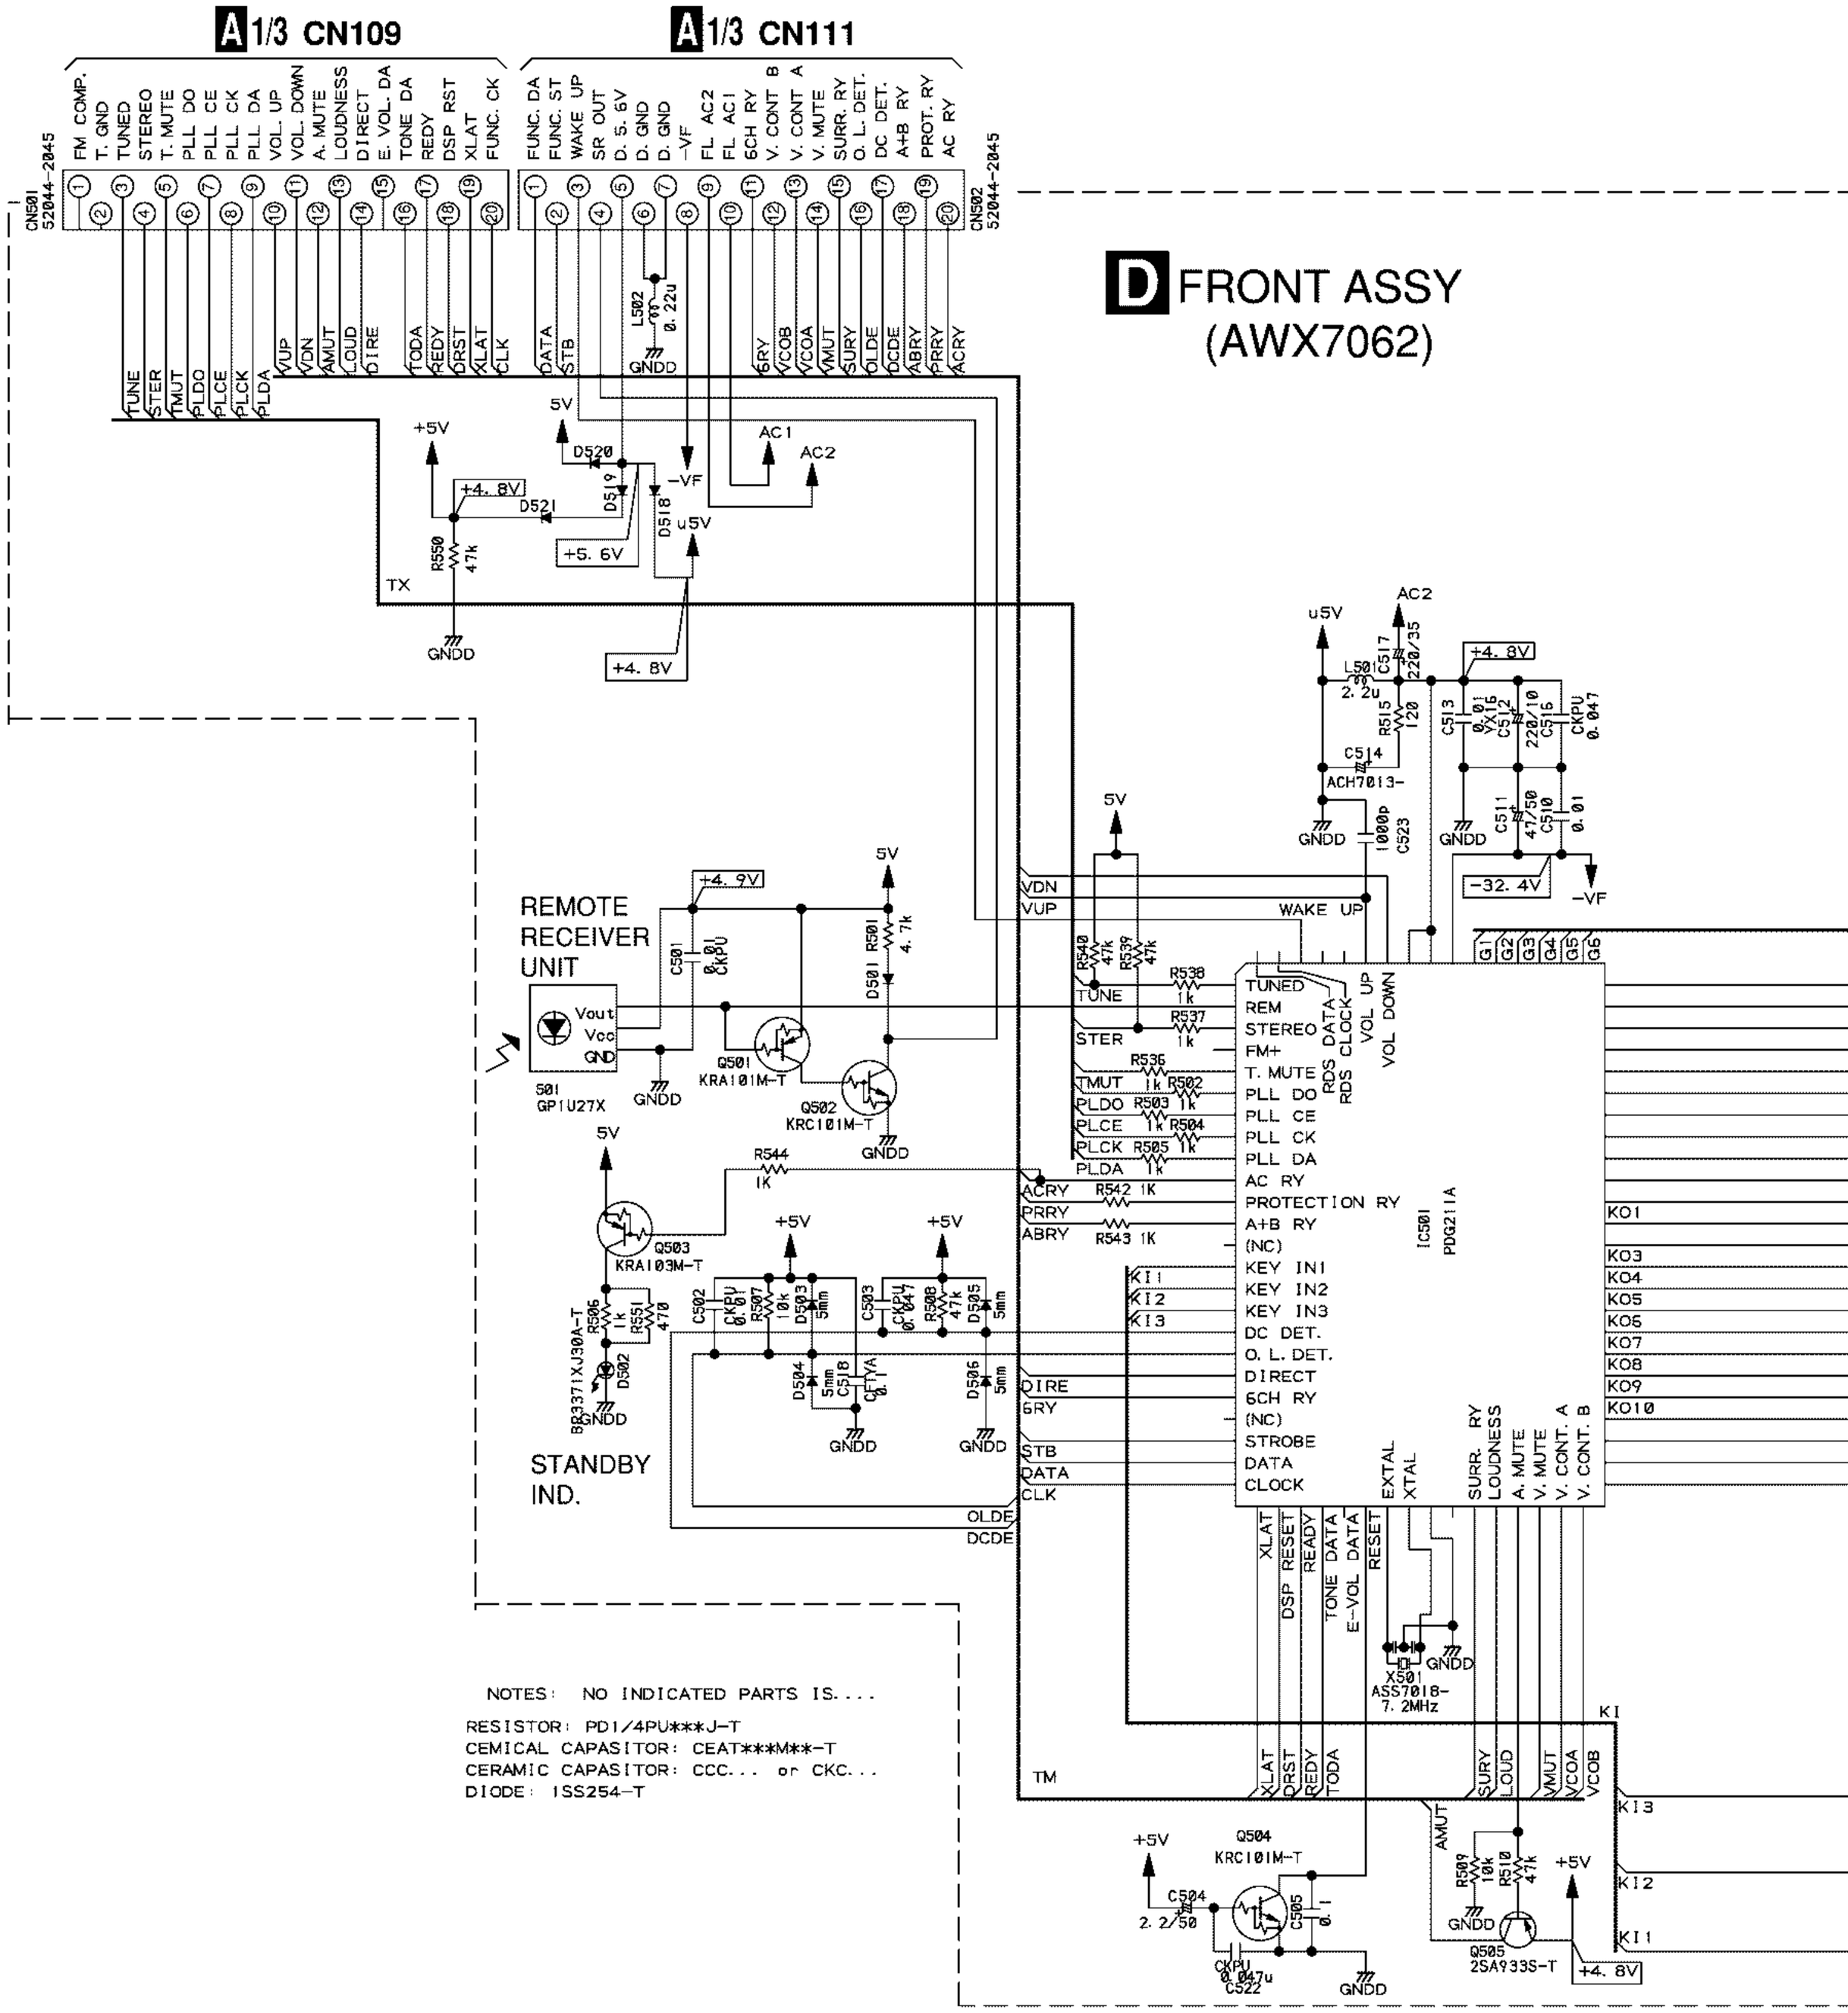

NOTES: NO INDICATED PARTS IS....

RESISTOR: PD1/4PU***J-T
CEMICAL CAPASITOR: CEAT***M**-T
CERAMIC CAPASITOR: CCC... or CKC...
DIODE: 1SS254-T

S501 : SPEAKER
S502 : SELECT
S503 : TAPE 2 MONITOR
S505 : TONE(–) / BALANCE(L)
S506 : PHONO
S507 : STANDBY / ON
S508 : TONE(+) / BALANCE(R)
S509 : FM / AM
S510 : STATION / FREQUENCY(–)
S511 : DOLBY PRO LOGIC
S512 : CD
S513 : MEMORY
S514 : DOLBY VIRTUAL
S515 : DVD / LD
S516 : STATION / FREQUENCY(+)
S517 : LOUDNESS
S518 : VCR / TAPE 1
S520 : DSP MODE
S522 : CLASS
S523 : TUNING SELECT
S524 : MPX MODE

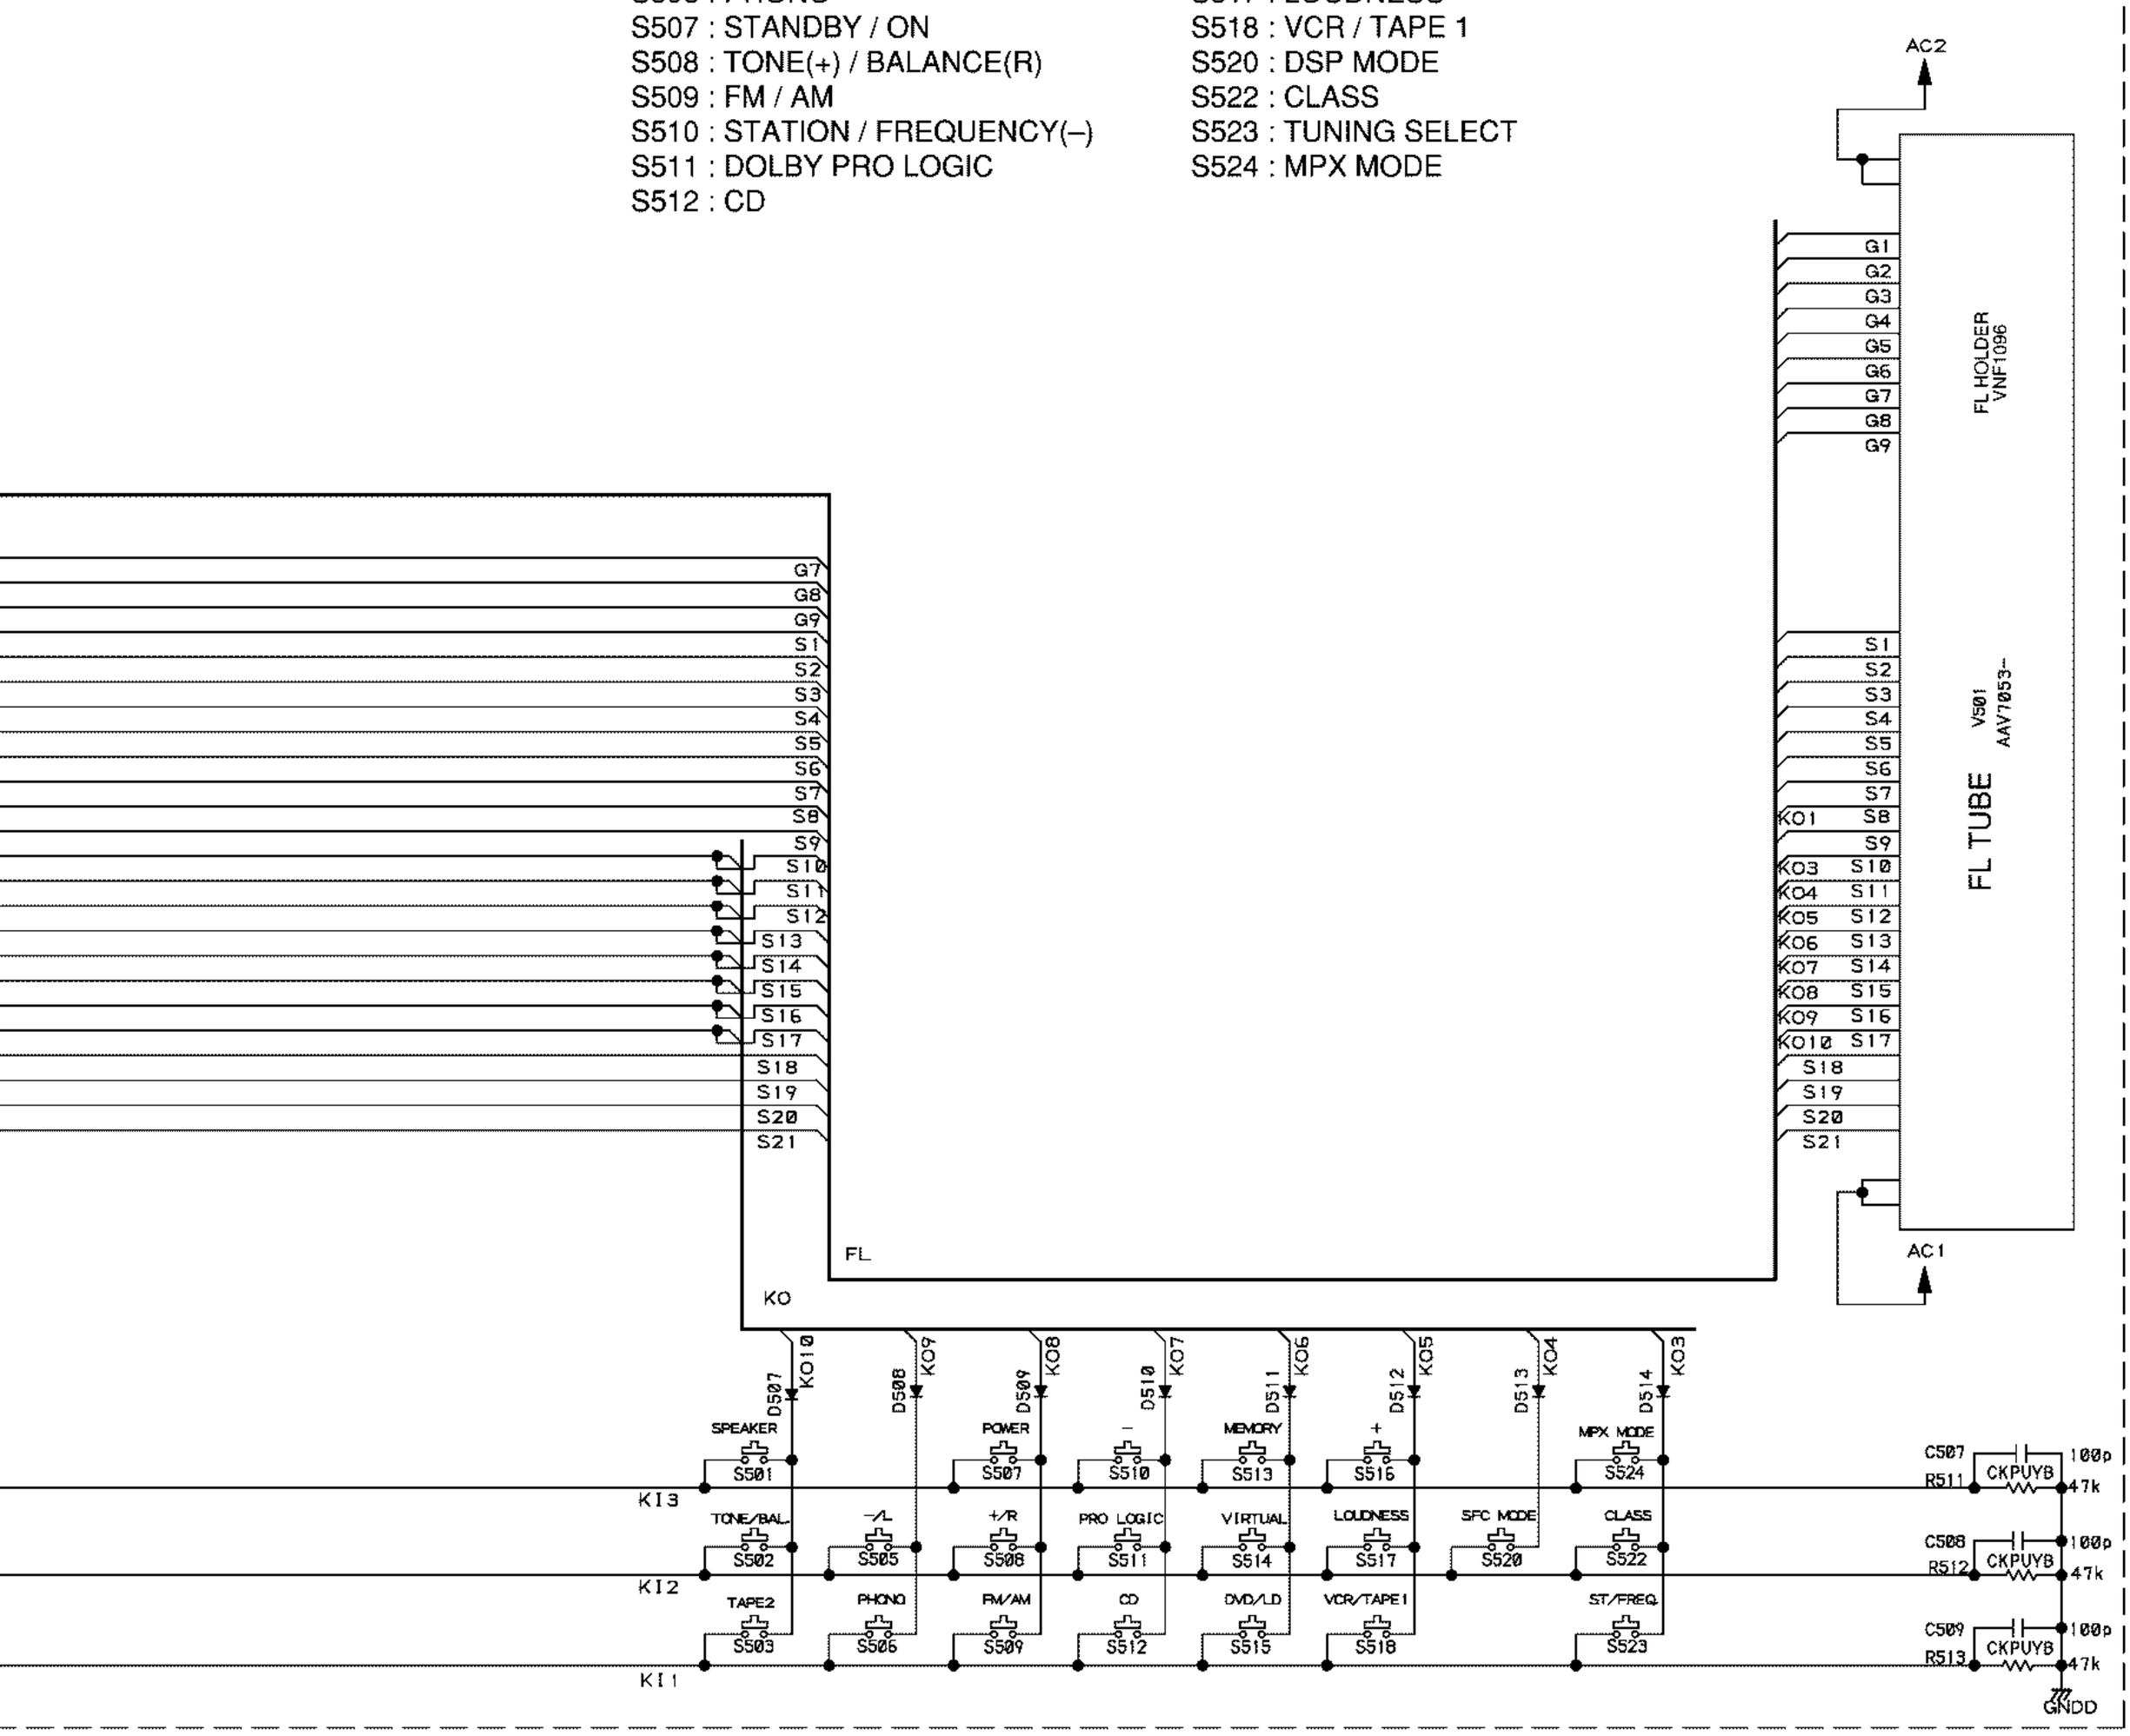

3.6 VOLUME DSP ASSY (1/2)

E 1/2 VOLUME DSP ASSY(AWX7064)

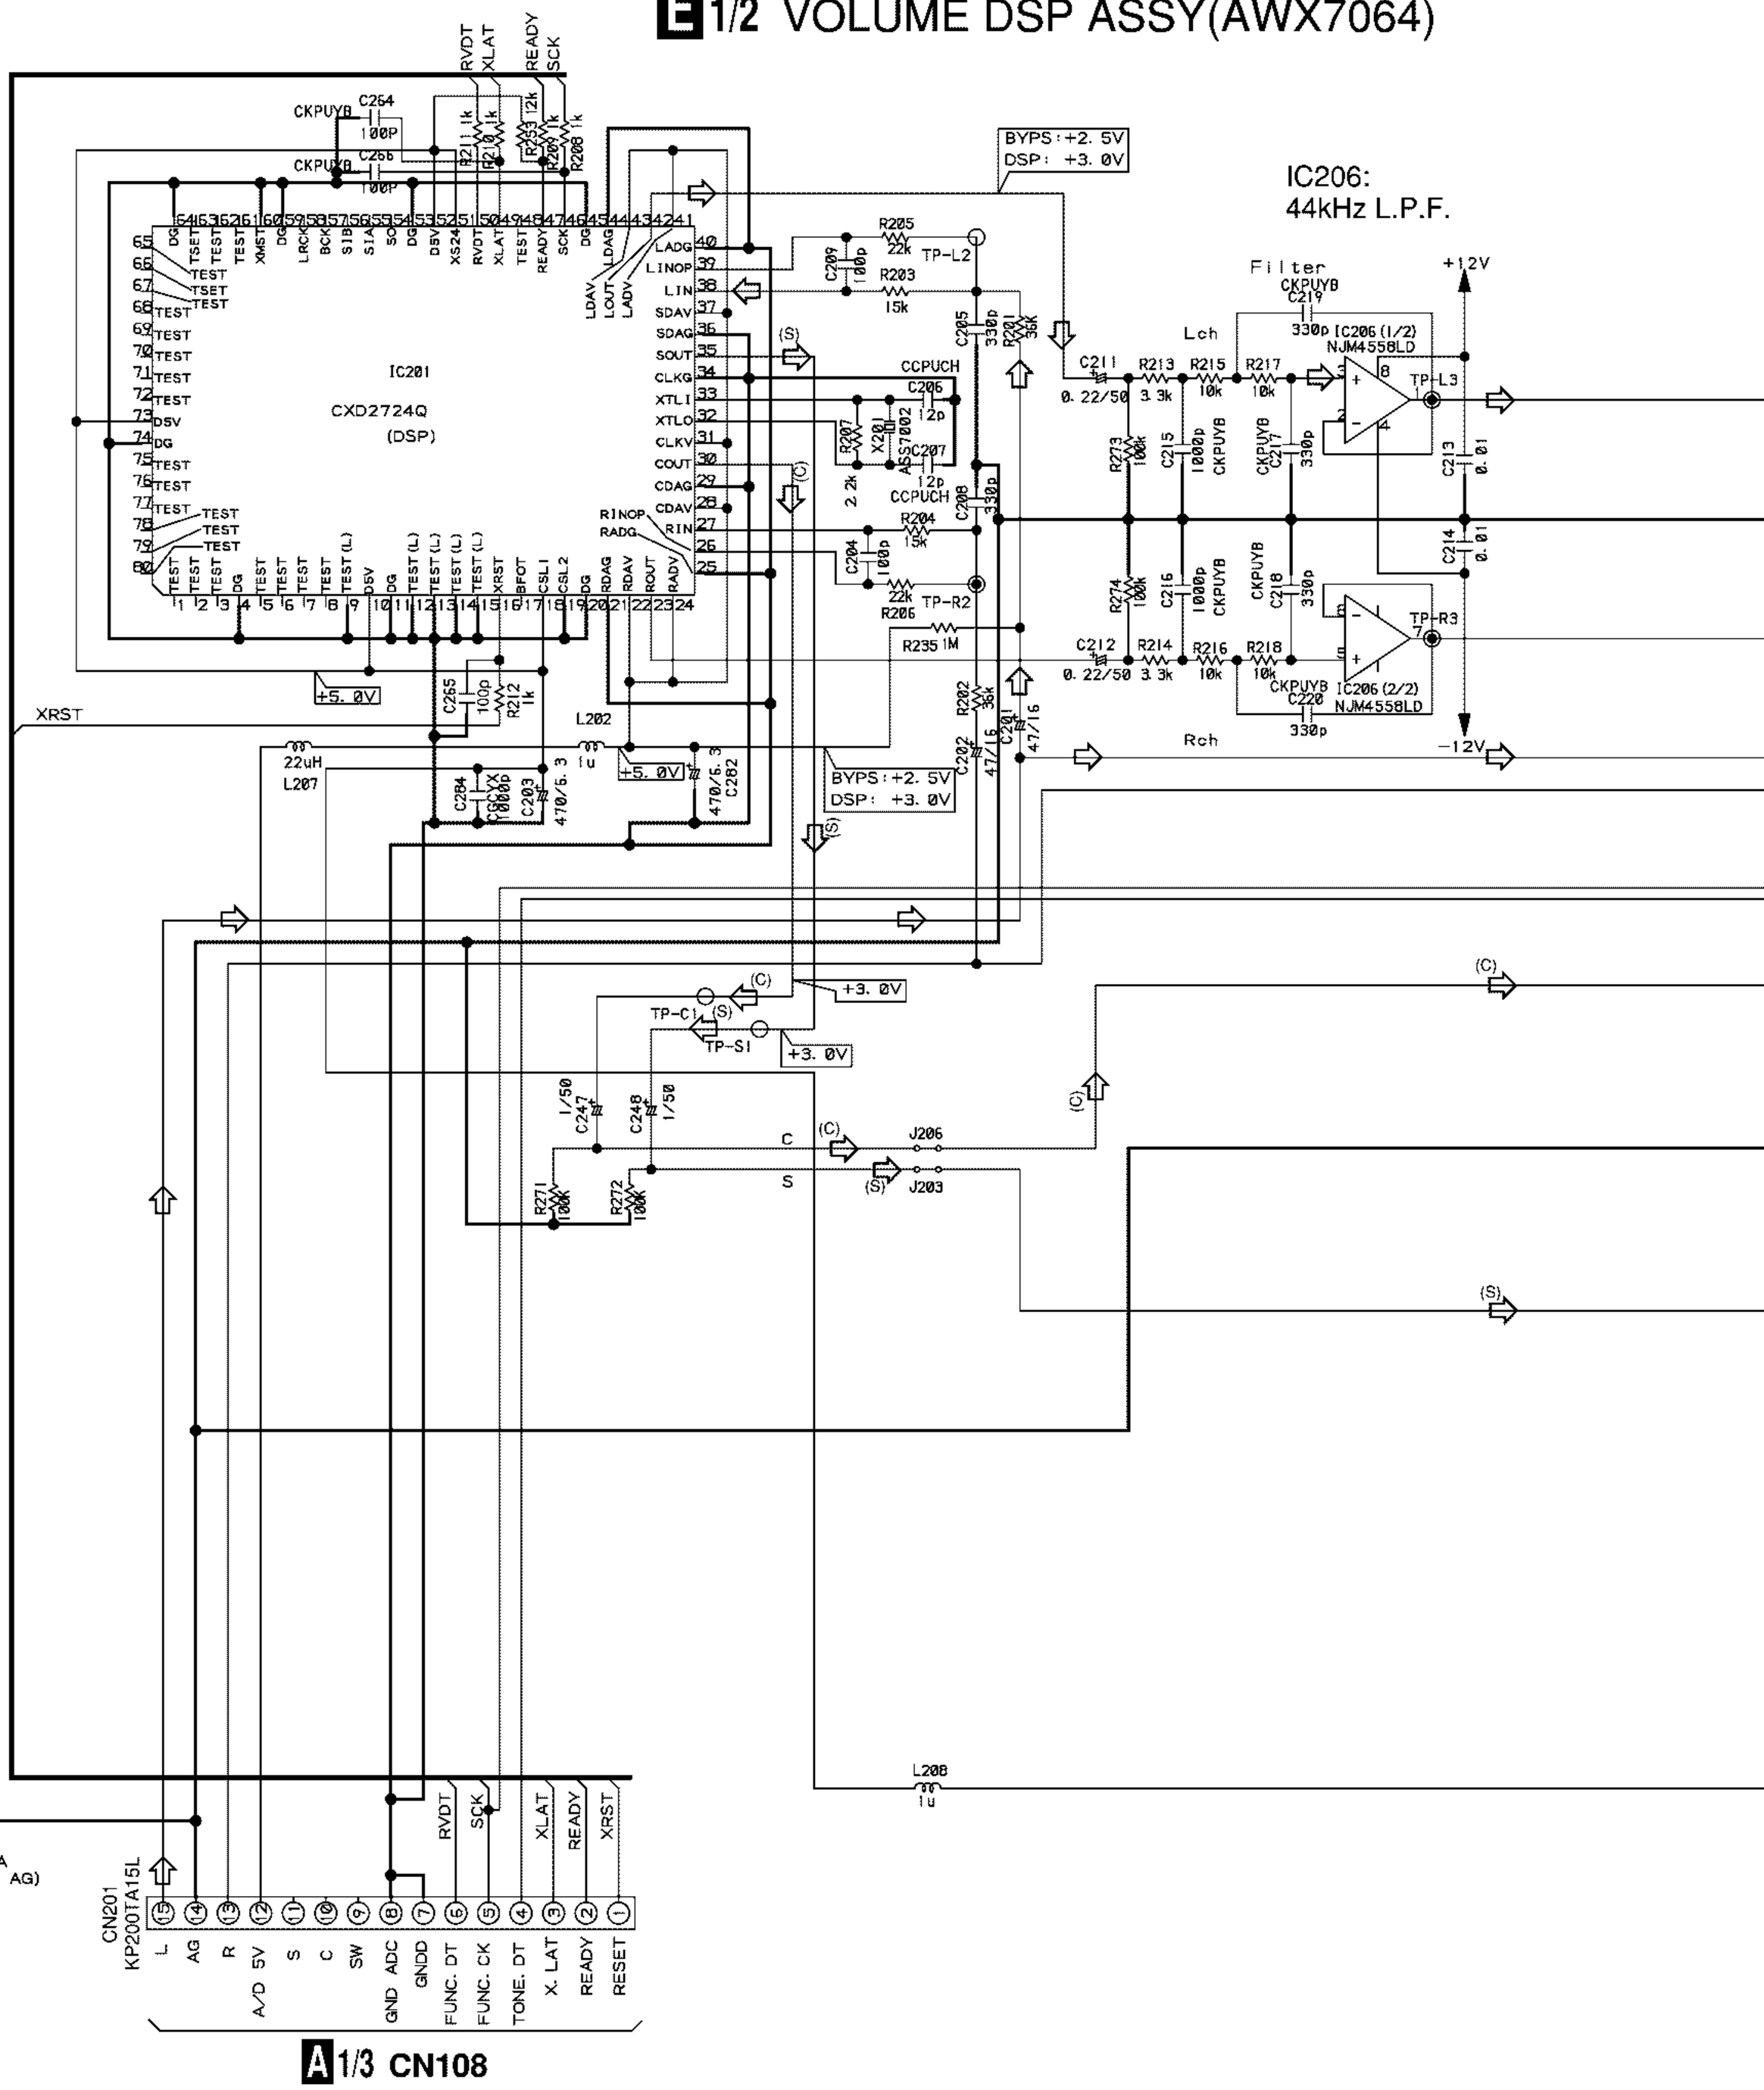

A 1/3 CN108

IC202:
TONE CONTROL

IC207:
6dB AMP

IC211:
44kHz L.P.F. & AMP

NOTES: NO INDICATED PARTS IS....

RESISTOR: PD1/4PU***J-T
CEMICAL CAPASITOR: CEAT***M**-T
CERAMIC CAPASITOR: CCC... or CKC...

: AUDIO SIGNAL ROUTE
(C) : AUDIO SIGNAL ROUTE (CENTER)
(S) : AUDIO SIGNAL ROUTE (SURROUND)
(HP) : AUDIO SIGNAL ROUTE (HEADPHONE)

3.7 VOLUME DSP ASSY (2/2)

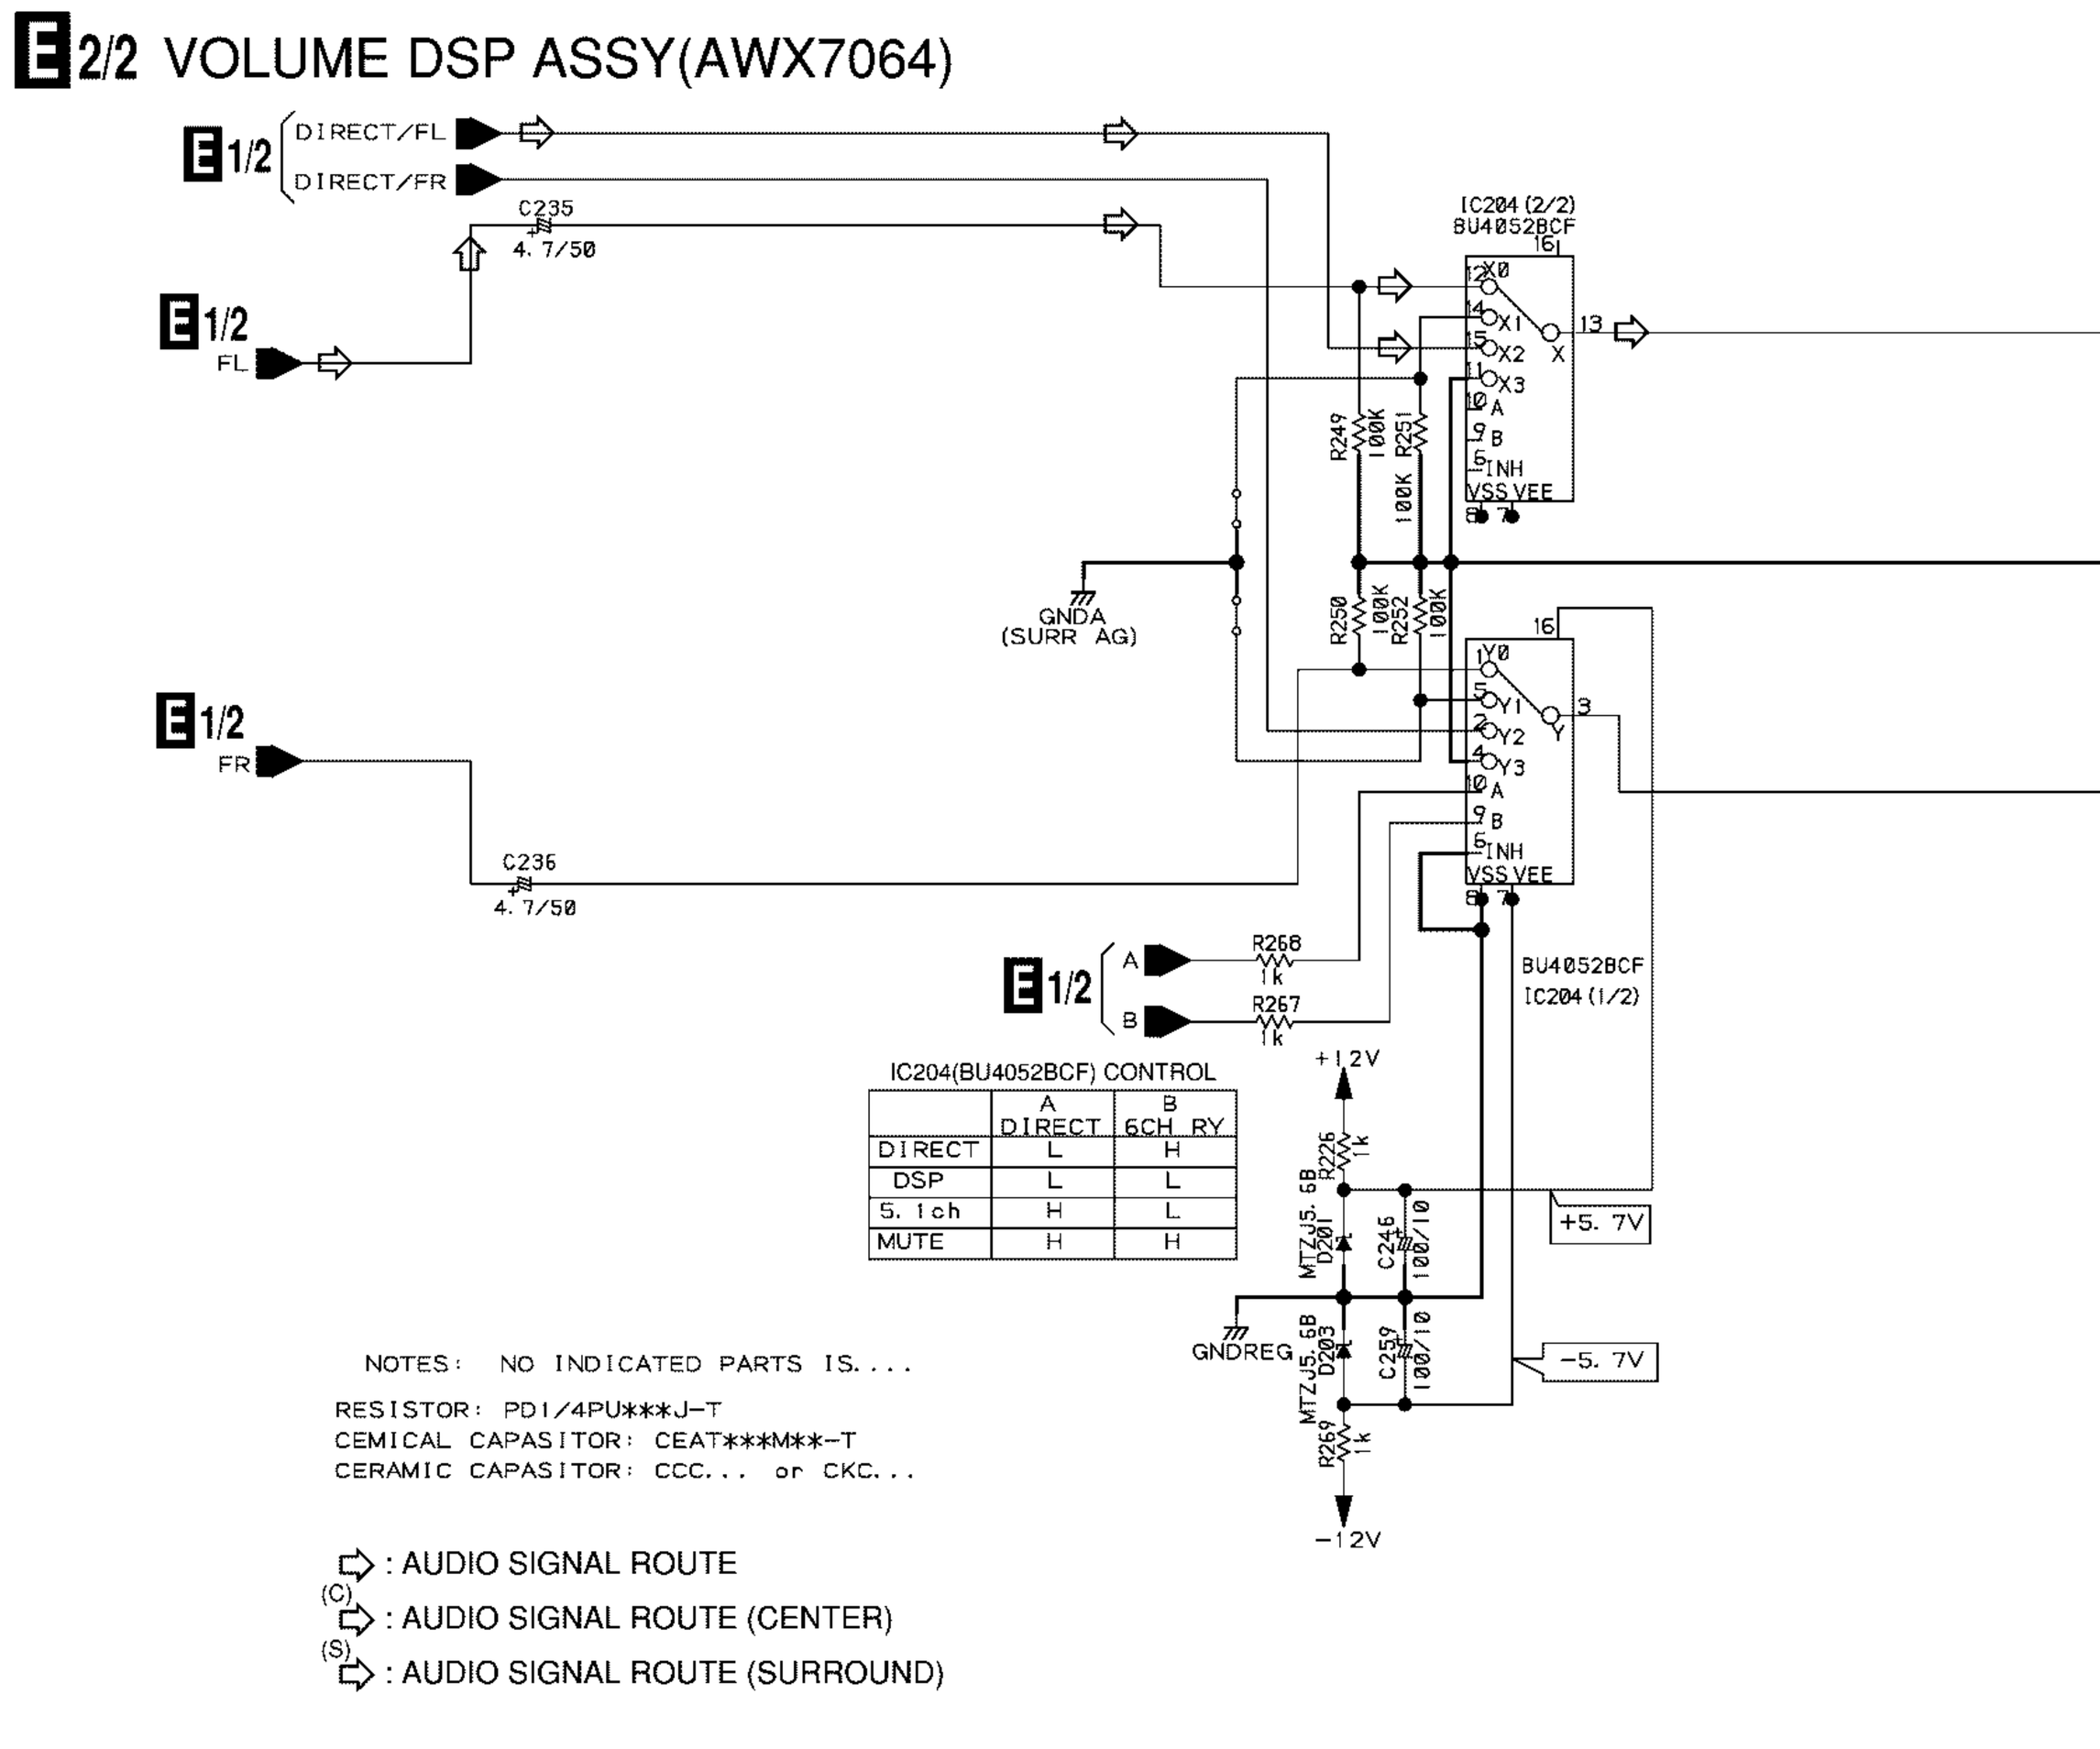

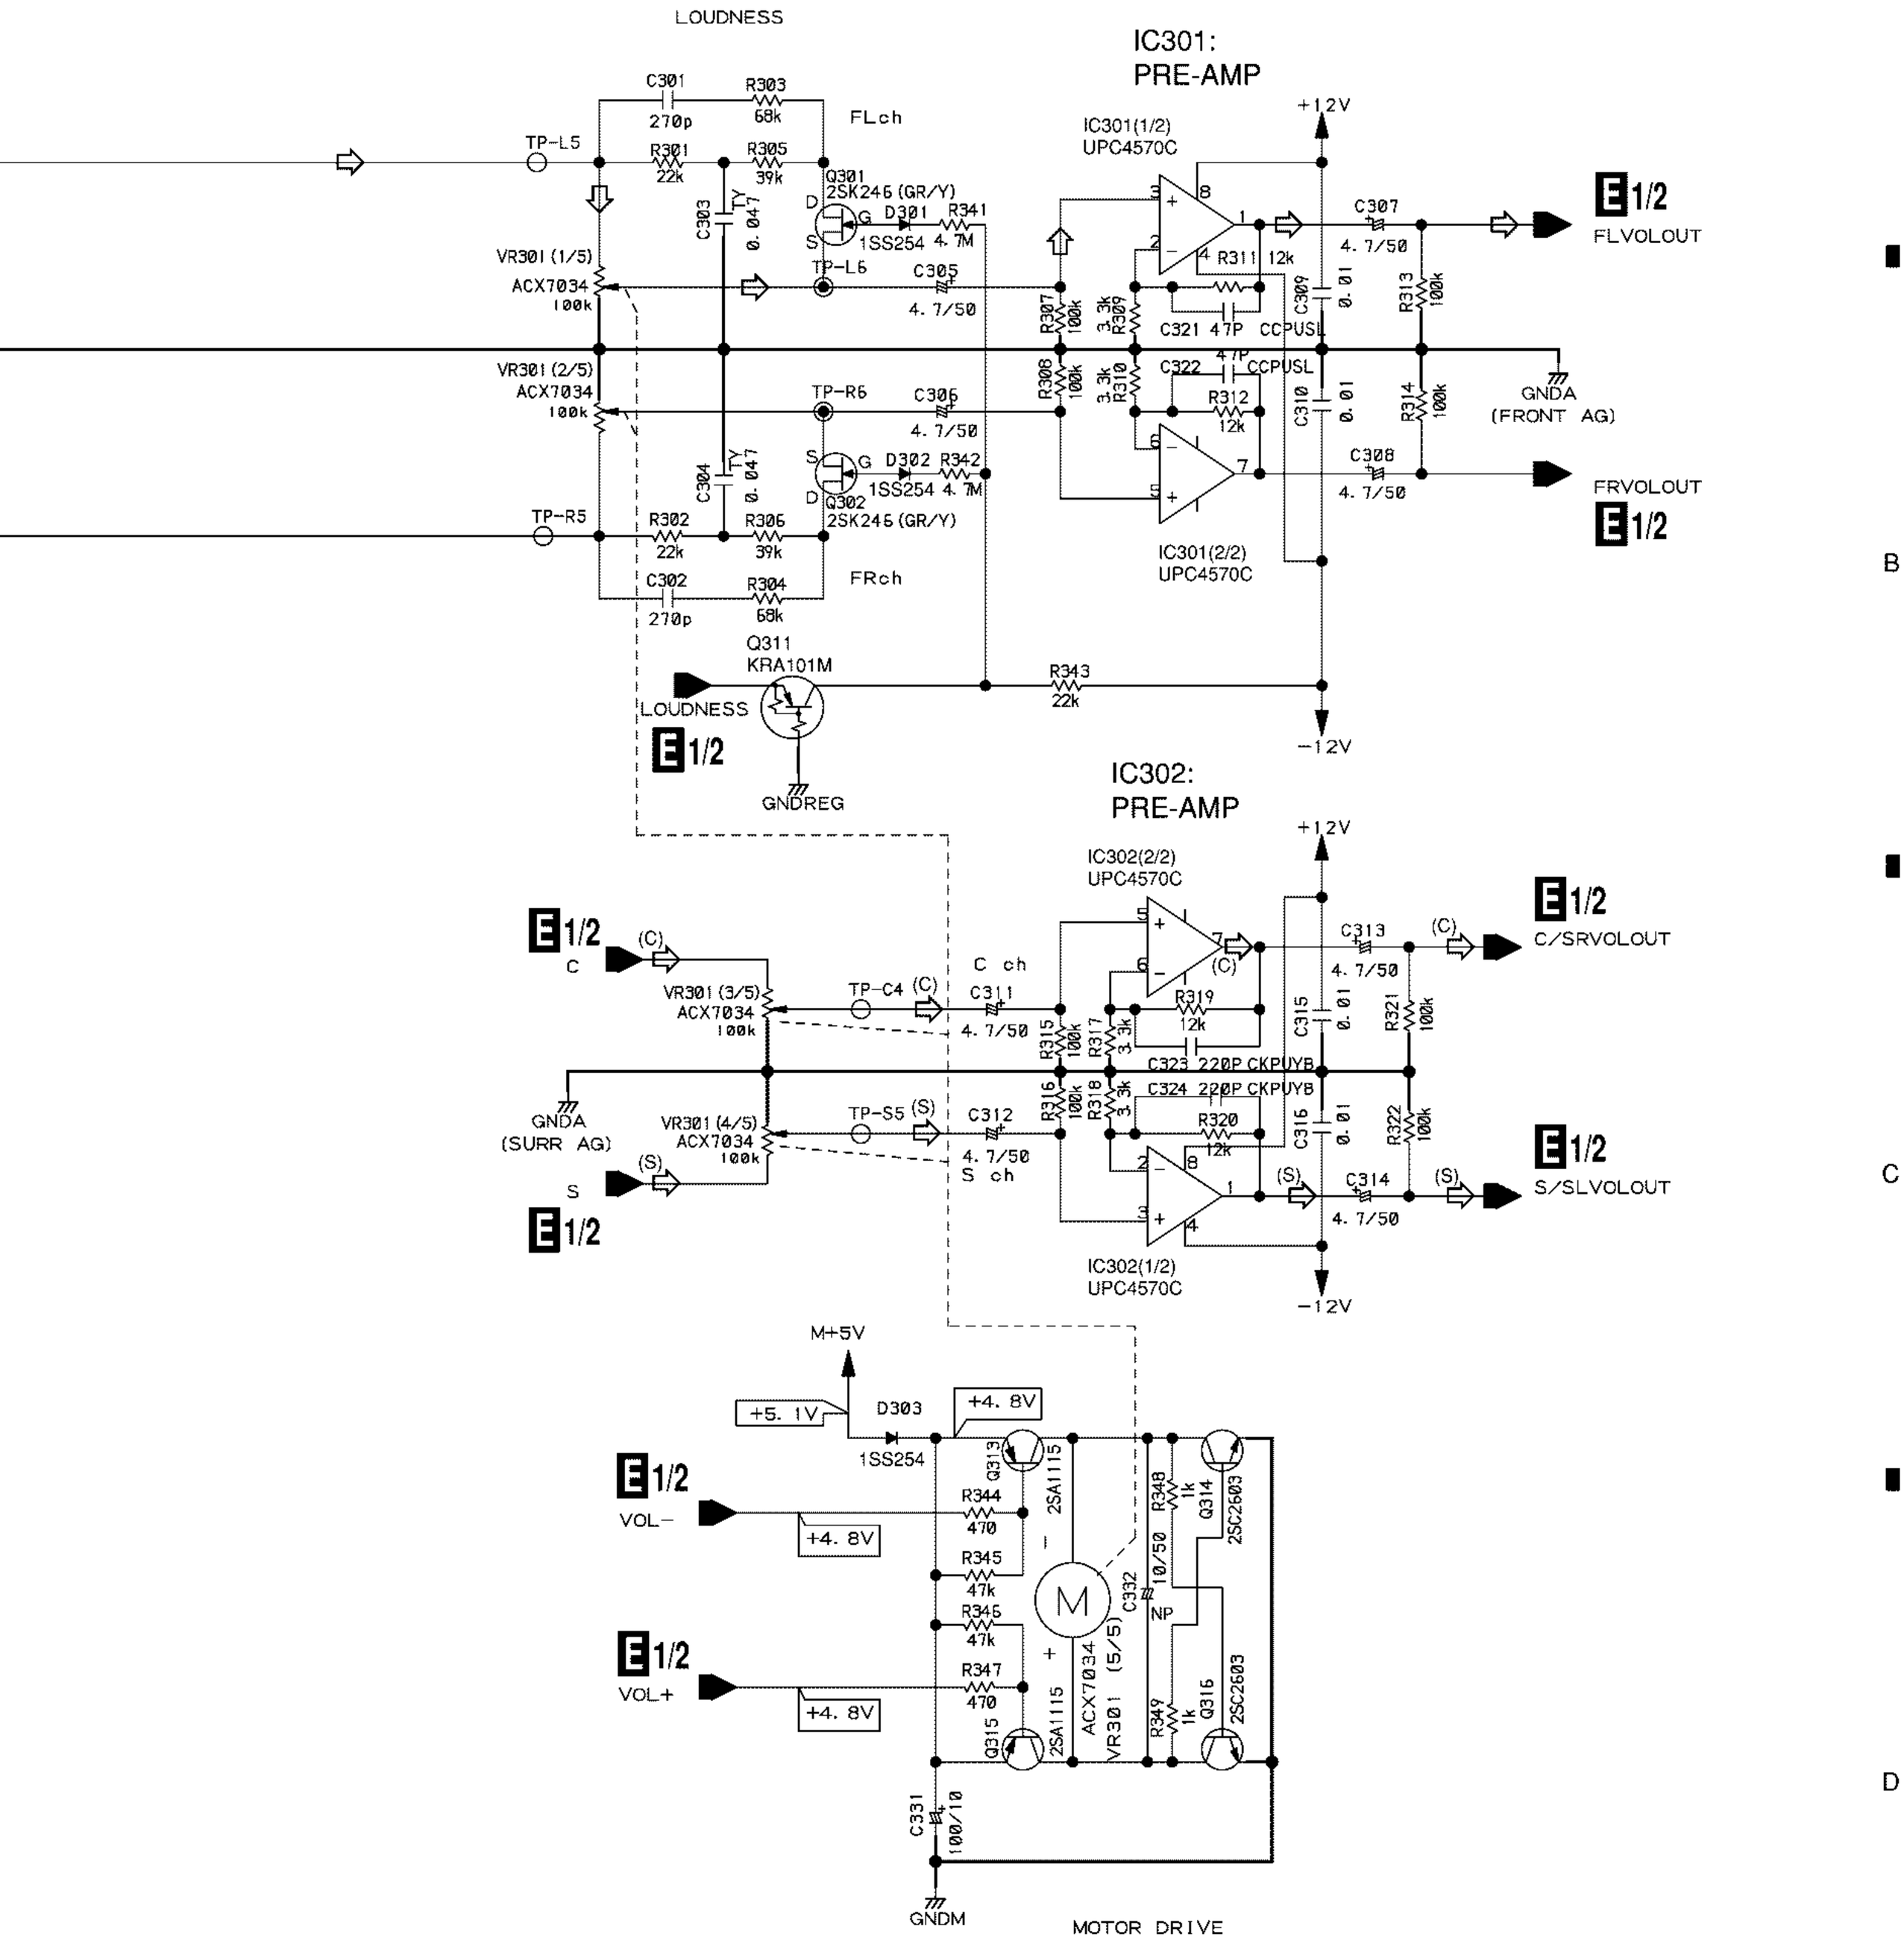
LOUDNESS
IC301:
PRE-AMP
C301
270p
R303
68k
FLch
TP-L5
R301
22k
R305
39k
Q301
2SK246 (GR/Y)
D301
1SS254
R341
4.7M
C303
0.047
TY
VR301 (1/5)
ACX7034
100k
TP-L6
C305
4.7/50
VR301 (2/5)
ACX7034
100k
TP-R6
C306
4.7/50
C304
0.047
TY
D302
1SS254
R342
4.7M
Q302
2SK246 (GR/Y)
TP-R5
R302
22k
R306
39k
C302
270p
R304
68k
FRch
Q311
KRA101M
LOUDNESS
E1/2
GNDREG
R343
22k
IC301(1/2)
UPC4570C
+12V
R307
100k
R308
100k
3.3k
R309
3.3k
R310
C321 47P CCPUSL
C322 47P CCPUSL
R311 12k
R312
12k
C309
0.01
C310
0.01
C307
4.7/50
C308
4.7/50
R313
100k
R314
100k
GNDA
(FRONT AG)
E1/2
FLVOLOUT
E1/2
FRVOLOUT
IC301(2/2)
UPC4570C
-12V
IC302:
PRE-AMP
IC302(2/2)
UPC4570C
+12V
E1/2
C
(C)
VR301 (3/5)
ACX7034
100k
TP-C4
C ch
C311
4.7/50
R315
100k
R316
100k
R317
3.3k
R318
3.3k
R319
12k
C323 220P CKPUYB
C324 220P CKPUYB
R320
12k
C315
0.01
C316
0.01
R321
100k
R322
100k
C313
4.7/50
E1/2
C/SRVOLOUT
GNDA
(SURR AG)
VR301 (4/5)
ACX7034
100k
TP-S5
(S)
C312
4.7/50
S ch
S
E1/2
C314
4.7/50
E1/2
S/SLVOLOUT
IC302(1/2)
UPC4570C
-12V
M+5V
+5.1V
D303
1SS254
+4.8V
E1/2
VOL-
+4.8V
E1/2
VOL+
+4.8V
R344
470
R345
47k
R346
47k
R347
470
Q313
2SA1115
Q315
2SA1115
M
C332
NP
ACX7034
VR301 (5/5)
R348
1k
10/50
Q314
2SC2603
R349
1k
Q316
2SC2603
C331
100/10
GNDM
MOTOR DRIVE

3.8 FRONT SPEAKER, HEADPHONE, PRIMARY AND TRANS 1 ASSEMBLIES

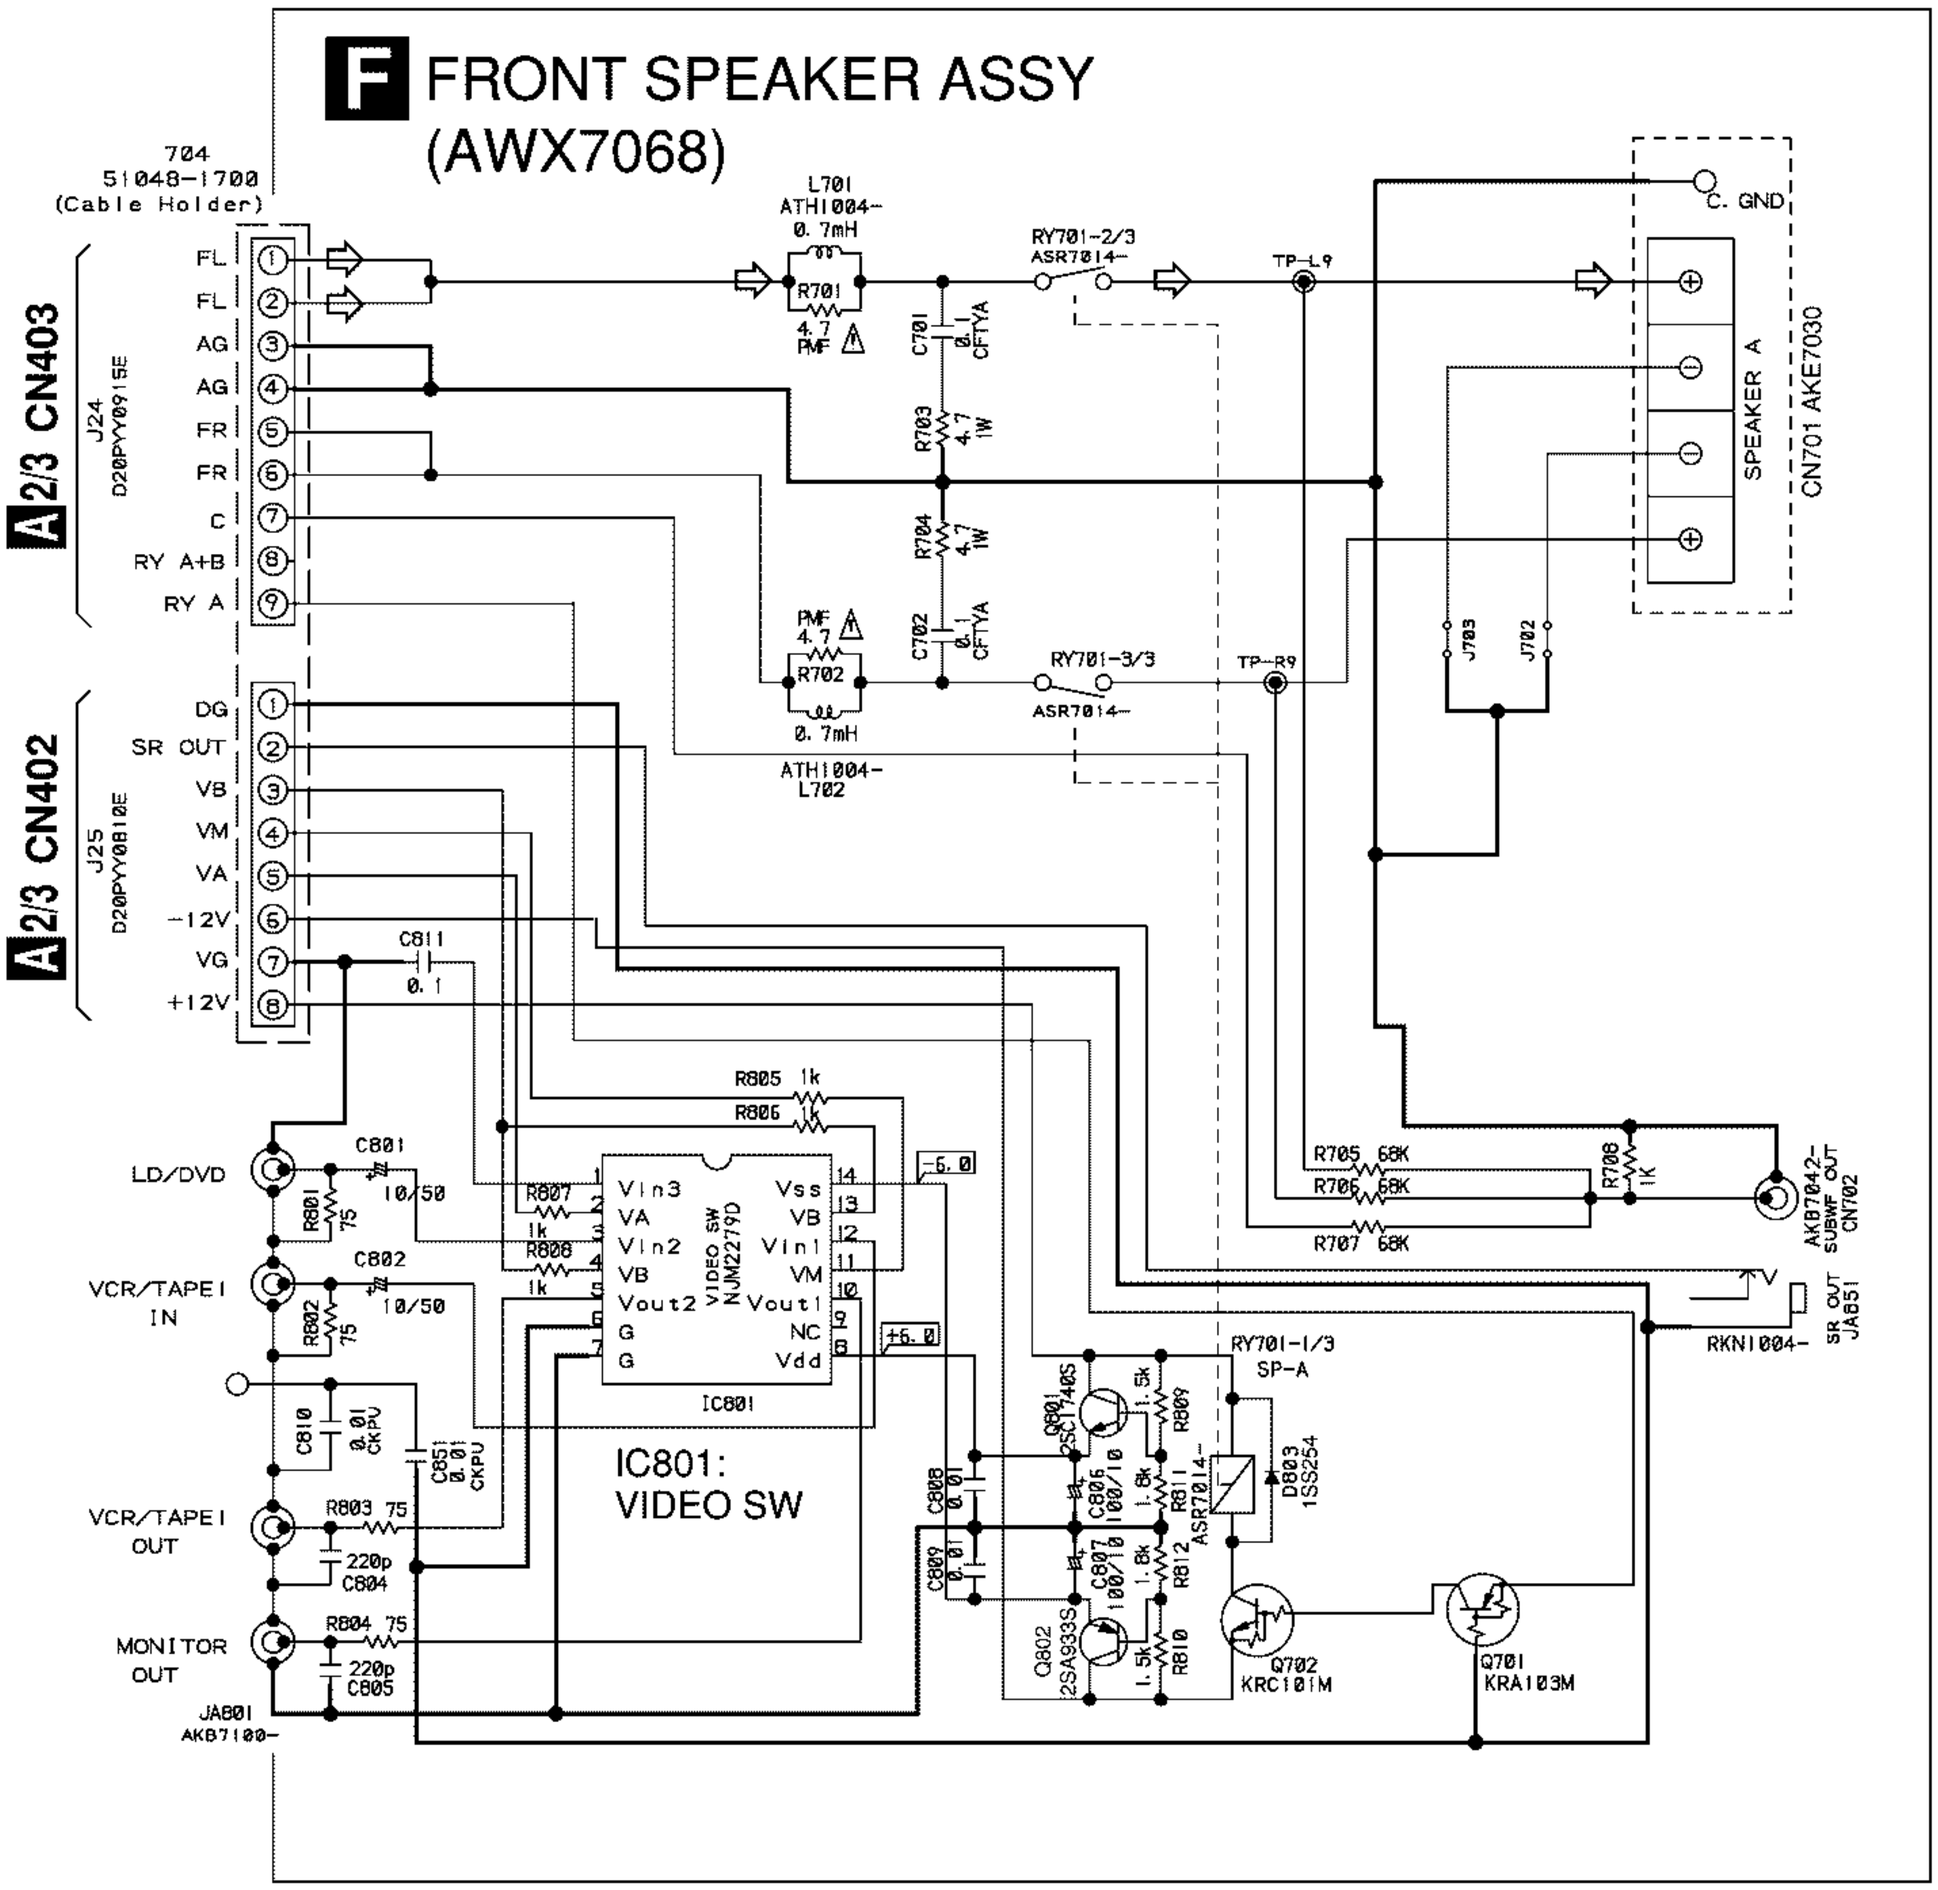

IC801(NJM2279D) LOGIC

FUNCTION	VA	VB	VM
VCR/TAPE	*(L)	L	H
LD/DVD	L	H	H
F-VIDEO	H	H	H
AUDIO	*(L)	*(L)	L

NOTES: NO INDICATED PARTS IS....

RESISTOR: PD1/4PU***J-T
CEMICAL CAPASITOR: CEAT***M**-T
CERAMIC CAPASITOR: CCC... or CKC...

⇨ : AUDIO SIGNAL ROUTE

• NOTE FOR FUSE REPLACEMENT

CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE AND RATINGS ONLY.

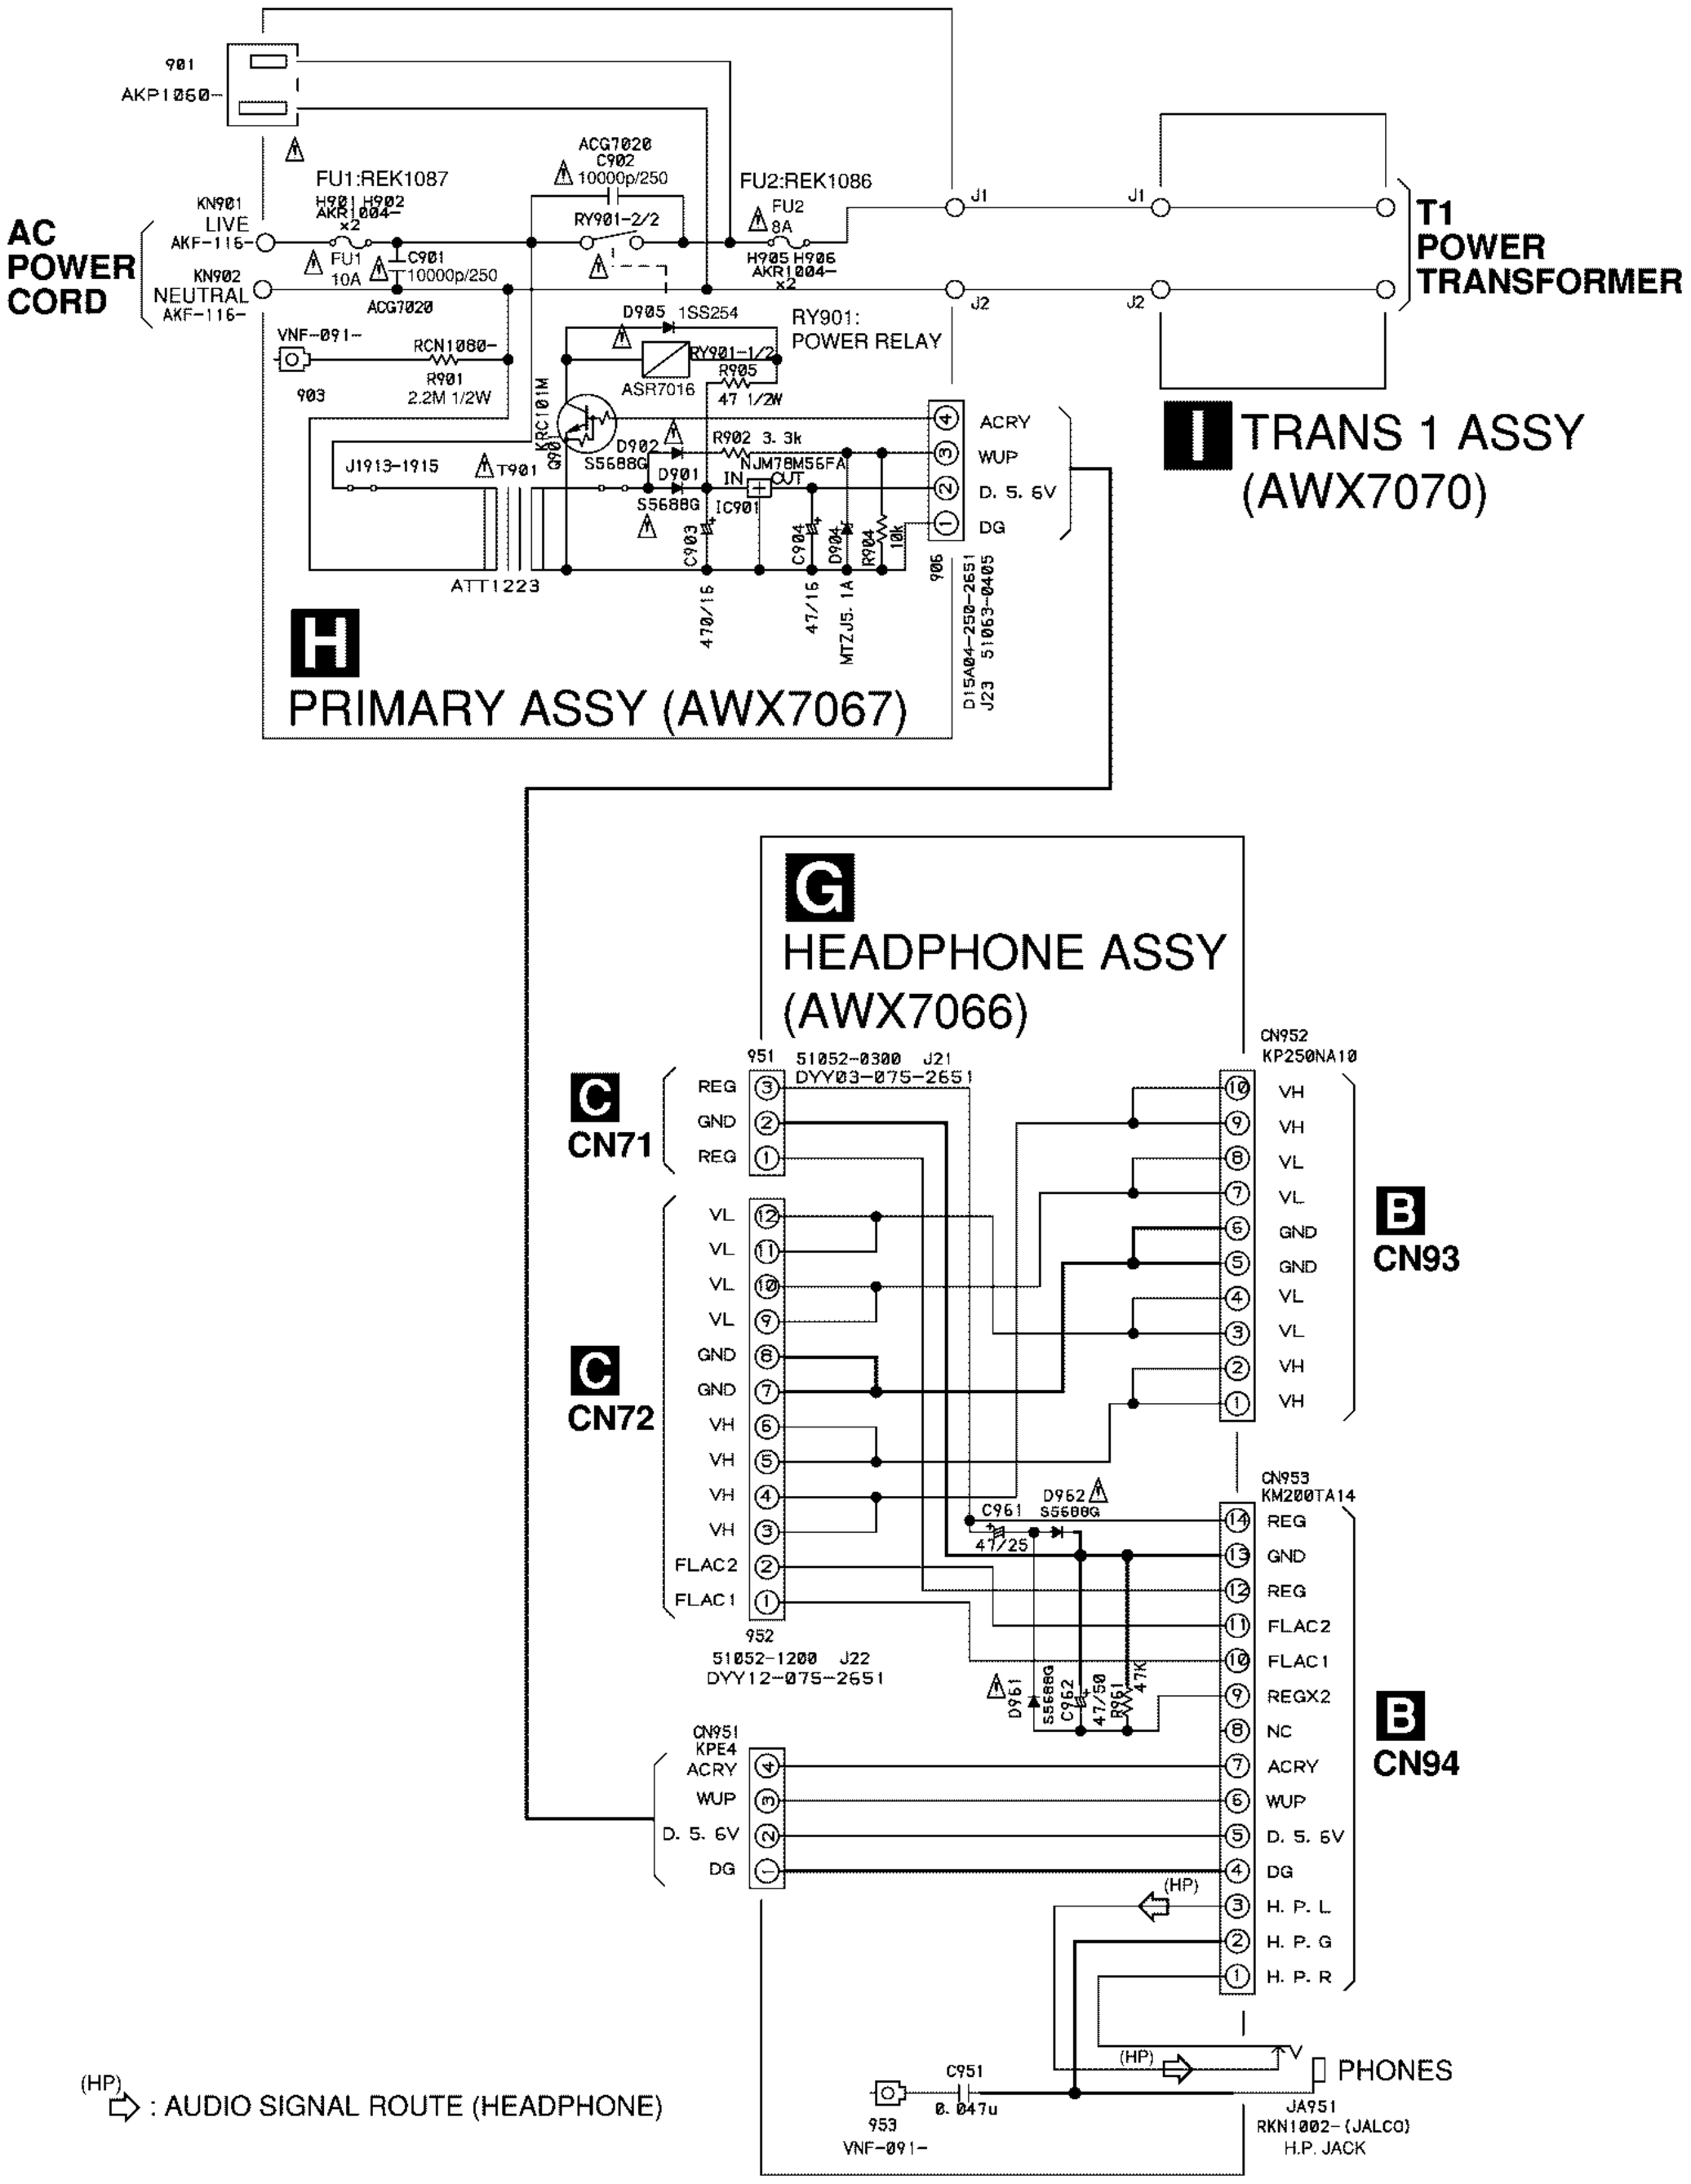

(HP) ⇨ : AUDIO SIGNAL ROUTE (HEADPHONE)

4. PCB CONNECTION DIAGRAM

4.1 MOTHER ASSY

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
B C E	B C E B C E	Transistor
B C E	B C E B C E	Transistor with resistor
D G S	D G S D G S	Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
   For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

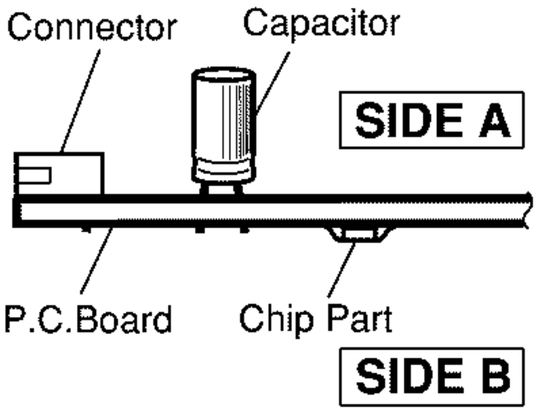

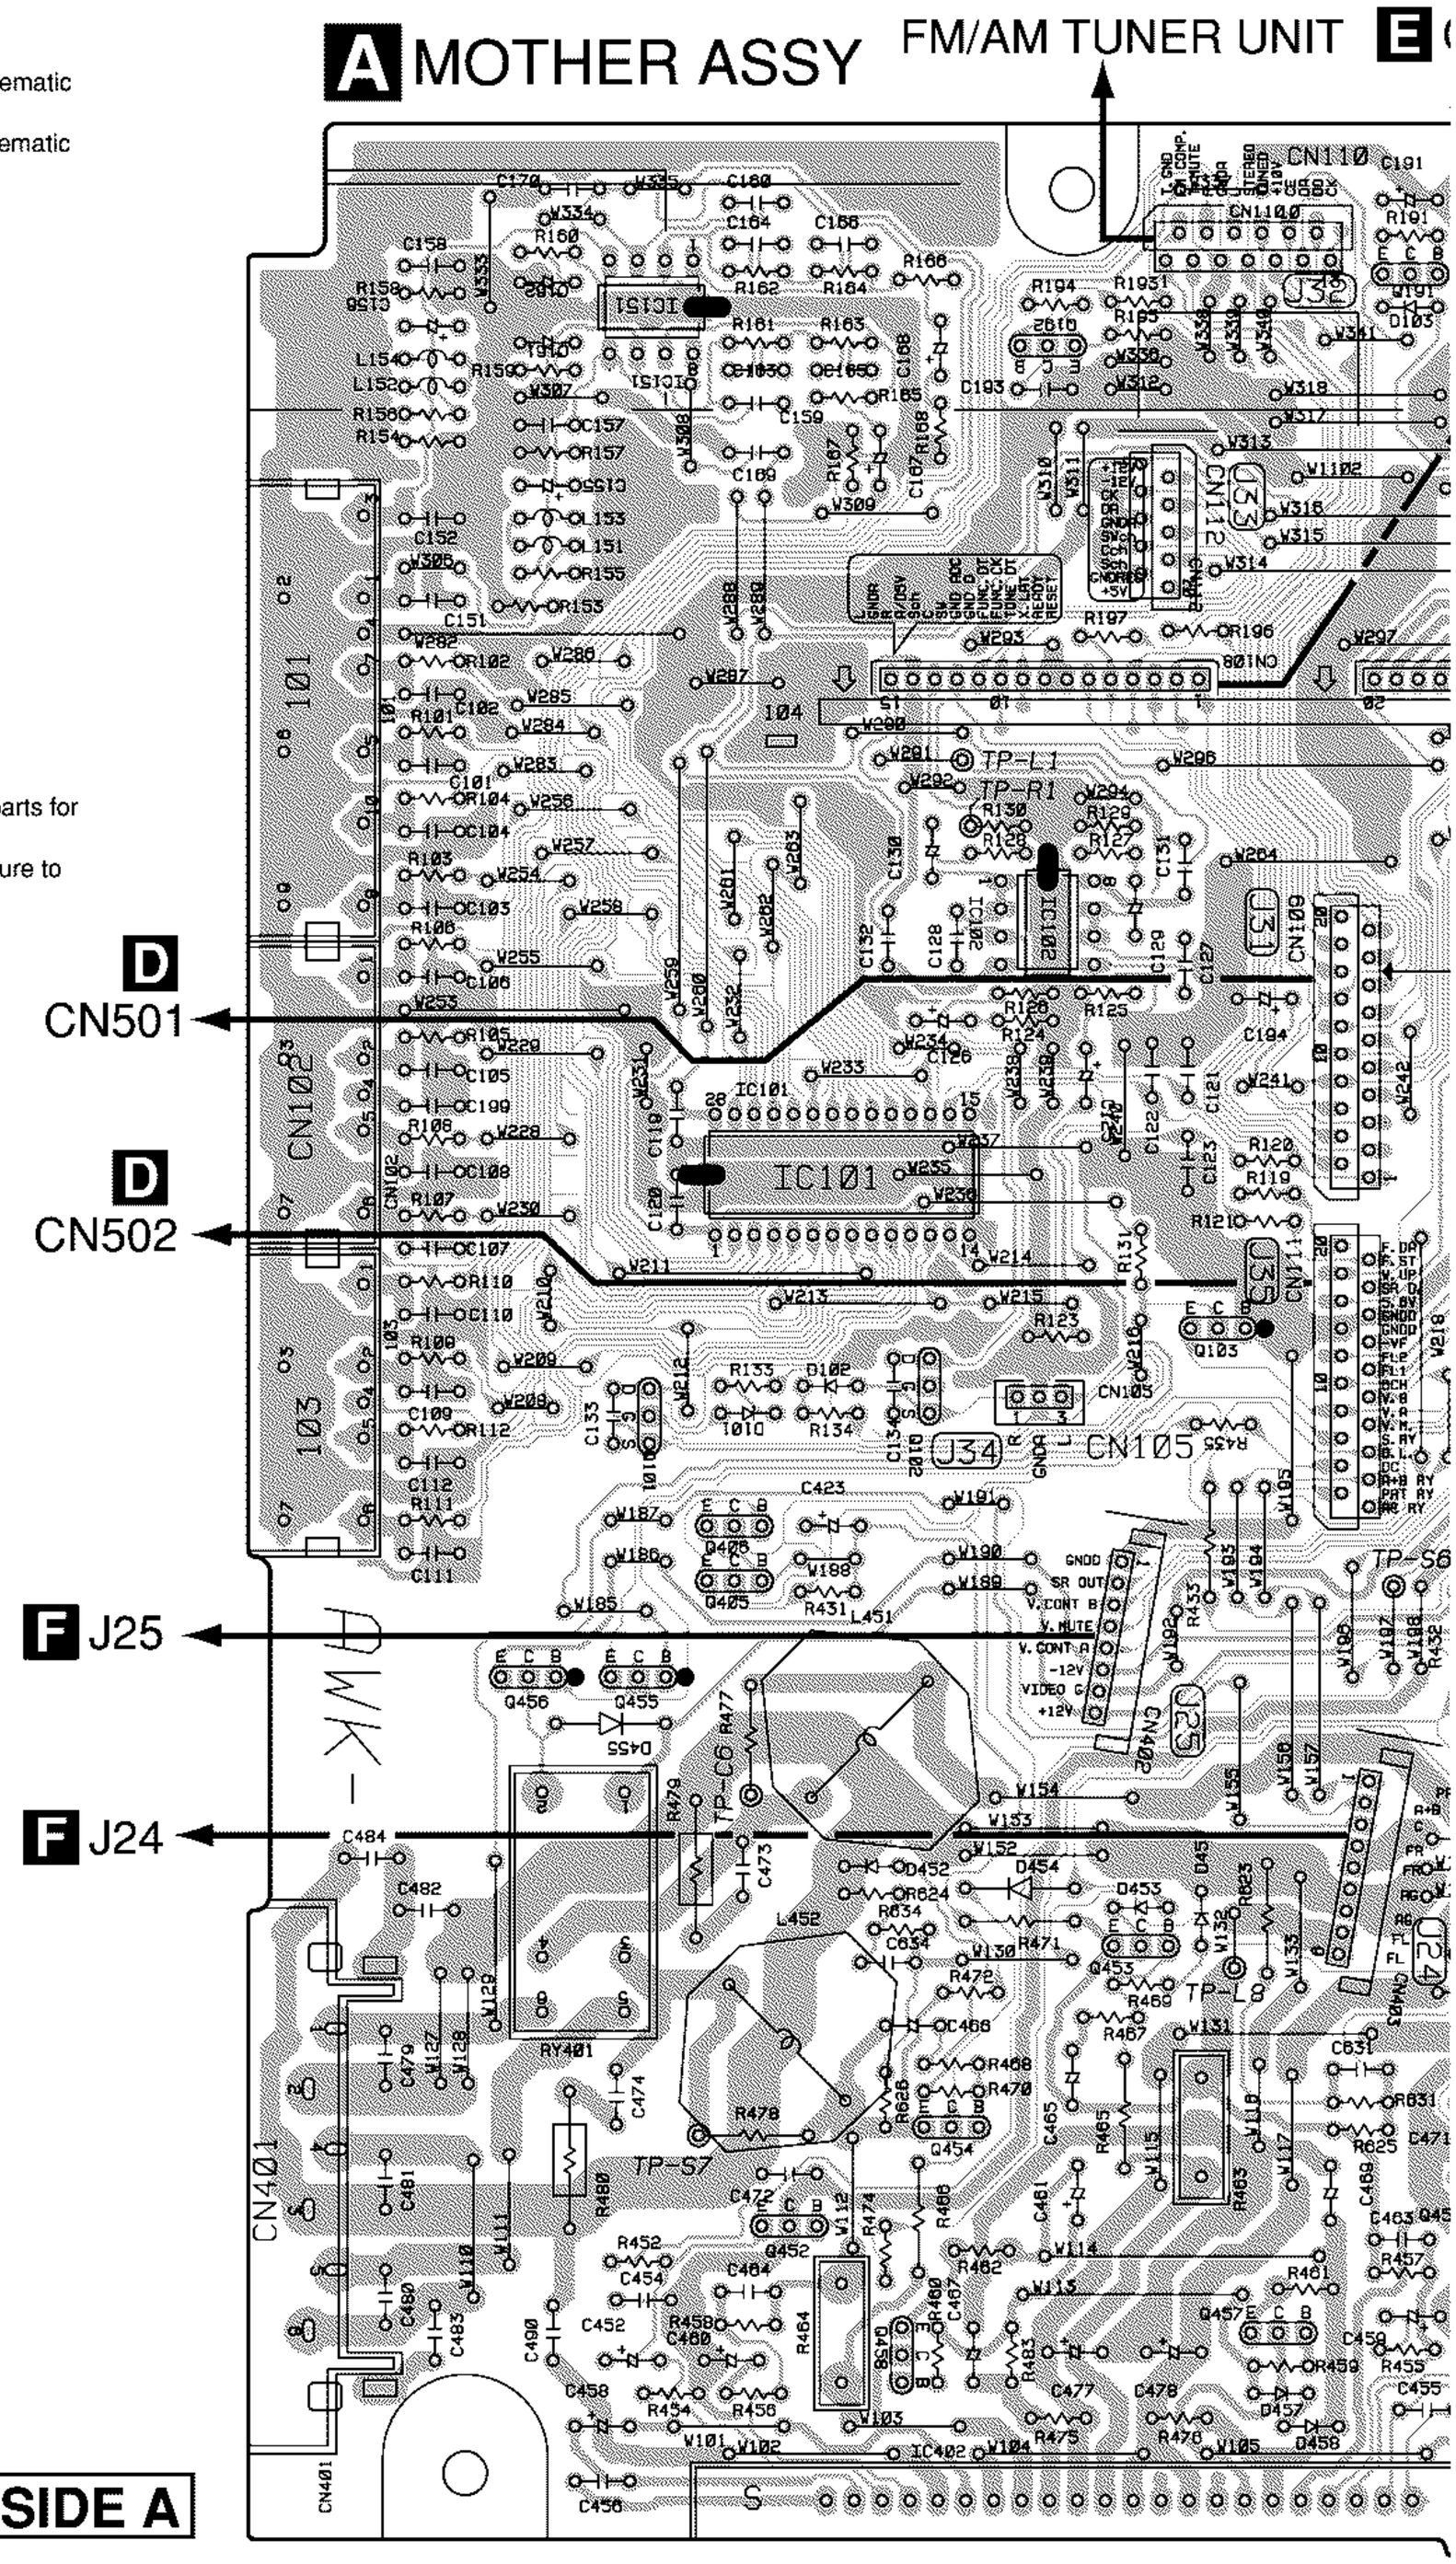

UNIT

CN201

CN202

CMK-P3X

AWX7058 AWX7177

AWX7059 AWX7178

CN203

CN92

CN91

Cutting Line

Bond Mark

TP-S6 TP-L7 TP-R8 TP-R7 TP-C5

CAUTION REPLACE WITH SAME TYPE NO.ICP-N25 MFD.BY ROHM CO.,LTD. FOR IC403

CAUTION REPLACE WITH SAME TYPE NO.ICP-N25 MFD.BY ROHM CO.,LTD. FOR IC607

Knife Space

FL C FR

(ANP7242-A)

191 Q605

Q457 Q451 Q401 Q407

IC601-IC603

Q402-Q404

IC401 Q408

IC607 IC606

IC604 Q604

Q602

Q651-Q654

IC651

Q601 Q603

25

4.2 CONNECTION, TRANS 2 AND FRONT ASSEMBLIES

B CONNECTION ASSY

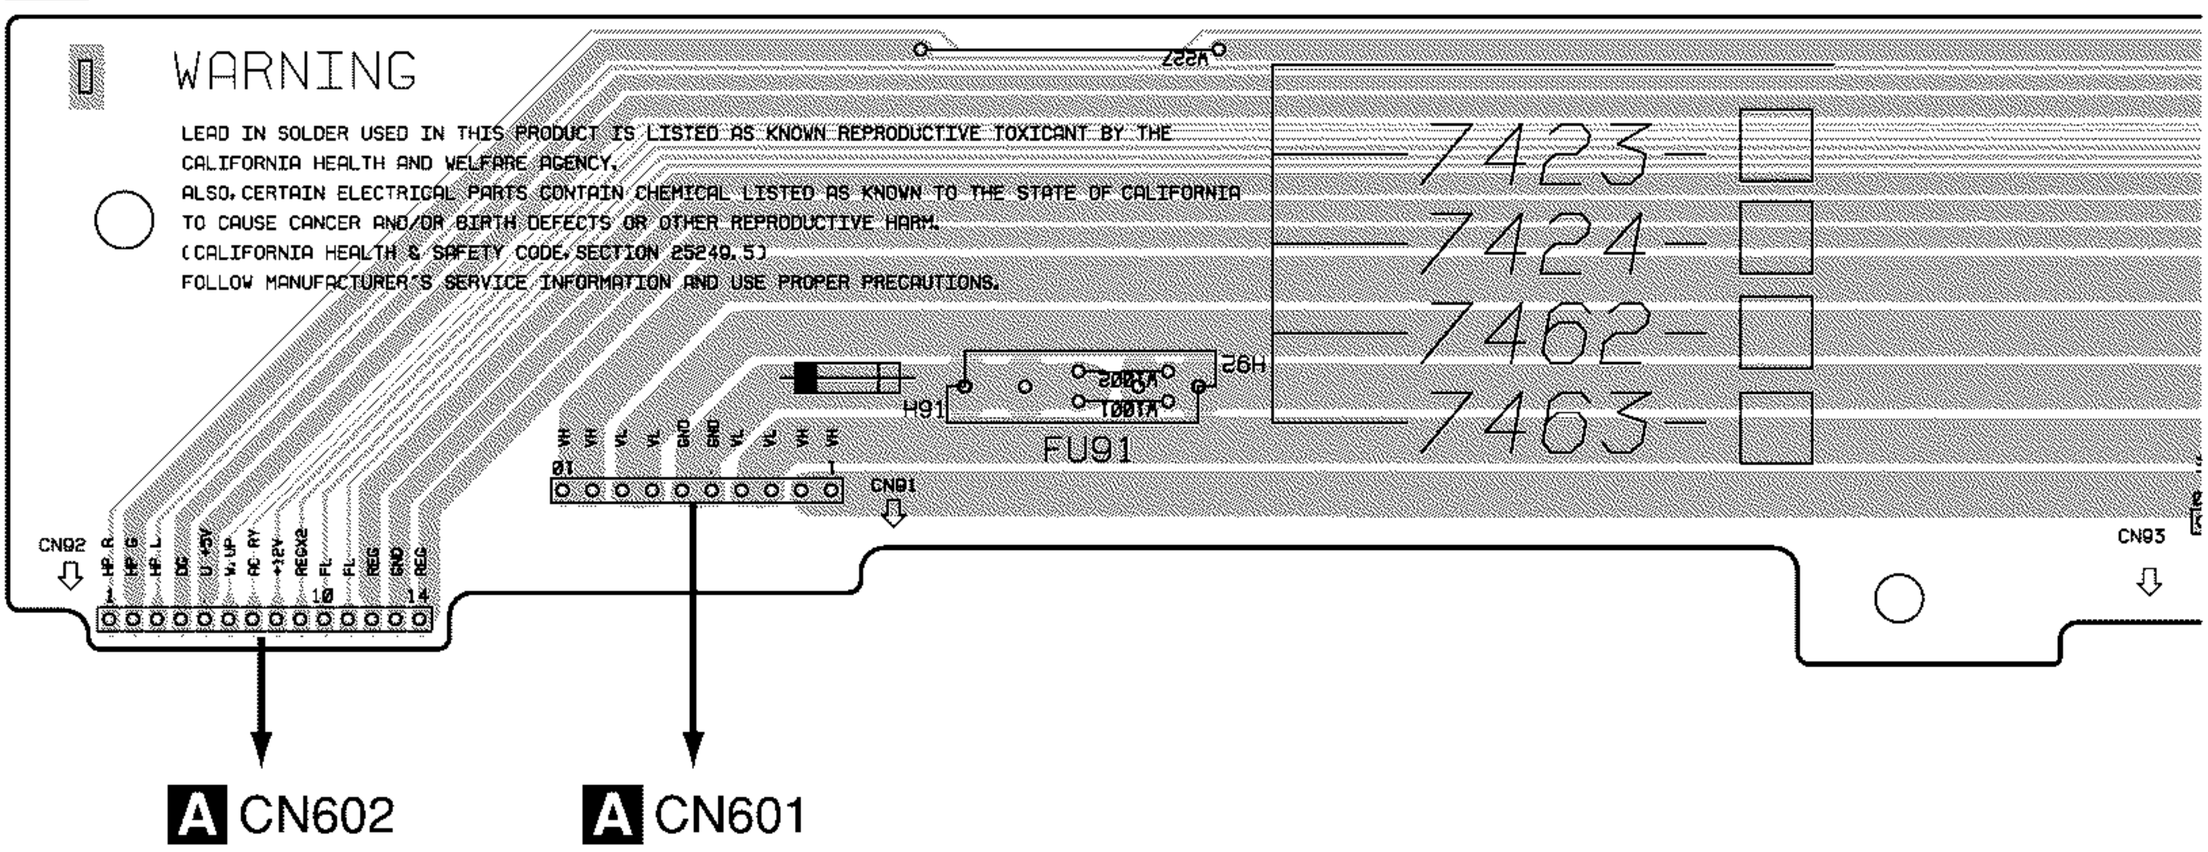
WARNING
LEAD IN SOLDER USED IN THIS PRODUCT IS LISTED AS KNOWN REPRODUCTIVE TOXICANT BY THE CALIFORNIA HEALTH AND WELFARE AGENCY.
ALSO, CERTAIN ELECTRICAL PARTS CONTAIN CHEMICAL LISTED AS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND/OR BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.
(CALIFORNIA HEALTH & SAFETY CODE, SECTION 25249.5)
FOLLOW MANUFACTURER'S SERVICE INFORMATION AND USE PROPER PRECAUTIONS.
7423-
7424-
7462-
7463-
FU91
H91
CN01
CN02
CN93

A CN602 **A** CN601

D FRONT ASSY

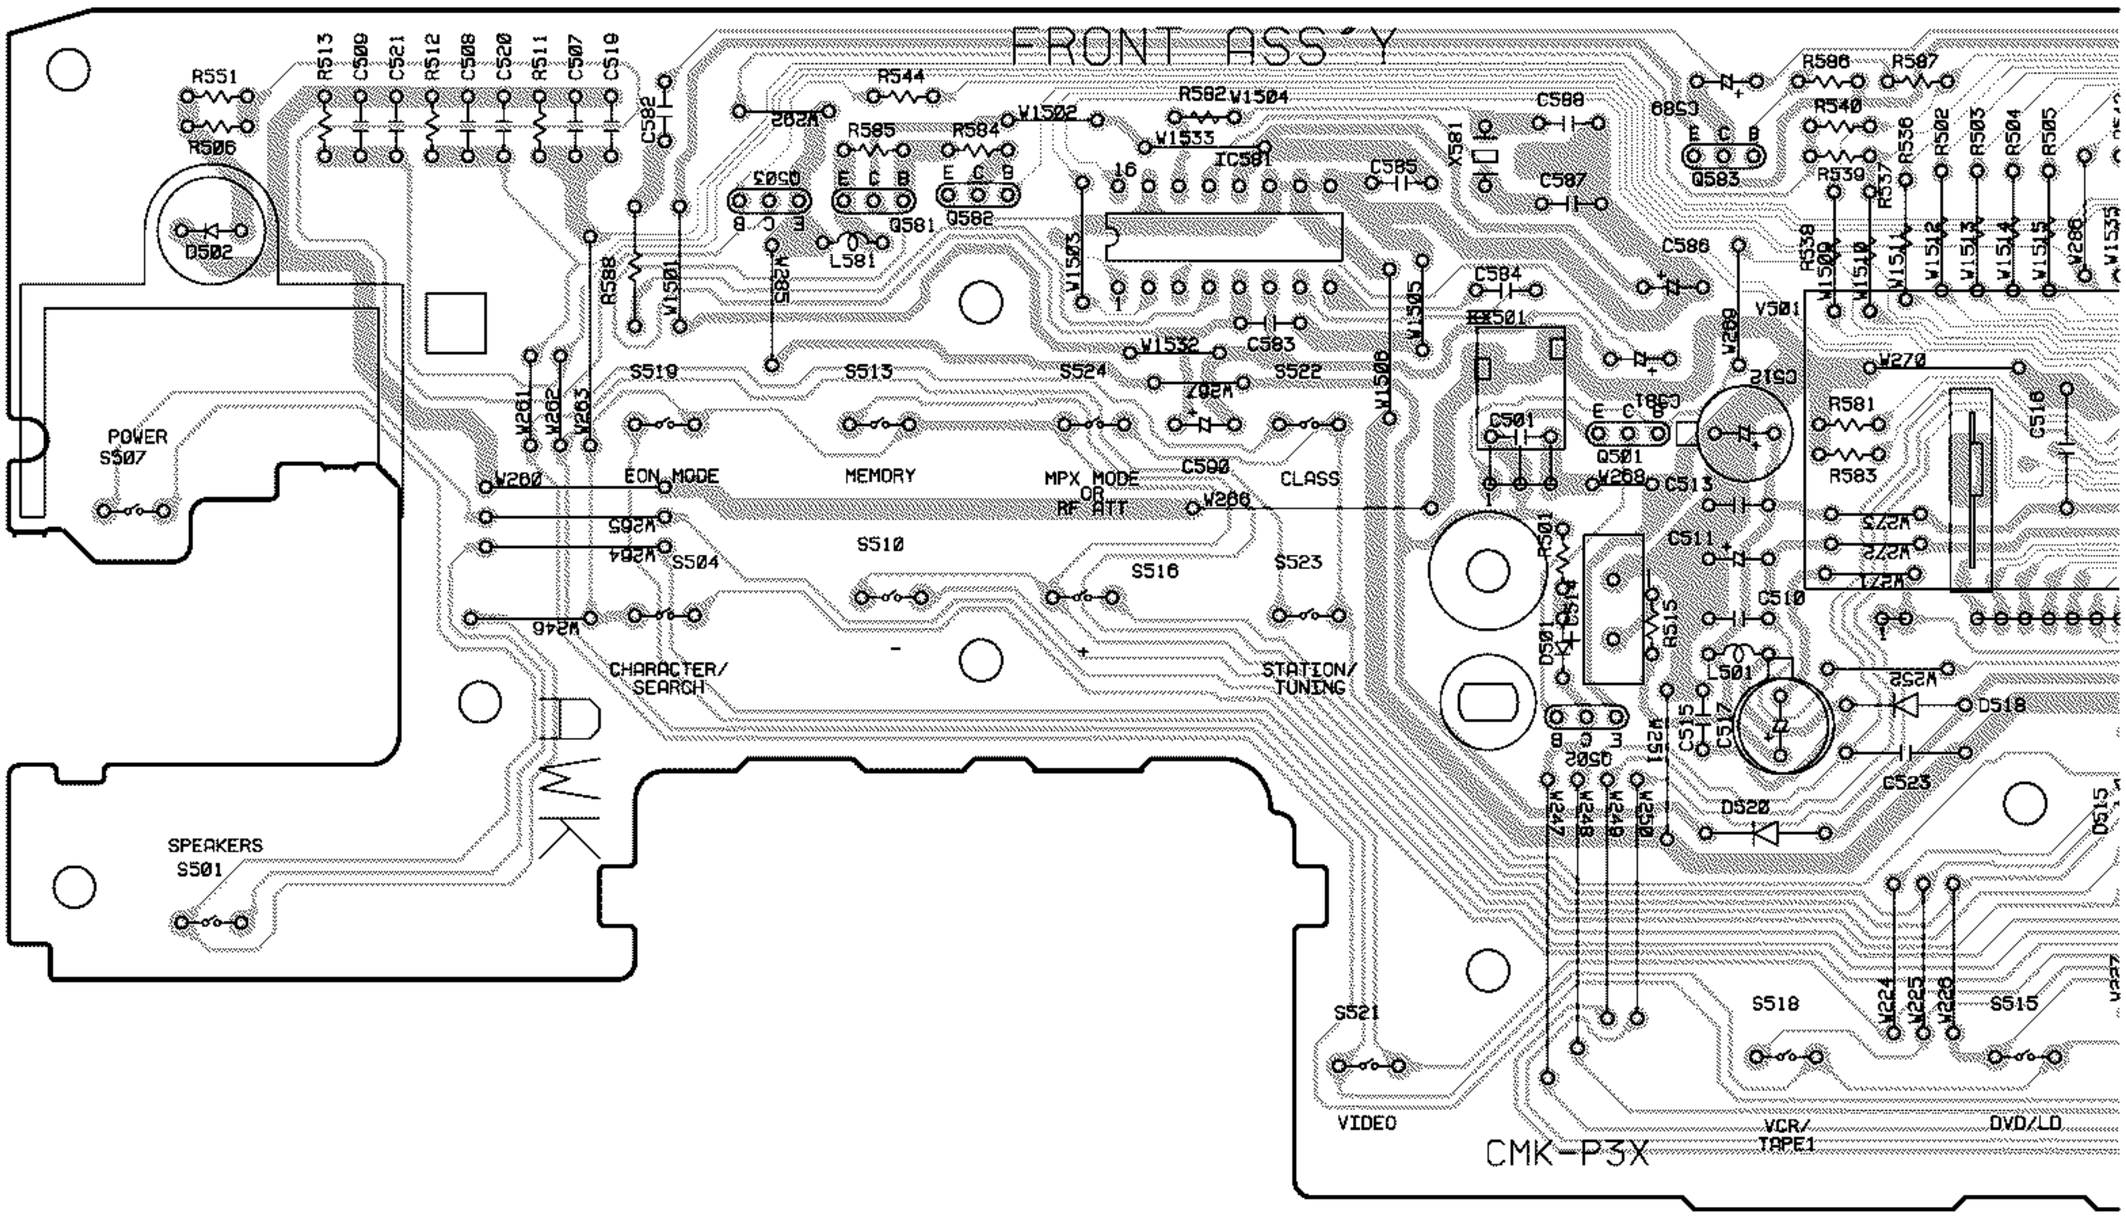

Q503 Q581 Q582 IC581 Q501 Q583 Q502

SIDE A

B **D**

C TRANS 2 ASSY

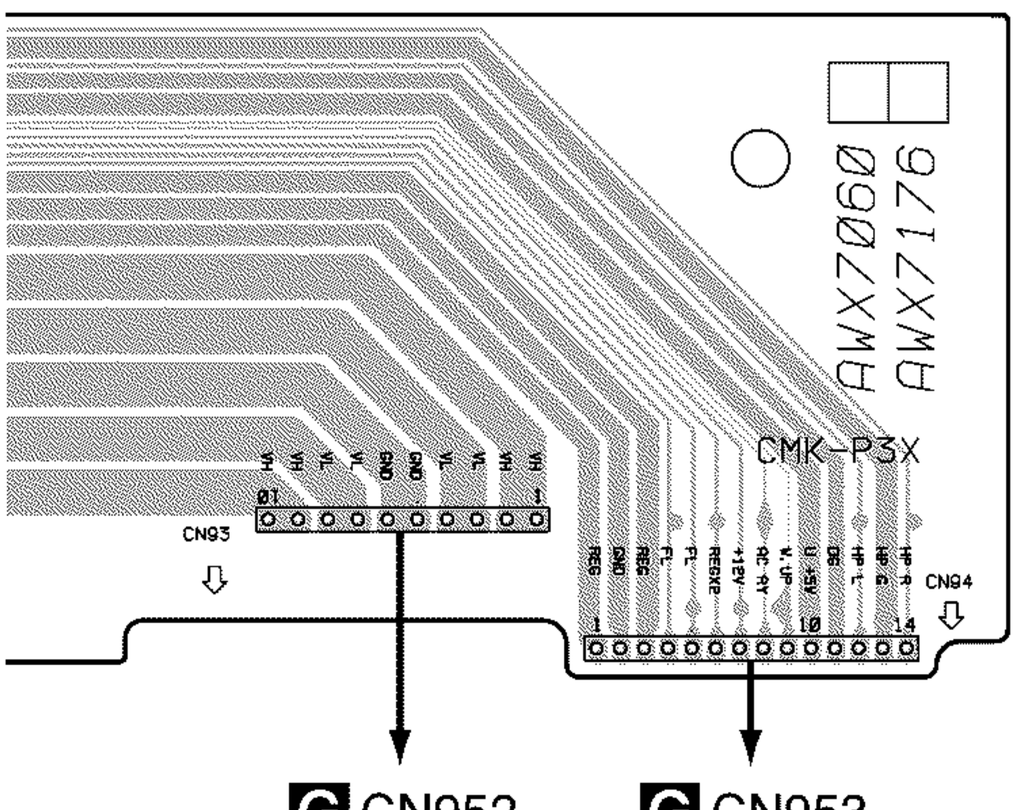

(ANP7242-A)

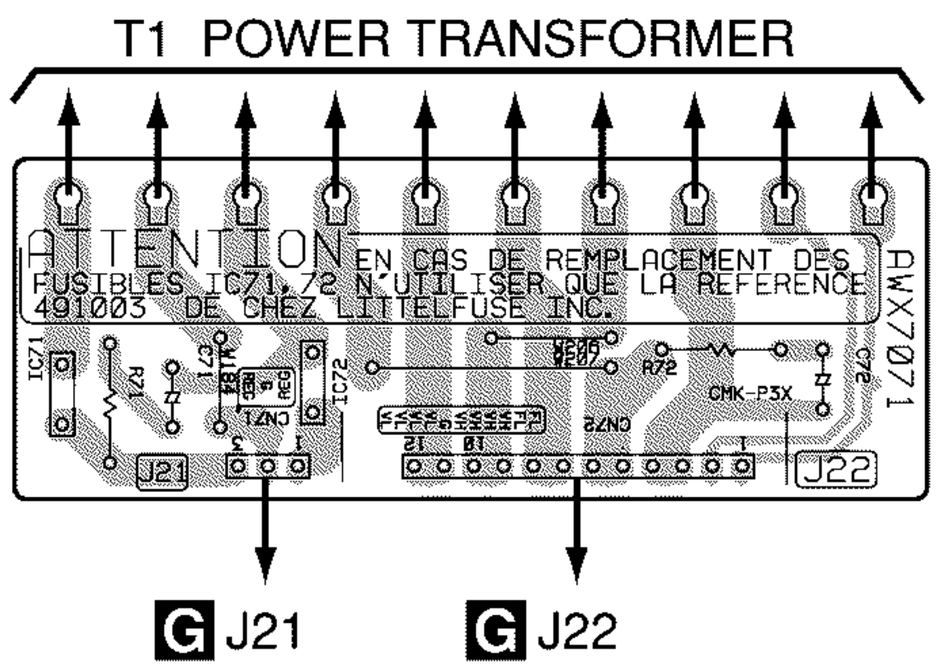

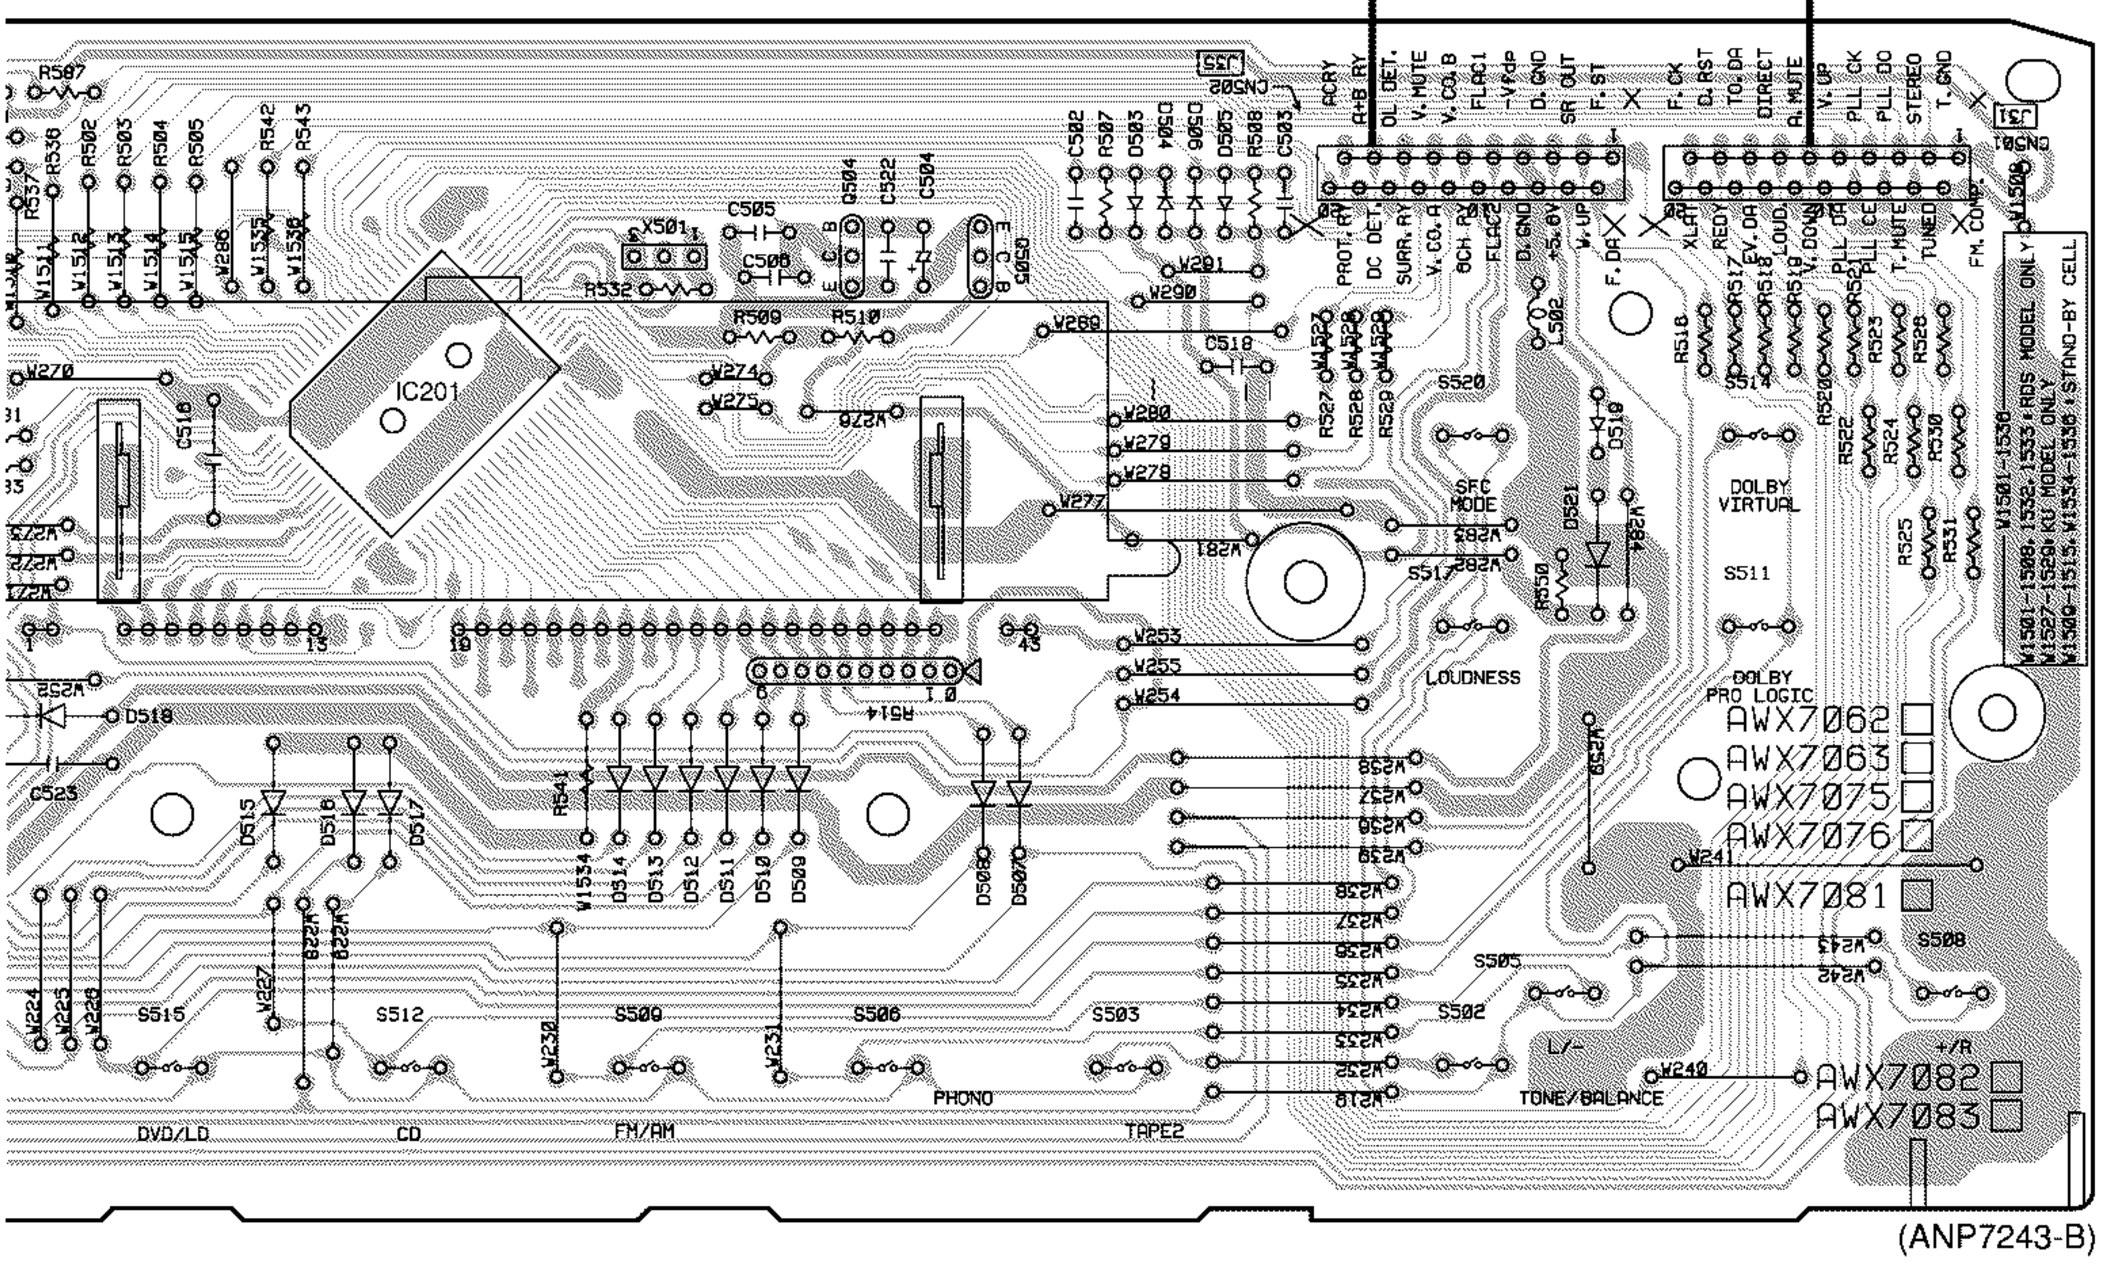

(ANP7243-B)

IC201 Q504 Q505

SIDE A

B C D

4.3 VOLUME DSP ASSY

E VOLUME DSP ASSY

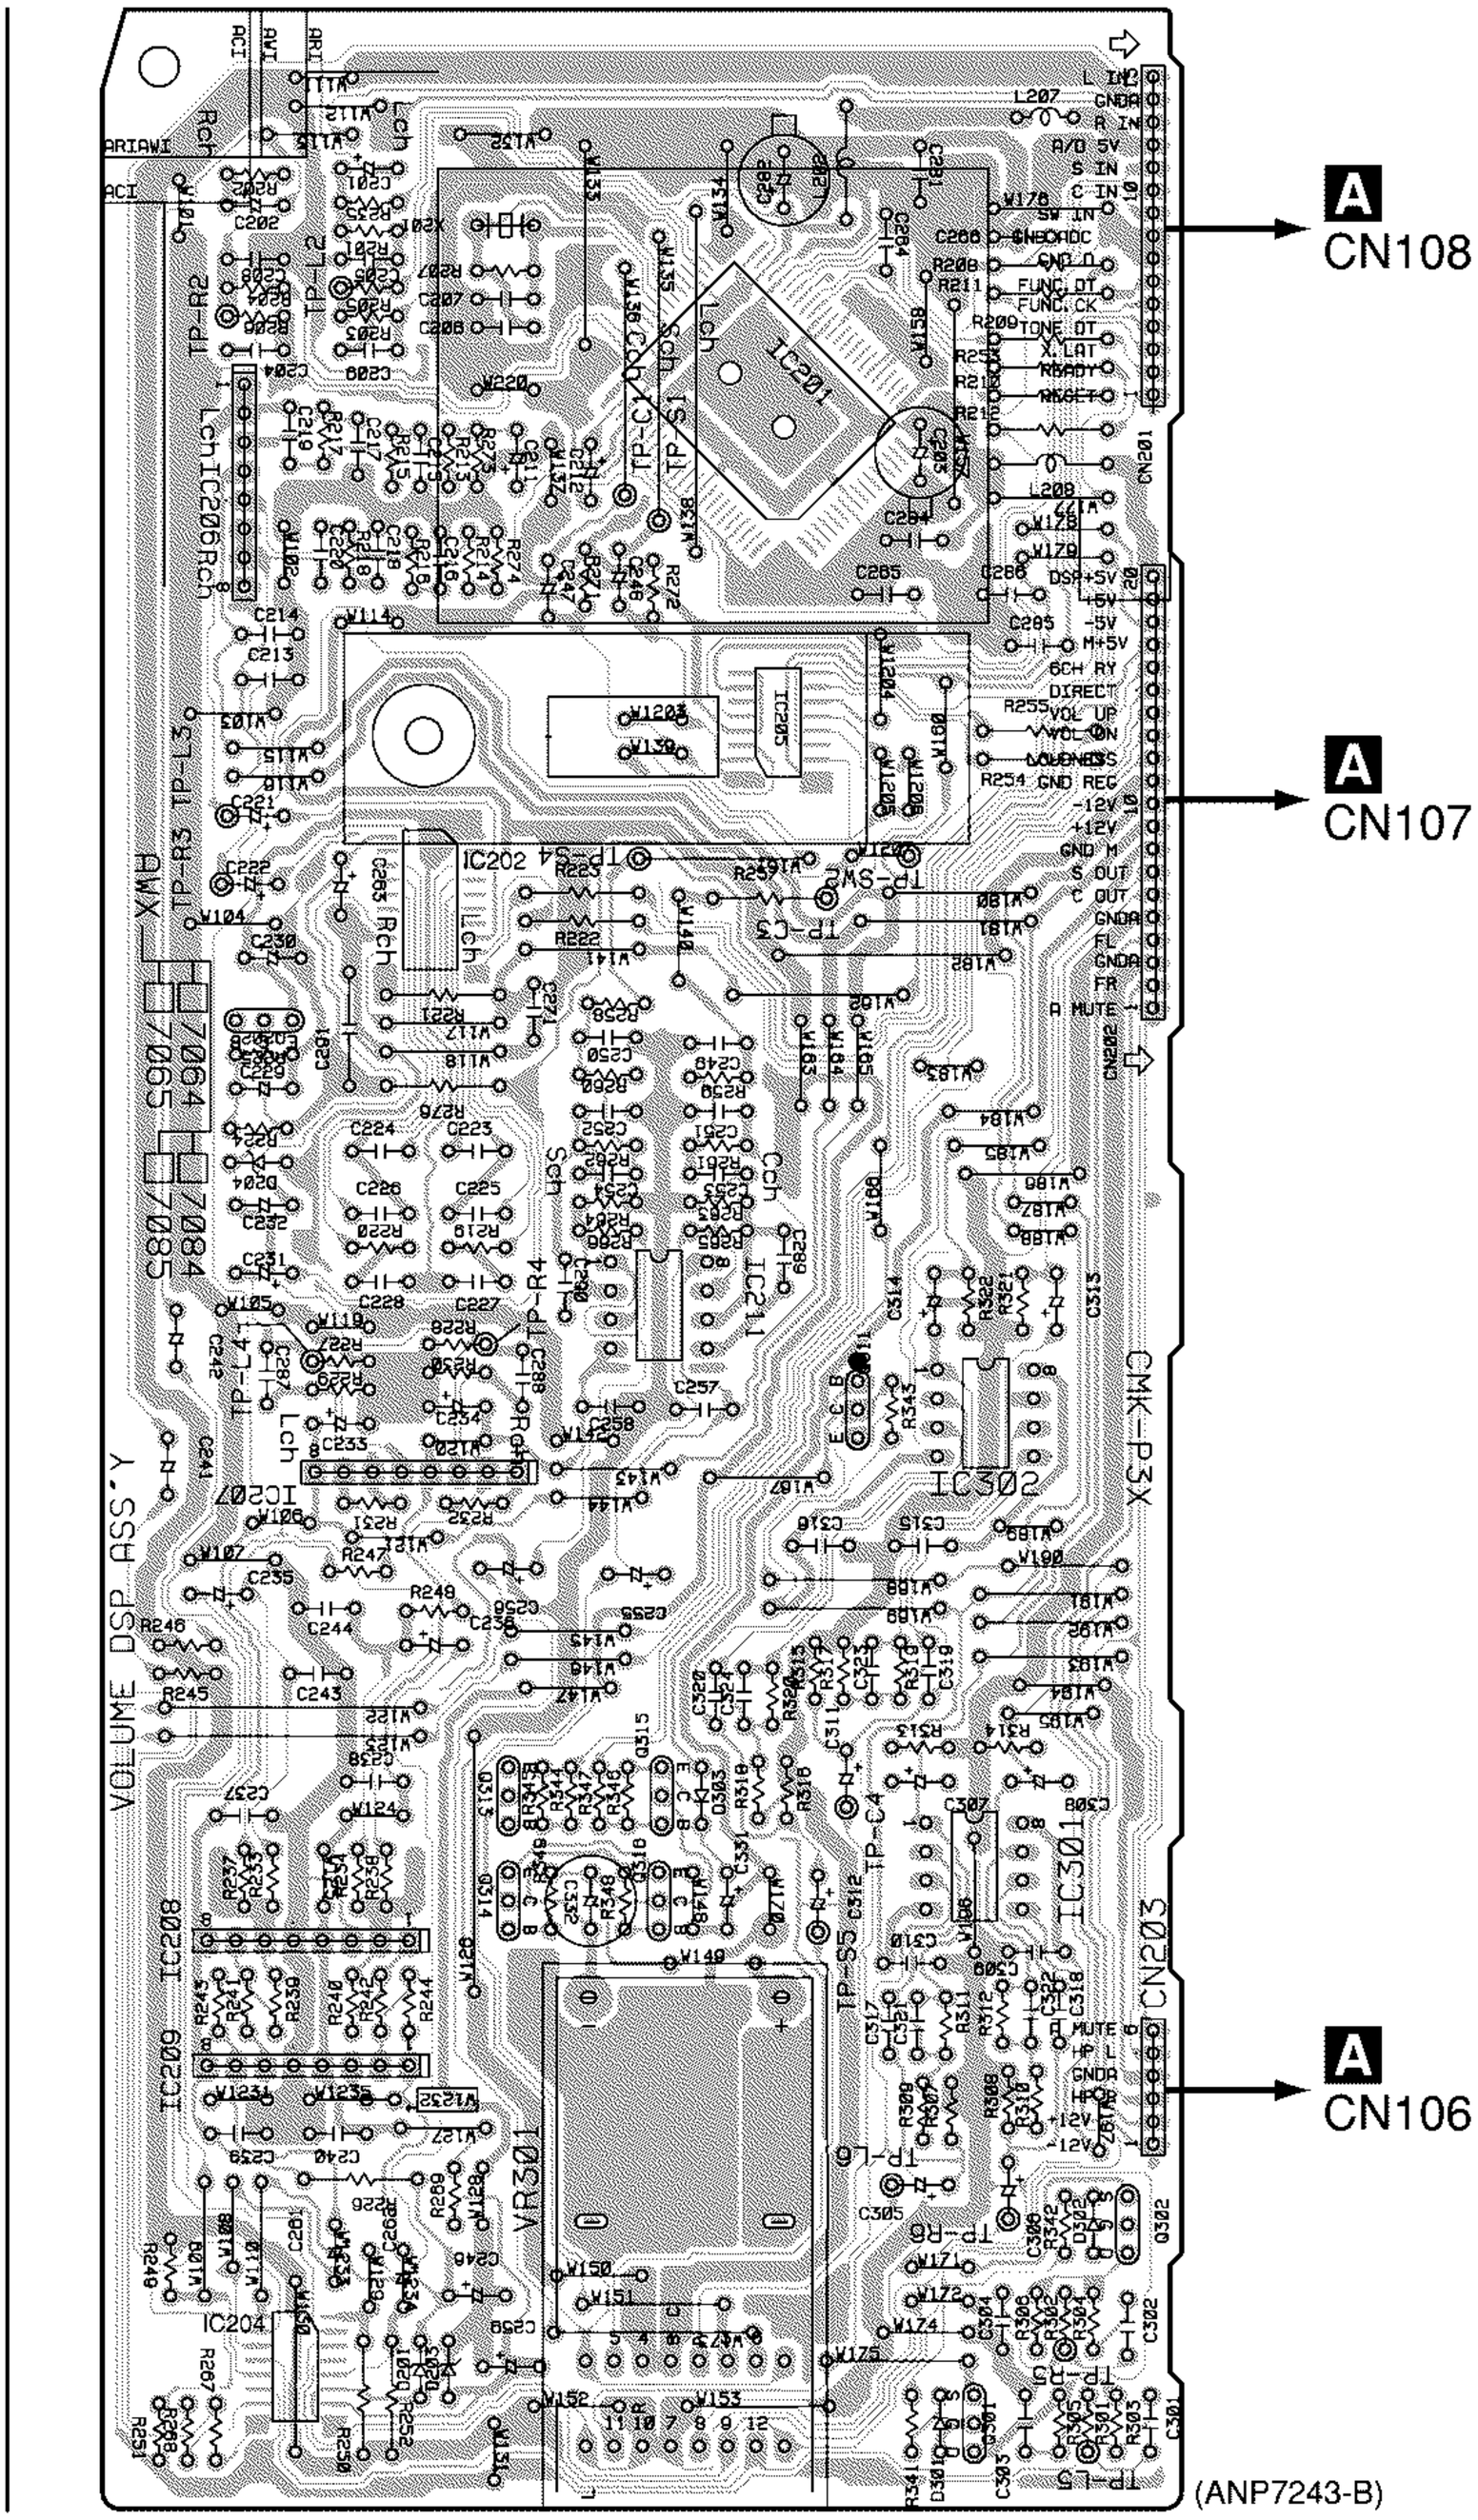

SIDE A

4.4 FRONT SPEAKER, HEADPHONE, PRIMARY AND TRANS 1 ASSEMBLIES

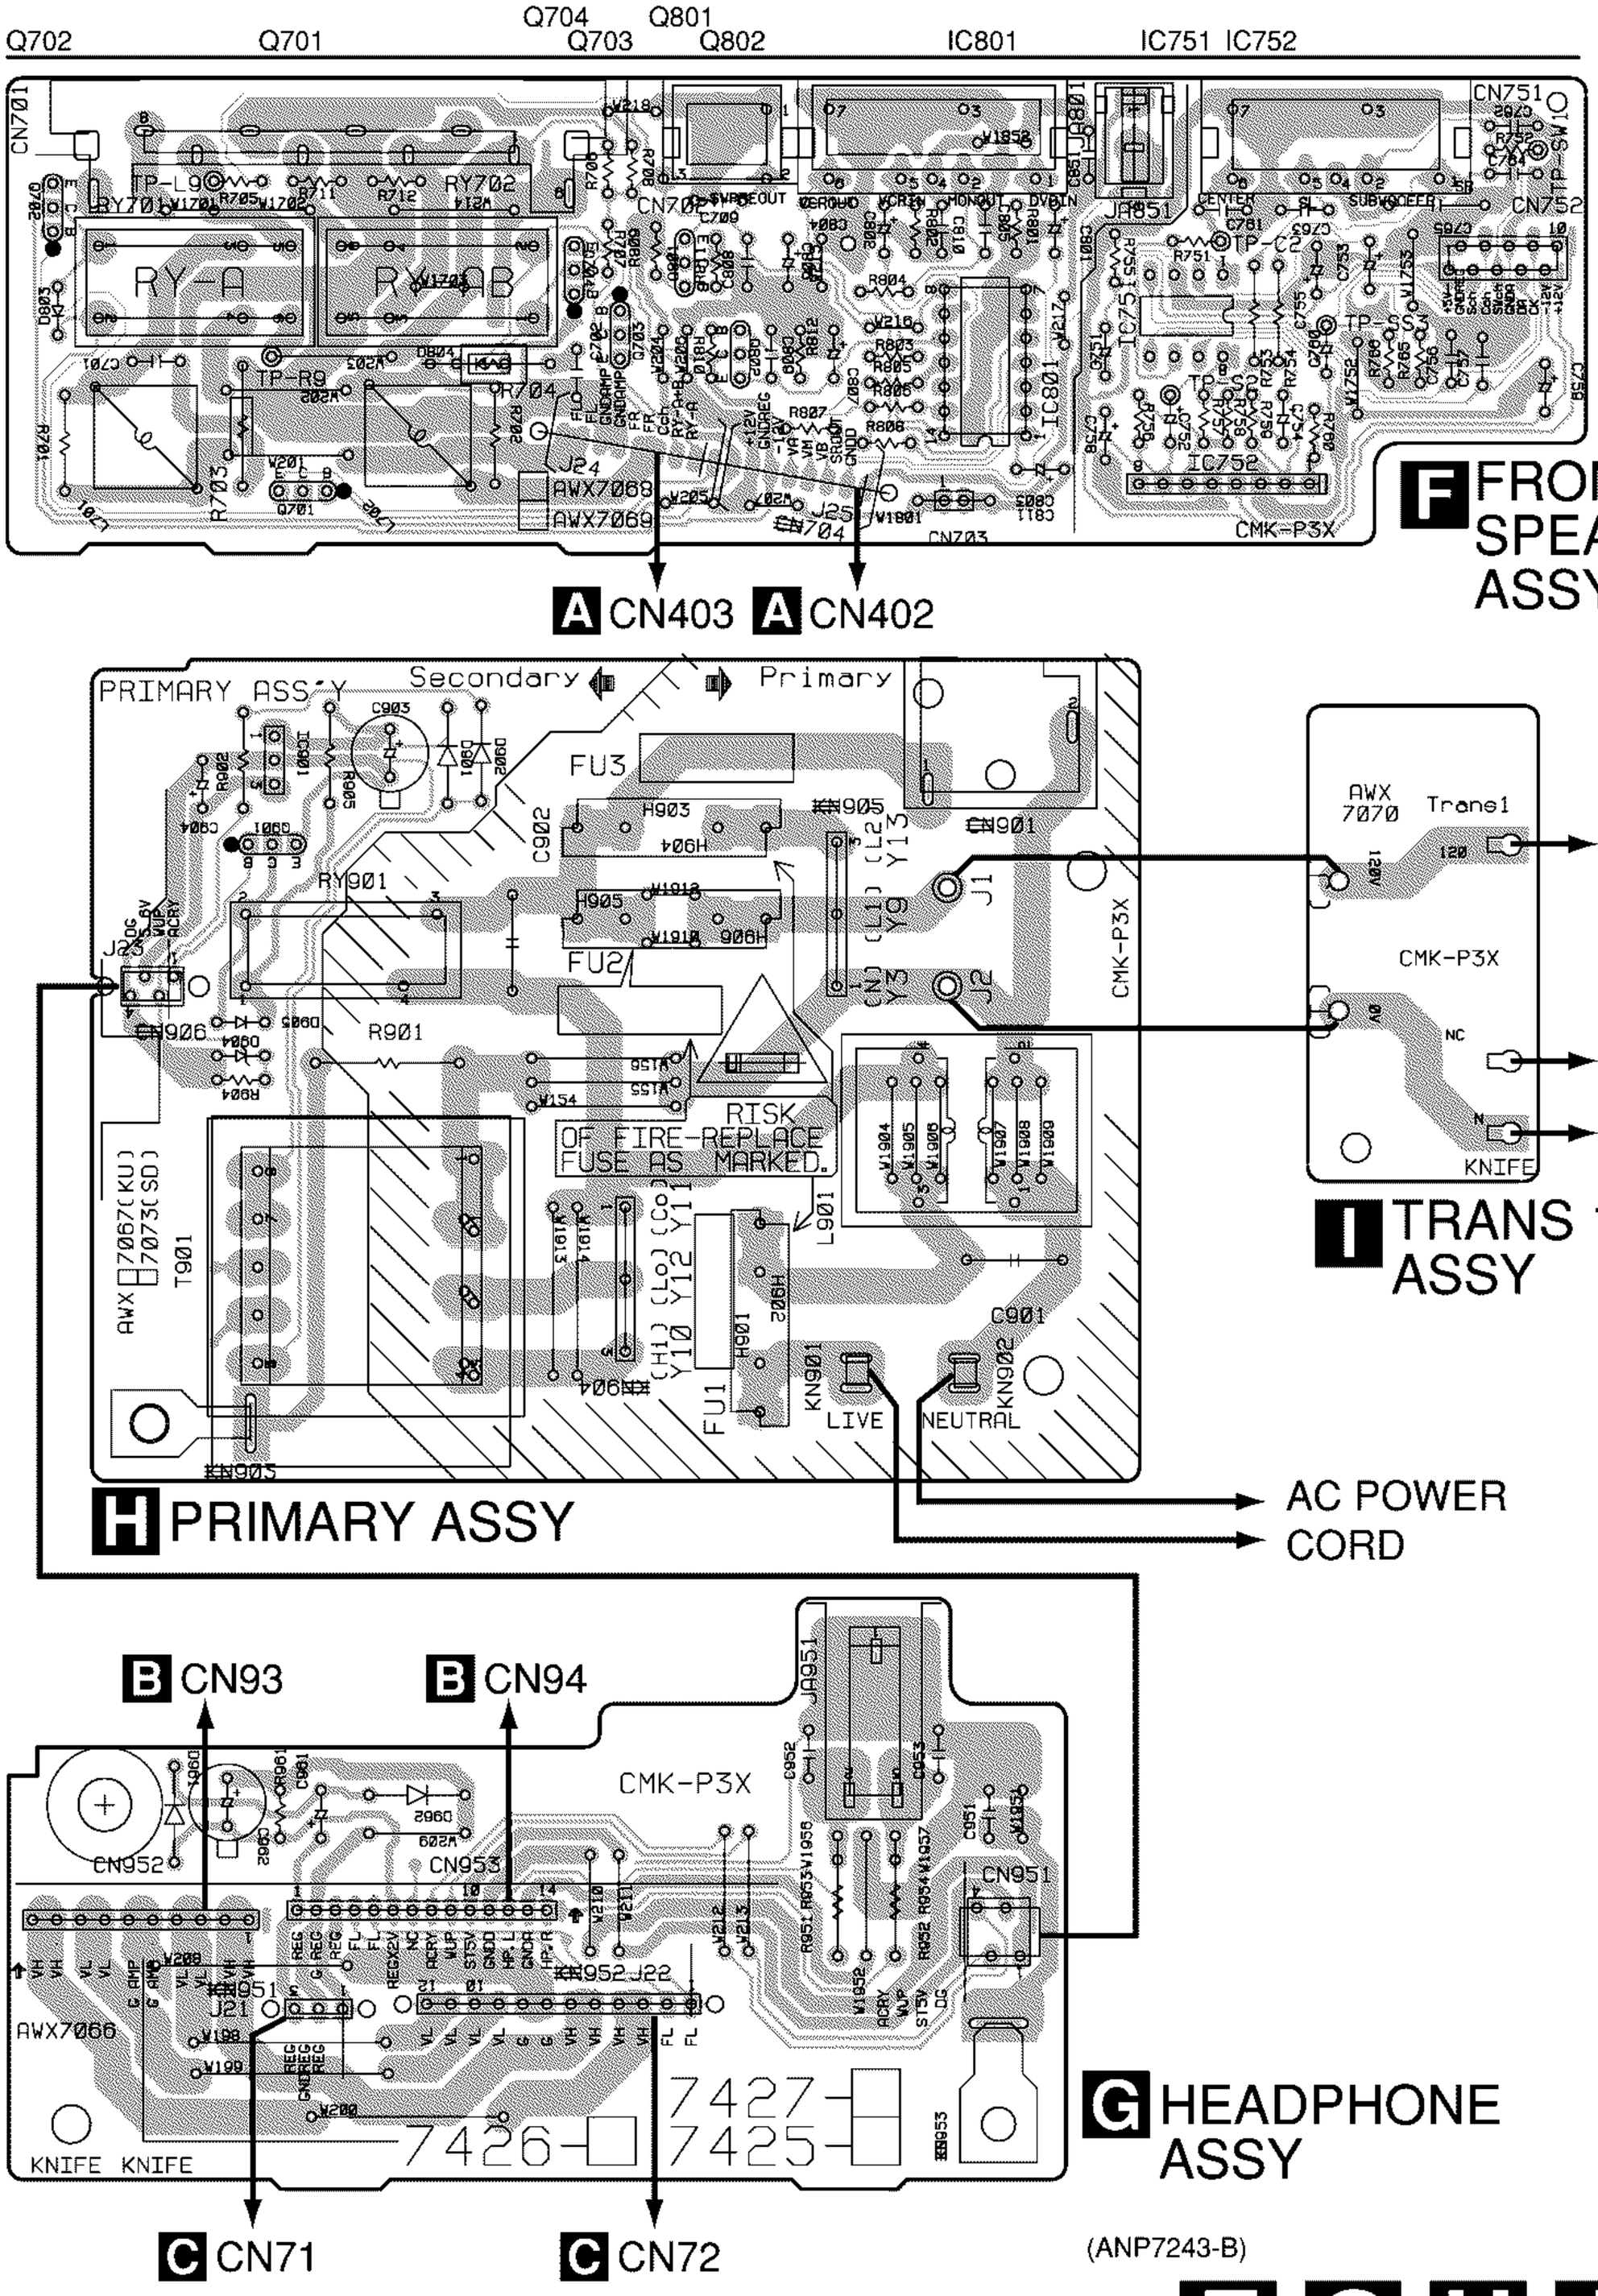

5. PCB PARTS LIST

NOTES: ●*Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
●*The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
●*When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	→	*56 × 10¹*	→	*561 ..... RD1/4PU [5][6][1] J*
47k Ω	→	*47 × 10³*	→	*473 ..... RD1/4PU [4][7][3] J*
0.5 Ω	→	*R50*		*..... RN2H [R][5][0] K*
1 Ω	→	*1R0*		*..... RS1P [1][R][0] K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	→	*562 × 10¹*	→	*5621 ..... RN1/4PC [5][6][2][1] F*

■ LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol and Description	Part No.			Remarks
		VSX-D307/KUXJ	VSX-D307/KUXJI	VSX-D307/KCXJI	
NSP	MAIN ASSY	AWK7423	AWX7423	AWK7462	
	├ MOTHER ASSY	AWX7058	AWX7058	AWX7177	
NSP	├ CONNECTION ASSY	AWX7060	AWX7060	AWX7176	
NSP	└ TRANS 2 ASSY	AWX7071	AWX7071	AWX7071	
NSP	COMPLEX ASSY	AWK7425	AWK7425	AWK7425	
	├ FRONT ASSY	AWX7062	AWX7062	AWX7062	
	├ VOLUME DSP ASSY	AWX7064	AWX7064	AWX7064	
	├ FRONT SPEAKER ASSY	AWX7068	AWX7068	AWX7068	
	├ HEADPHONE ASSY	AWX7066	AWX7066	AWX7066	
	├ PRIMARY ASSY	AWX7067	AWX7067	AWX7067	
NSP	└ TRANS 1 ASSY	AWX7070	AWX7070	AWX7070	

A MOTHER ASSY

(1) CONTRAST TABLE

AWX7058 and AWX7177 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7058	AWX7177	
⚠	IC607	Not used	ICP-N25	

(2) PARTS LIST FOR AWX7058

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC101	E-SW IC	TC9163AN
	IC102	OP-AMP IC	NJM4558D-D
	IC151	IC	UPC4570C
⚠	IC401	AUDIO IC	PAC007A
⚠	IC402	AUDIO IC	PAC007A
⚠	IC403	IC PROTECTOR	ICP-N25
	IC601	REGULATOR IC	NJM78M12FA
	IC602	REGULATOR IC	NJM79M12FA
	IC603	REGULATOR IC	NJM78M05FA
	IC604	OP-AMP IC	NJM4558D-D
	IC605	OP-AMP IC	NJM4558D-D
	IC606	REGULATOR IC	NJM78M05FA
	IC651	OP-AMP IC	NJM4558D-D
	Q191	TRANSISTOR	2SC1740S
	Q401	TRANSISTOR	2SC2878
	Q402	TRANSISTOR	2SC2878
	Q403	TRANSISTOR	2SC2240
	Q404	TRANSISTOR	2SC2240
	Q405	TRANSISTOR	2SC1740S
	Q406	TRANSISTOR	2SC1740S
	Q407	TRANSISTOR	2SC2705
	Q408	TRANSISTOR	2SC2705
	Q451	TRANSISTOR	2SC2878
	Q452	TRANSISTOR	2SC2878
	Q453	TRANSISTOR	2SC2240
	Q454	TRANSISTOR	2SC2240
	Q455	TRANSISTOR	KRA103M
	Q456	TRANSISTOR	KRC101M
	Q457	TRANSISTOR	2SC2705
	Q458	TRANSISTOR	2SC2705
	Q601	POWER MOS FET	IRF9540A
	Q602	POWER MOS FET	IRF540A
	Q603	TRANSISTOR	2SC1845
	Q604	TRANSISTOR	2SA992
	Q651	TRANSISTOR	2SC2878
	Q652	TRANSISTOR	2SC2878
	Q653	TRANSISTOR	2SC2878
	Q654	TRANSISTOR	2SC2878
	D103	DIODE	1SS254
	D190	ZENER DIODE	MTZJ5.1B

Mark	No.	Description	Part No.
	D191	ZENER DIODE	MTZJ5.1B
	D401	DIODE	1SS254
	D402	DIODE	1SS254
	D403	DIODE	1SS254
	D404	DIODE	1SS254
	D405	DIODE	1SS254
	D406	DIODE	1SS254
	D451	DIODE	1SS254
	D452	DIODE	1SS254
	D453	DIODE	1SS254
	D454	DIODE	1SS254
	D455	DIODE	1SS254
	D457	DIODE	1SS254
	D458	DIODE	1SS254
	D601	DIODE	GBU6D
	D602	DIODE	GBU6D
⚠	D603	DIODE	S5688G
⚠	D604	DIODE	S5688G
⚠	D605	DIODE	S5688G
	D606	DIODE	S5688G
	D607	ZENER DIODE	MTZJ18B
	D608	ZENER DIODE	MTZJ18B
	D609	DIODE	1SS254
	D610	DIODE	1SS254
	D611	DIODE	1SS254
	D612	DIODE	1SS254
	D613	DIODE	1SS254
	D614	DIODE	1SS254
	D615	DIODE	1SS254
	D616	DIODE	1SS254
	D617	DIODE	1SS254
	D618	DIODE	1SS254
	D619	DIODE	S5688G
	D620	DIODE	S5688G
	D623	ZENER DIODE	MTZJ27B
	D624	ZENER DIODE	MTZJ6.8A
	D625	ZENER DIODE	MTZJ16B

RELAY

RY401	RELAY	ASR7014

COILS

L191	RADIAL INDUCTOR	LFA470J
L451	COIL (0.7mH)	ATH1004
L452	COIL (0.7mH)	ATH1004

CAPACITORS

C119	CERAMIC CAPACITOR	CKCYF103Z50
C120	CERAMIC CAPACITOR	CKCYF103Z50
C121	CERAMIC CAPACITOR	CCCSL101J50
C122	CERAMIC CAPACITOR	CCCSL101J50
C123	CERAMIC CAPACITOR	CCCSL101J50
C125	ELECT. CAPACITOR	CEAT2R2M50
C126	ELECT. CAPACITOR	CEAT2R2M50
C129	ELECT. CAPACITOR	CEANP4R7M50
C130	ELECT. CAPACITOR	CEANP4R7M50
C131	CERAMIC CAPACITOR	CKCYF103Z50
C132	CERAMIC CAPACITOR	CKCYF103Z50
C155	ELECT. CAPACITOR	CEAT100M50
C156	ELECT. CAPACITOR	CEAT100M50
C161	ELECT. CAPACITOR	CEAT470M25
C162	ELECT. CAPACITOR	CEAT470M25

Mark	No.	Description	Part No.
	C163	FILM CAPACITOR	CQMBA822J50
	C164	FILM CAPACITOR	CQMBA822J50
	C165	MYLAR FILM CAPACITOR	CQMA242J50
	C166	MYLAR FILM CAPACITOR	CQMA242J50
	C167	ELECT. CAPACITOR	CEAT2R2M50
	C168	ELECT. CAPACITOR	CEAT2R2M50
	C169	CERAMIC CAPACITOR	CKCYF103Z50
	C170	CERAMIC CAPACITOR	CKCYF103Z50
	C190	ELECT. CAPACITOR	CEAT101M10
	C191	ELECT. CAPACITOR	CEAT101M16
	C192	ELECT. CAPACITOR	CEAT101M10
	C194	ELECT. CAPACITOR	CEAT1R0M50
	C199	CERAMIC CAPACITOR	CGCYX103M16
	C401	ELECT. CAPACITOR	CEAT4R7M50
	C402	ELECT. CAPACITOR	CEAT4R7M50
	C403	CERAMIC CAPACITOR	CCCSL331J50
	C404	CERAMIC CAPACITOR	CCCSL331J50
	C405	CERAMIC CAPACITOR	CCCSL121J50
	C406	CERAMIC CAPACITOR	CCCSL121J50
	C407	ELECT. CAPACITOR	CEAT1R0M50
	C408	ELECT. CAPACITOR	CEAT1R0M50
	C409	ELECT. CAPACITOR	CEAT101M16
	C410	ELECT. CAPACITOR	CEAT101M16
	C411	ELECT. CAPACITOR	CEAT101M6R3
	C413	CERAMIC CAPACITOR	CCCSL3R0C50
	C414	CERAMIC CAPACITOR	CCCSL3R0C50
	C415	ELECT. CAPACITOR	CEANP1R0M50
	C416	ELECT. CAPACITOR	CEANP1R0M50
⚠	C417	ELECT. CAPACITOR	CEANP2R2M2A
	C420	ELECT. CAPACITOR	CEANP2R2M2A
	C421	CERAMIC CAPACITOR	CCCSL221J50
	C422	CERAMIC CAPACITOR	CCCSL221J50
	C423	ELECT. CAPACITOR	CEAT221M10
⚠	C425	ELECT. CAPACITOR	CEHAQ100M2A
⚠	C426	ELECT. CAPACITOR	CEHAQ100M2A
	C430	CERAMIC CAPACITOR	CKCYF103Z50
	C451	ELECT. CAPACITOR	CEAT4R7M50
	C452	ELECT. CAPACITOR	CEAT4R7M50
	C453	CERAMIC CAPACITOR	CCCSL331J50
	C454	CERAMIC CAPACITOR	CCCSL331J50
	C455	CERAMIC CAPACITOR	CCCSL121J50
	C456	CERAMIC CAPACITOR	CCCSL121J50
	C457	ELECT. CAPACITOR	CEAT1R0M50
	C458	ELECT. CAPACITOR	CEAT1R0M50
	C459	ELECT. CAPACITOR	CEAT101M16
	C460	ELECT. CAPACITOR	CEAT101M16
	C461	ELECT. CAPACITOR	CEAT101M6R3
	C463	CERAMIC CAPACITOR	CCCSL3R0C50
	C464	CERAMIC CAPACITOR	CCCSL3R0C50
	C465	ELECT. CAPACITOR	CEANP1R0M50
	C466	ELECT. CAPACITOR	CEANP1R0M50
	C467	ELECT. CAPACITOR	CEANP2R2M2A
	C469	ELECT. CAPACITOR	CEANP2R2M2A
	C471	CERAMIC CAPACITOR	CCCSL221J50
	C472	CERAMIC CAPACITOR	CCCSL221J50
	C473	AUDIO FILM CAPACITOR	CFTYA104J50
	C474	AUDIO FILM CAPACITOR	CFTYA104J50
⚠	C477	ELECT. CAPACITOR	CEHAQ100M2A
⚠	C478	ELECT. CAPACITOR	CEHAQ100M2A
	C490	CERAMIC CAPACITOR	CKCYF103Z50

Mark	No.	Description	Part No.
	C601	ELECTROLYTIC CAPACITOR (8200µF/71V)	ACH7018
	C602	ELECTROLYTIC CAPACITOR (8200µF/71V)	ACH7018
	C603	ELECT. CAPACITOR	CEAT101M2A
	C604	ELECT. CAPACITOR	CEAT101M2A
	C605	ELECT. CAPACITOR	CEAT222M25
	C606	ELECT. CAPACITOR	CEAT102M25
	C607	CERAMIC CAPACITOR	CKCYF103Z50
	C608	CERAMIC CAPACITOR	CKCYF103Z50
	C609	ELECT. CAPACITOR	CEAT101M25
	C610	ELECT. CAPACITOR	CEAT101M25
	C611	CERAMIC CAPACITOR	CKCYF103Z50
	C612	ELECT. CAPACITOR	CEAT470M10
	C613	ELECT. CAPACITOR	CEAT1R0M50
	C614	ELECT. CAPACITOR	CEAT1R0M50
	C615	CERAMIC CAPACITOR	CKCYF103Z50
	C616	CERAMIC CAPACITOR	CKCYF103Z50
	C617	CERAMIC CAPACITOR	CKCYF103Z50
	C618	CERAMIC CAPACITOR	CKCYF103Z50
	C619	ELECT. CAPACITOR	CEAT4R7M50
	C620	ELECT. CAPACITOR	CEAT470M50
	C621	CKA (0.01µF/AC250V)	ACG1005
	C622	CKA (0.01µF/AC250V)	ACG1005
	C624	ELECT. CAPACITOR	CEAT101M35
	C625	ELECT. CAPACITOR	CEAT101M10
	C626	ELECT. CAPACITOR	CEAT221M25
	C627	CERAMIC CAPACITOR	CKCYF103Z50
	C628	ELECT. CAPACITOR	CEAT470M10
	C631	FILM CAPACITOR	CFTLA334J50
	C632	FILM CAPACITOR	CFTLA334J50
	C633	FILM CAPACITOR	CFTLA334J50
	C634	FILM CAPACITOR	CFTLA334J50
	C651	CERAMIC CAPACITOR	CKCYF103Z50
	C652	CERAMIC CAPACITOR	CKCYF103Z50
	C653	ELECT. CAPACITOR	CEAT100M50
	C654	ELECT. CAPACITOR	CEAT100M50
	C657	ELECT. CAPACITOR	CEAT101M16
	C658	ELECT. CAPACITOR	CEAT101M16

RESISTORS

	R190	CARBON FILM RESISTOR	RD1/2PM391J
⚠	R411	CARBON FILM RESISTOR	RD1/4MUF820J
⚠	R412	CARBON FILM RESISTOR	RD1/4MUF820J
⚠	R413	RESISTOR (0.22Ω, 5W)	ACN7035
⚠	R414	RESISTOR (0.22Ω, 5W)	ACN7035
⚠	R425	CARBON FILM RESISTOR	RD1/4MUF331J
⚠	R426	CARBON FILM RESISTOR	RD1/4MUF331J
⚠	R461	CARBON FILM RESISTOR	RD1/4MUF820J
⚠	R462	CARBON FILM RESISTOR	RD1/4MUF820J
⚠	R463	RESISTOR (0.22Ω, 5W)	ACN7035
⚠	R464	RESISTOR (0.22Ω, 5W)	ACN7035
⚠	R475	CARBON FILM RESISTOR	RD1/4MUF331J
⚠	R476	CARBON FILM RESISTOR	RD1/4MUF331J
⚠	R477	CARBON FILM RESISTOR	RD1/4PMF4R7J
⚠	R478	CARBON FILM RESISTOR	RD1/4PMF4R7J
	R479	METAL OXIDE RESISTOR	RS1LMF4R7J
	R480	METAL OXIDE RESISTOR	RS1LMF4R7J
	R601	METAL OXIDE RESISTOR	RS2LMF330J
⚠	R603	CARBON FILM RESISTOR	RD1/4PMF101J
⚠	R604	CARBON FILM RESISTOR	RD1/4PMF101J

Mark	No.	Description	Part No.
⚠	R629	METAL OXIDE RESISTOR	RS1LMF561J
⚠	R663	CARBON FILM RESISTOR	RD1/4MUF330J
⚠	R664	CARBON FILM RESISTOR	RD1/4MUF330J
	Other Resistors		RD1/4PU□□□J

OTHERS

	101	PIN JACK(6P)	AKB7013
	103	PIN JACK(4P)	AKB7014
	CN102	PIN JACK(4P)	AKB7015
	CN106	6P PLUG	KM200TA6
	CN107	20P PLUG	KM200TA20
	CN108	15P PLUG	KM200TA15
	CN109	20P CONNECTOR	52045-2045
	CN110	CONNECTOR	52045-1345
	CN111	20P CONNECTOR	52045-2045
	CN401	SPEAKER TERMINAL 6-P	AKE1053
	CN402	8P JUMPER CONNECTOR	52147-0810
	CN403	9P JUMPER CONNECTOR	52147-0910
	CN601	10P SOCKET	KP250NA10
	CN602	14P PLUG	KM200TA14

B CONNECTION ASSY

(1) CONTRAST TABLE

AWX7060 and AWX7176 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7060	AWX7176	
	H91,H92 Fuse Clip	Not used	AKR1004	

(2) PARTS LIST FOR AWX7060

OTHERS

	CN91	10P PLUG	KM250NA10L
	CN92	14P SOCKET	KP200TA14L
	CN93	10P PLUG	KM250NA10L
	CN94	14P SOCKET	KP200TA14L

C TRANS 2 ASSY

SEMICONDUCTORS

⚠	IC71	PROTECTOR(3A)	AEK7015
⚠	IC72	PROTECTOR(3A)	AEK7015

OTHERS

	CN71	3P JUMPER CONNECTOR	KPD3
	CN72	12P JUMPER CONNECTOR	KPD12

COMPLEX ASSY

OTHERS

	J1	LEAD WIRE UNIT	DB115NB0

Mark	No.	Description	Part No.
D	**FRONT ASSY**		
SEMICONDUCTORS			
	IC501	CONTROL MCU	PDG211A
	Q501	TRANSISTOR	KRA101M
	Q502	TRANSISTOR	KRC101M
	Q503	TRANSISTOR	KRA103M
	Q504	TRANSISTOR	KRC101M
	Q505	TRANSISTOR	2SA933S
	D501	DIODE	1SS254
	D502	LED	BR3371XJ30A
	D503	DIODE	1SS254
	D504	DIODE	1SS254
	D505	DIODE	1SS254
	D506	DIODE	1SS254
	D507	DIODE	1SS254
	D508	DIODE	1SS254
	D509	DIODE	1SS254
	D510	DIODE	1SS254
	D511	DIODE	1SS254
	D512	DIODE	1SS254
	D513	DIODE	1SS254
	D514	DIODE	1SS254
	D518	DIODE	1SS254
	D519	DIODE	1SS254
	D520	DIODE	1SS254
	D521	DIODE	1SS254
SWITCHES			
	S501	SWITCH	ASG1034
	S502	SWITCH	ASG1034
	S503	SWITCH	ASG1034
	S505	SWITCH	ASG1034
	S506	SWITCH	ASG1034
	S507	SWITCH	ASG1034
	S508	SWITCH	ASG1034
	S509	SWITCH	ASG1034
	S510	SWITCH	ASG1034
	S511	SWITCH	ASG1034
	S512	SWITCH	ASG1034
	S513	SWITCH	ASG1034
	S514	SWITCH	ASG1034
	S515	SWITCH	ASG1034
	S516	SWITCH	ASG1034
	S517	SWITCH	ASG1034
	S518	SWITCH	ASG1034
	S520	SWITCH	ASG1034
	S522	SWITCH	ASG1034
	S523	SWITCH	ASG1034
	S524	SWITCH	ASG1034
COILS			
	L501	AXIAL INDUCTOR	LAU2R2J
	L502	AXIAL INDUCTOR	LAUR22J
CAPACITORS			
	C501	CERAMIC CAPACITOR	CKPUYF103Z25
	C502	CERAMIC CAPACITOR	CKPUYF103Z25
	C503	CERAMIC CAPACITOR	CKPUYF473Z16
	C504	ELECT. CAPACITOR	CEAT2R2M50
	C505	CERAMIC CAPACITOR	CGCYX104M16
	C507	AXIAL CAPACITOR	CKPUYB101K50
	C508	AXIAL CAPACITOR	CKPUYB101K50
	C509	AXIAL CAPACITOR	CKPUYB101K50
	C510	CERAMIC CAPACITOR	CKCYF103Z50
	C511	ELECT. CAPACITOR	CEAT470M50
	C512	ELECT. CAPACITOR	CEAT221M10
	C513	CERAMIC CAPACITOR	CGCYX103M16
	C514	CAPACITOR	ACH7013
	C516	CERAMIC CAPACITOR	CKPUYF473Z16
	C517	ELECT. CAPACITOR	CEAT221M35
	C518	AUDIO FILM CAPACITOR	CFTYA104J50
	C522	CERAMIC CAPACITOR	CKPUYF473Z16
	C523	CERAMIC CAPACITOR	CKPUYB102K50
RESISTORS			
	All Resistors		RD1/4PU□□□J
OTHERS			
	501	REMOTE RECEIVER UNIT	GP1U27X
	CN501	20P CONNECTOR	52044-2045
	CN502	20P CONNECTOR	52044-2045
	V501	FL TUBE	AAV7053
	X501	CERAMIC RESONATOR (7.2MHz)	ASS7018
E	**VOLUME DSP ASSY**		
SEMICONDUCTORS			
	IC201	DSP IC	CXD2724Q
	IC202	E-VR IC	M62420FP
	IC204	LOGIC IC	BU4052BCF
	IC206	OP-AMP IC	NJM4558LD
	IC207	OP-AMP IC	NJM4558LD
	IC211	OP-AMP IC	NJM4558D-D
	IC301	IC	UPC4570C
	IC302	IC	UPC4570C
	Q202	TRANSISTOR	2SC1740S
	Q301	N-FET	2SK246
	Q302	N-FET	2SK246
	Q311	TRANSISTOR	KRA101M
	Q313	TRANSISTOR	2SA1115
	Q314	TRANSISTOR	2SC2603
	Q315	TRANSISTOR	2SA1115
	Q316	TRANSISTOR	2SC2603
	D201	ZENER DIODE	MTZJ5.6B
	D203	ZENER DIODE	MTZJ5.6B
	D204	ZENER DIODE	MTZJ9.1B
	D301	DIODE	1SS254
	D302	DIODE	1SS254
	D303	DIODE	1SS254
COILS			
	L202	AXIAL INDUCTOR	LAU1R0J
	L207	AXIAL INDUCTOR	LAU220J
	L208	AXIAL INDUCTOR	LAU1R0J
CAPACITORS			
	C201	ELECT. CAPACITOR	CEAT470M16
	C202	ELECT. CAPACITOR	CEAT470M16
	C203	ELECT. CAPACITOR	CEAT471M6R3
	C204	CERAMIC CAPACITOR	CCCSL101J50
	C205	CERAMIC CAPACITOR	CKPUYB331K50

Mark	No.	Description	Part No.
	C206	AXIAL CERAMIC C.	CCPUCH120J50
	C207	AXIAL CERAMIC C.	CCPUCH120J50
	C208	CERAMIC CAPACITOR	CKPUYB331K50
	C209	CERAMIC CAPACITOR	CCCSL101J50
	C211	ELECT. CAPACITOR	CEATR22M50
	C212	ELECT. CAPACITOR	CEATR22M50
	C213	CERAMIC CAPACITOR	CKCYF103Z50
	C214	CERAMIC CAPACITOR	CKCYF103Z50
	C215	CERAMIC CAPACITOR	CKPUYB102K50
	C216	CERAMIC CAPACITOR	CKPUYB102K50
	C217	CERAMIC CAPACITOR	CKPUYB331K50
	C218	CERAMIC CAPACITOR	CKPUYB331K50
	C219	CERAMIC CAPACITOR	CKPUYB331K50
	C220	CERAMIC CAPACITOR	CKPUYB331K50
	C221	ELECT. CAPACITOR	CEAT4R7M50
	C222	ELECT. CAPACITOR	CEAT4R7M50
	C223	FILM CAPACITOR	CFTLA223J50
	C224	FILM CAPACITOR	CFTLA223J50
	C225	FILM CAPACITOR	CFTLA474J50
	C226	FILM CAPACITOR	CFTLA474J50
	C227	FILM CAPACITOR	CFTLA103J50
	C228	FILM CAPACITOR	CFTLA103J50
	C229	ELECT. CAPACITOR	CEAT4R7M50
	C230	ELECT. CAPACITOR	CEAT221M10
	C231	ELECT. CAPACITOR	CEAT4R7M50
	C232	ELECT. CAPACITOR	CEAT4R7M50
	C233	ELECT. CAPACITOR	CEAT4R7M50
	C234	ELECT. CAPACITOR	CEAT4R7M50
	C235	ELECT. CAPACITOR	CEAT4R7M50
	C236	ELECT. CAPACITOR	CEAT4R7M50
	C241	ELECT. CAPACITOR	CEANP4R7M50
	C242	ELECT. CAPACITOR	CEANP4R7M50
	C243	CERAMIC CAPACITOR	CGCYX102K25
	C244	CERAMIC CAPACITOR	CGCYX102K25
	C246	ELECT. CAPACITOR	CEAT101M10
	C247	ELECT. CAPACITOR	CEAT1R0M50
	C248	ELECT. CAPACITOR	CEAT1R0M50
	C249	CERAMIC CAPACITOR	CGCYX102K25
	C250	CERAMIC CAPACITOR	CGCYX102K25
	C251	CERAMIC CAPACITOR	CCCSL121J50
	C252	CERAMIC CAPACITOR	CCCSL121J50
	C253	CERAMIC CAPACITOR	CKPUYB121K50
	C254	CERAMIC CAPACITOR	CKPUYB121K50
	C255	ELECT. CAPACITOR	CEAT4R7M50
	C256	ELECT. CAPACITOR	CEAT4R7M50
	C257	CERAMIC CAPACITOR	CKCYF103Z50
	C258	CERAMIC CAPACITOR	CKCYF103Z50
	C259	ELECT. CAPACITOR	CEAT101M10
	C263	ELECT. CAPACITOR	CEAT101M10
	C264	AXIAL CAPACITOR	CKPUYB101K50
	C265	CERAMIC CAPACITOR	CCCSL101J50
	C266	AXIAL CAPACITOR	CKPUYB101K50
	C271	CERAMIC CAPACITOR	CKPUYF103Z25
	C282	ELECT. CAPACITOR	CEAT471M6R3
	C284	CERAMIC CAPACITOR	CGCYX102K25
	C301	CERAMIC CAPACITOR	CCCSL271J50
	C302	CERAMIC CAPACITOR	CCCSL271J50
	C303	AUDIO FILM CAPACITOR	CFTYA473J50
	C304	AUDIO FILM CAPACITOR	CFTYA473J50
	C305	ELECT. CAPACITOR	CEAT4R7M50
	C306	ELECT. CAPACITOR	CEAT4R7M50
	C307	ELECT. CAPACITOR	CEAT4R7M50
	C308	ELECT. CAPACITOR	CEAT4R7M50
	C309	CERAMIC CAPACITOR	CKCYF103Z50
	C310	CERAMIC CAPACITOR	CKCYF103Z50
	C311	ELECT. CAPACITOR	CEAT4R7M50
	C312	ELECT. CAPACITOR	CEAT4R7M50
	C313	ELECT. CAPACITOR	CEAT4R7M50
	C314	ELECT. CAPACITOR	CEAT4R7M50
	C315	CERAMIC CAPACITOR	CKCYF103Z50
	C316	CERAMIC CAPACITOR	CKCYF103Z50
	C321	AXIAL CAPACITOR	CCPUSL470J50
	C322	AXIAL CAPACITOR	CCPUSL470J50
	C323	AXIAL CAPACITOR	CKPUYB221K50
	C324	AXIAL CAPACITOR	CKPUYB221K50
	C331	ELECT. CAPACITOR	CEAT101M10
	C332	ELECT. CAPACITOR	CEANP100M50

RESISTORS

VR301	VARIABLE RESISTOR	ACX7034
Other Resistors		RD1/4PU□□□J

OTHERS

CN201	15P SOCKET	KP200TA15L
CN202	20P SOCKET	KP200TA20L
CN203	6P SOCKET	KP200TA6L
X201	XTAL RES (OSC)	ASS7002

F FRONT SPEAKER ASSY

SEMICONDUCTORS

IC801	VIDEO SW IC	NJM2279D
Q701	TRANSISTOR	KRA103M
Q702	TRANSISTOR	KRC101M
Q801	TRANSISTOR	2SC1740S
Q802	TRANSISTOR	2SA933S
D803	DIODE	1SS254

RELAY

RY701	RELAY	ASR7014

COILS

L701	COIL (0.7mH)	ATH1004
L702	COIL (0.7mH)	ATH1004

CAPACITORS

C701	AUDIO FILM CAPACITOR	CFTYA104J50
C702	AUDIO FILM CAPACITOR	CFTYA104J50
C801	ELECT. CAPACITOR	CEAT100M50
C802	ELECT. CAPACITOR	CEAT100M50
C804	CERAMIC CAPACITOR	CCCSL221J50
C805	CERAMIC CAPACITOR	CCCSL221J50
C806	ELECT. CAPACITOR	CEAT101M10
C807	ELECT. CAPACITOR	CEAT101M10
C808	CERAMIC CAPACITOR	CKCYF103Z50
C809	CERAMIC CAPACITOR	CKCYF103Z50
C810	CERAMIC CAPACITOR	CKPUYF103Z25
C811	CERAMIC CAPACITOR	CGCYX104M16
C851	CERAMIC CAPACITOR	CKPUYF103Z25

Mark	No.	Description	Part No.
RESISTORS			
⚠	R701	CARBON FILM RESISTOR	RD1/4PMF4R7J
⚠	R702	CARBON FILM RESISTOR	RD1/4PMF4R7J
	R703	METAL OXIDE RESISTOR	RS1LMF4R7J
	R704	METAL OXIDE RESISTOR	RS1LMF4R7J
	Other Resistors		RD1/4PU□□□J
OTHERS			
	CN701	SPEAKER TERMINAL 4-P	AKE7030
	CN702	PIN JACK 1-P	AKB7042
	J24	JUMPER WIRE 9P	D20PYY0915E
	J25	JUMPER WIRE 8P	D20PYY0810E
	JA801	PIN JACK(4P)YELLOW	AKB7100
	JA851	JACK	RKN1004

G HEADPHONE ASSY

SEMICONDUCTORS

⚠	D961	DIODE	S5688G
⚠	D962	DIODE	S5688G

CAPACITORS

C951	CERAMIC CAPACITOR	CGCYF473Z50
C961	ELECT. CAPACITOR	CEAT470M25
C962	ELECT. CAPACITOR	CEAT470M50

RESISTOR

R961	CARBON FILM RESISTOR	RD1/4PU473J

OTHERS

CN951	CONNECTOR(4P)	KPE4
CN952	10P SOCKET	KP250NA10
CN953	14P PLUG	KM200TA14
951	CABLE HOLDER(3P)	51052-0300
952	CABLE HOLDER(12P)	51052-1200
953	GROUND PLATE	VNF-091
JA951	JACK	RKN1002

H PRIMARY ASSY

SEMICONDUCTORS

	IC901	REGULATOR IC	NJM78M56FA
	Q901	TRANSISTOR	KRC101M
⚠	D901	DIODE	S5688G
⚠	D902	DIODE	S5688G
	D904	ZENER DIODE	MTZJ5.1A
	D905	DIODE	1SS254

RELAY

⚠	RY901	LOWPOWER RELAY	ASR7016

TRANSFORMER

⚠	T901	POWER TRANSFORMER	ATT1223

CAPACITORS

⚠	C901	CKA (10000pF/AC250V)	ACG7020
⚠	C902	CKA (10000pF/AC250V)	ACG7020
	C903	ELECT. CAPACITOR	CEAT471M16
	C904	ELECT. CAPACITOR	CEAT470M16

Mark	No.	Description	Part No.
RESISTORS			
	R901	RESISTOR(2.2MΩ, 1/2W)	RCN1080
	R902	CARBON FILM RESISTOR	RD1/4PU332J
	R904	CARBON FILM RESISTOR	RD1/4PU103J
	R905	CARBON FILM RESISTOR	RD1/2PM470J
OTHERS			
	901	AC SOCKET 1-P	AKP1060
	903	GROUND PLATE	VNF-091
	906	CABLE HOLDER(4P)	51063-0405
	H901	FUSE CLIP	AKR1004
	H902	FUSE CLIP	AKR1004
	H905	FUSE CLIP	AKR1004
	H906	FUSE CLIP	AKR1004

I TRANS 1 ASSY

No service parts.

6. ADJUSTMENT

There is no information to be shown in this chapter.

7. GENERAL INFORMATION

7.1 PARTS

7.1.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ CXD2724Q (VOLUME DSP ASSY : IC201)

• DSP IC

●Block Diagram

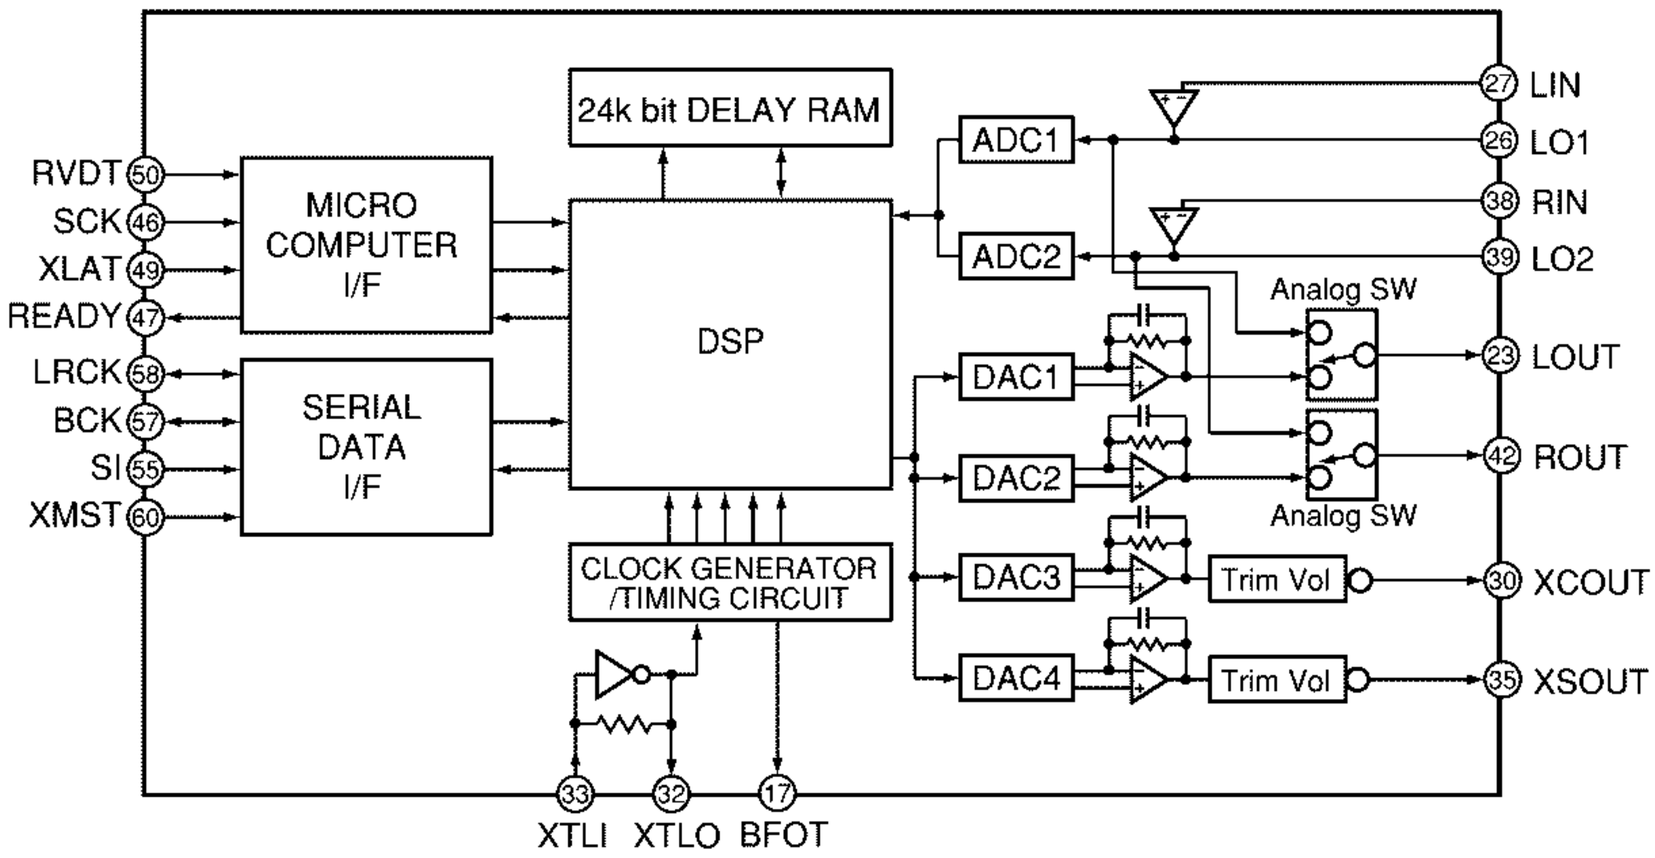

●Pin Function

No.	Pin Name	I/O	Function
1-3	T.P	O	Monitor pin for test Normally, outputs "L".
4	VSS0	–	Digital ground
5-8	T.P	O	Monitor pin for test Normally, outputs "L".
9	TST0	I	Test pin Normally, fix to L.
10	VDD0	–	Digital power supply
11	VSS1	–	Digital ground
12	TST1	I	Test pin Normally, fix to "L".
13	TST2	I	Test pin Normally, fix to "L".
14	TST3	I	Test pin Normally, fix to "L".
15	TST4	I	Test pin Normally, fix to "L".
16	XRST	I	System reset input L : reset.
17	BFOT	O	Clock and divided frequency output (384/768/256/512 fs)
18	CSL1	I	Test pin Normally, fix to "H".
19	CSL2	I	Test pin Normally, fix to "L".
20	VSS2	–	Digital ground
21	AVS3	–	Ground for L-ch D/A converter
22	AVD3	–	Power supply for L-ch D/A converter
23	LOUT	O	L-ch A/D converter output
24	AVD1	–	Power supply for L-ch A/D converter
25	AVS1	–	Ground for L-ch A/D converter
26	LO1	O	OP amp. inverting output for LPF of L-ch A/D converter
27	LIN	I	Analog input of L-ch A/D converter
28	AVD5	–	Power supply for C-ch D/A converter
29	AVS5	–	Ground for C-ch D/A converter
30	XCOUT	O	C-ch D/A converter output
31	AVDX	–	Analog power supply for master clock
32	XTLO	O	Crystal oscillation circuit output

No.	Pin Name	I/O	Function
33	XTLI	I	Crystal oscillation circuit input
34	AVSX	–	Analog ground for master clock
35	XSOUT	O	S-ch D/A converter output
36	AVS6	–	Ground for S-ch D/A converter
37	AVD6	–	Power supply for S-ch D/A converter
38	RIN	I	Analog input of R-ch A/D converter
39	LO2	O	OP amp. inverting output for LPF of R-ch A/D converter
40	AVS2	–	Ground for R-ch A/D converter
41	AVD2	–	Power supply for R-ch A/D converter
42	ROUT	O	R-ch D/A converter output
43	AVD4	–	Power supply for R-ch D/A converter
44	AVS4	–	Ground for R-ch D/A converter
45	VSS3	–	Digital ground
46	SCK	I	Shift clock input of microprocessor interface
47	REDY	O	Transfer permission signal output of microprocessor interface L : Transfer prohibition
48	T.P	–	Monitor pin for test Normally, outputs "Hi-Z".
49	XLAT	I	Latch input of microprocessor interface
50	RVDT	I	Data input of microprocessor interface
51	XS24	I	24/32 bit slot selection of serial data L : 24 bit slot (It is effective at slave mode.)
52	VDD1	–	Digital power supply
53	VSS4	–	Digital ground
54	T.P	–	Monitor pin for test Normally, outputs "L".
55	SI	I	Serial data input of 1 sampling 2 channel
56	T.P	–	Input pin for test Normelly, outputs "L".
57	BCK	I/O	Serial bit transfer clock of serial input/output data SI and SO
58	LRCK	I/O	Sampling frequency clock of serial input/output data SI and SO
59	VSS5	–	Digital ground
60	XMST	I	Master/slave mode switching input of BCK and LRCK L : master mode
61-63	T.P	O	Monitor pin for test Normally, outputs "L".
64	VSS6	–	Digital ground
65-72	T.P	O	Monitor pin for test Normally, outputs "L".
73	VDD2	–	Digital power supply
74	VSS7	–	Digital ground
75-80	T.P	O	Monitor pin for test Normally, outputs "L".

7.1.2 DISPLAY

■ AAV7053 (FRONT ASSY : V501)

• FL TUBE

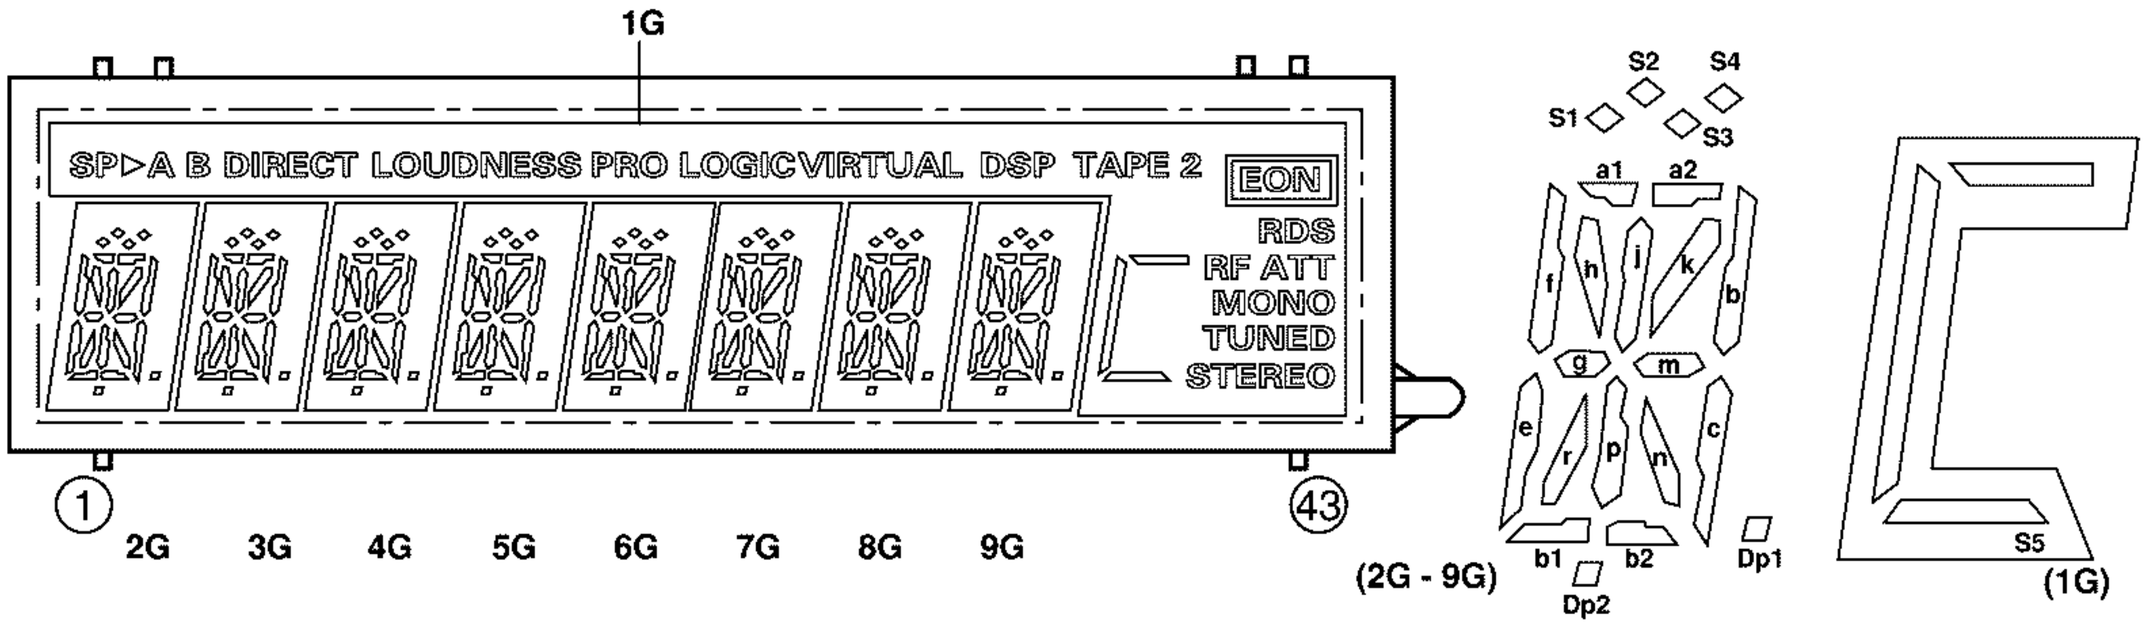

● ANODE AND GRID ASSIGNMENT

	1G	2G	3G	4G	5G	6G	7G	8G	9G
P1	SP▷	a1	a1	a1	a1	a1	a1	a1	a1
P2	A	a2	a2	a2	a2	a2	a2	a2	a2
P3	B	h	h	h	h	h	h	h	h
P4	DIRECT	j	j	j	j	j	j	j	j
P5	LOUDNESS	k	k	k	k	k	k	k	k
P6	PRO LOGIC	b	b	b	b	b	b	b	b
P7	VIRTUAL	f	f	f	f	f	f	f	f
P8	DSP	m	m	m	m	m	m	m	m
P9	TAPE 2	g	g	g	g	g	g	g	g
P10	EON	c	c	c	c	c	c	c	c
P11	RDS	e	e	e	e	e	e	e	e
P12	S5	r	r	r	r	r	r	r	r
P13	RF ATT	p	p	p	p	p	p	p	p
P14	MONO	n	n	n	n	n	n	n	n
P15	TUNED	d1	d1	d1	d1	d1	d1	d1	d1
P16	STEREO	d2	d2	d2	d2	d2	d2	d2	d2
P17	—	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1
P18	—	S1, S3	S1, S3	S1, S3	S1, S3	S1, S3	S1, S3	S1, S3	S1, S3
P19	—	S4	S4	S4	S4	S4	S4	S4	S4
P20	—	S2	S2	S2	S2	S2	S2	S2	S2
P21	—	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2

● PIN ASSIGNMENT

Pin No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43
Connection	F1	F1	NP	NP	1G	2G	3G	4G	5G	6G	7G	8G	9G	NX	NX	NX	NX	NX	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16	P17	P18	P19	P20	P21	NP	NP	F2	F2

7.2 DISASSEMBLY

7.2.1 Bonnet and FRONT Assy

■ BONNET

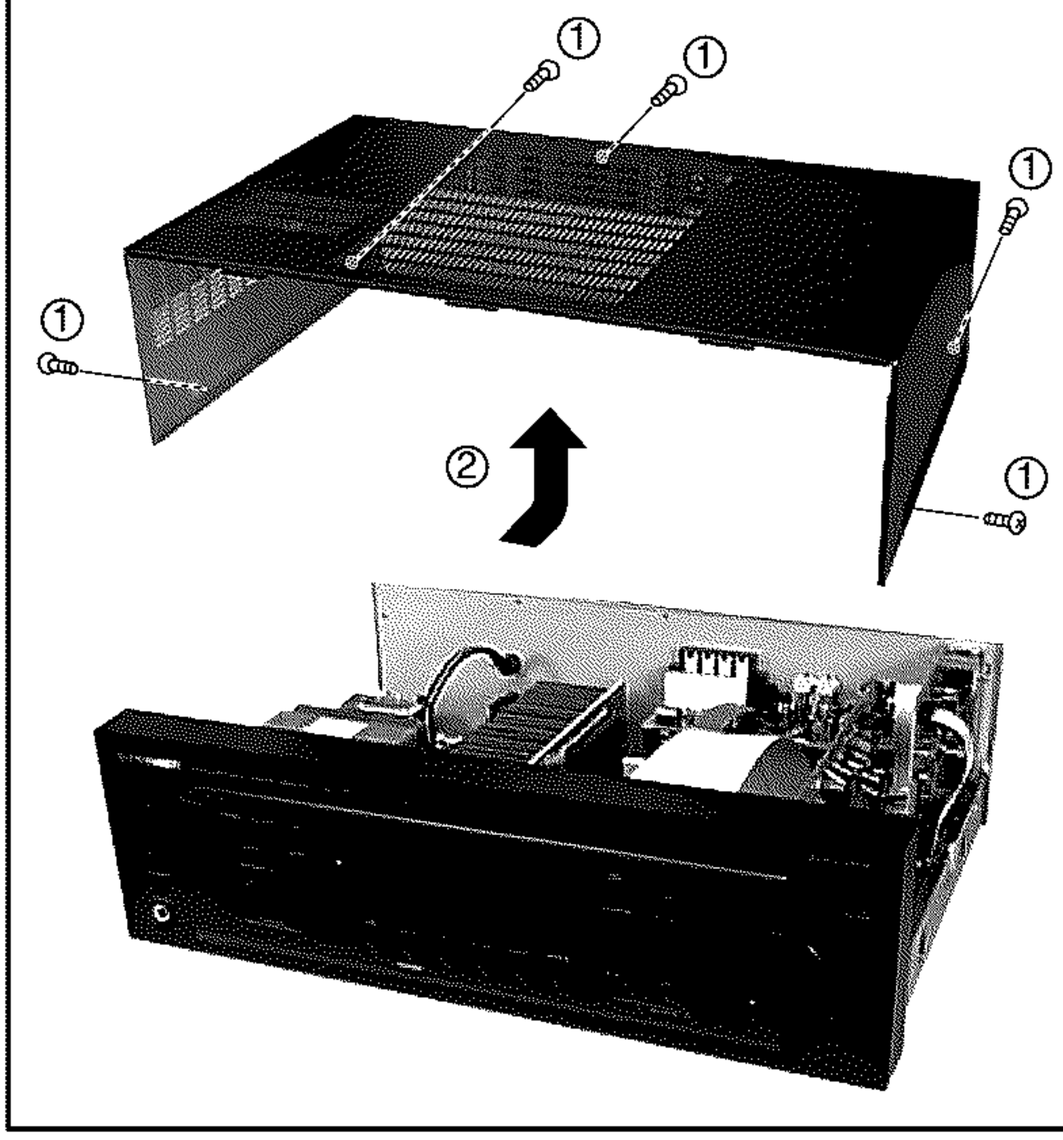

■ FRONT ASSY

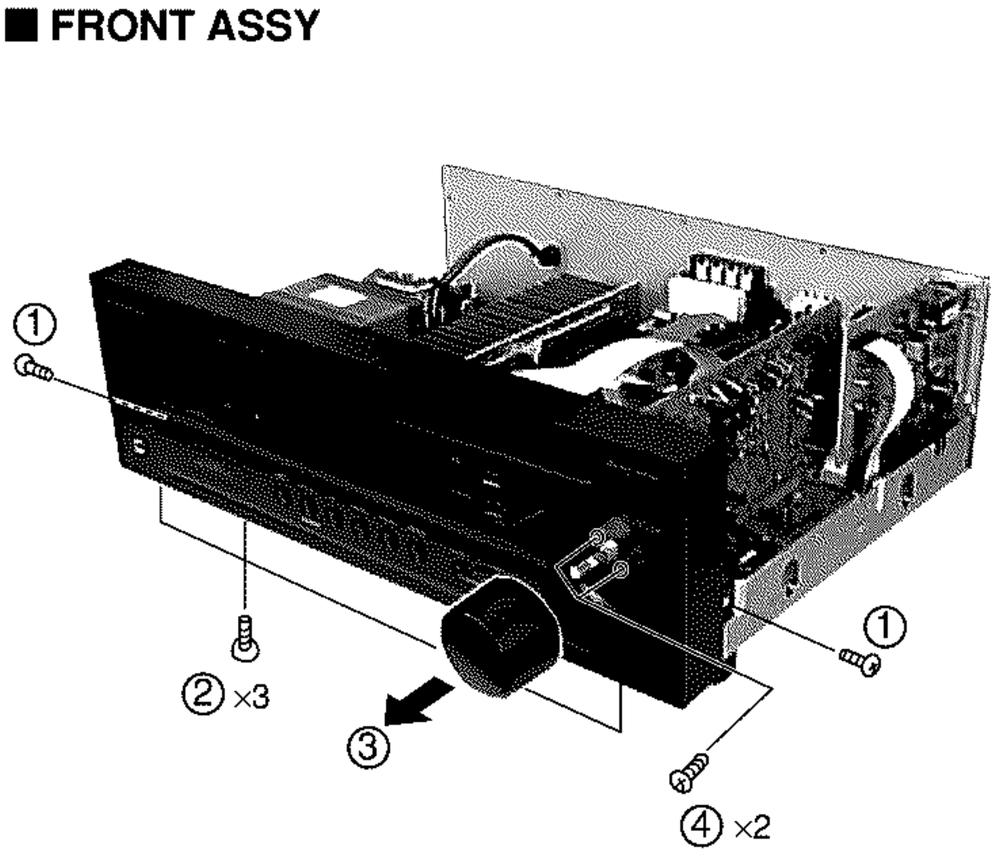

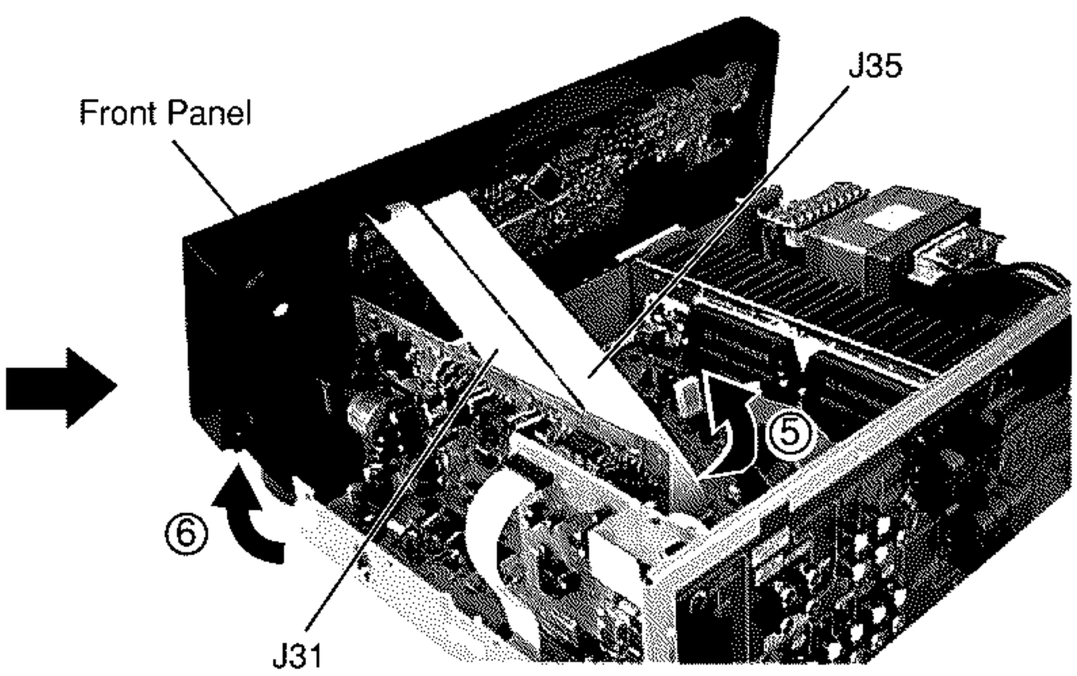

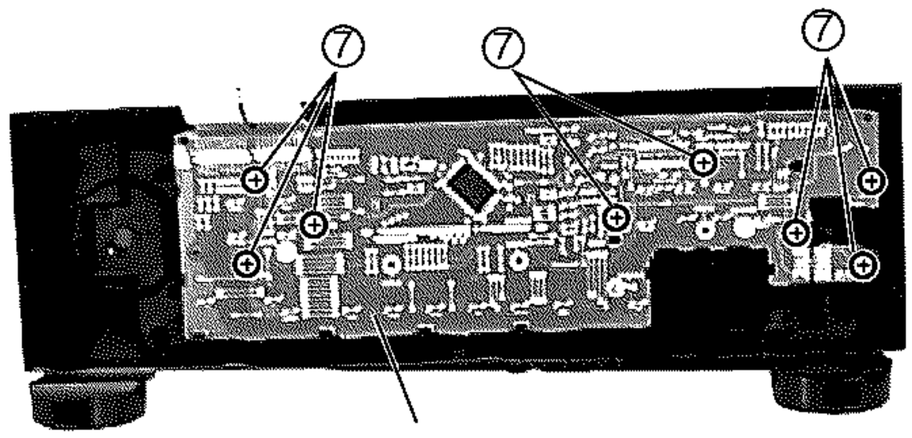

7.2.2 MOTHER and CONNECTION Assemblies

■ MOTHER AND CONNECTION ASSEMBLIES

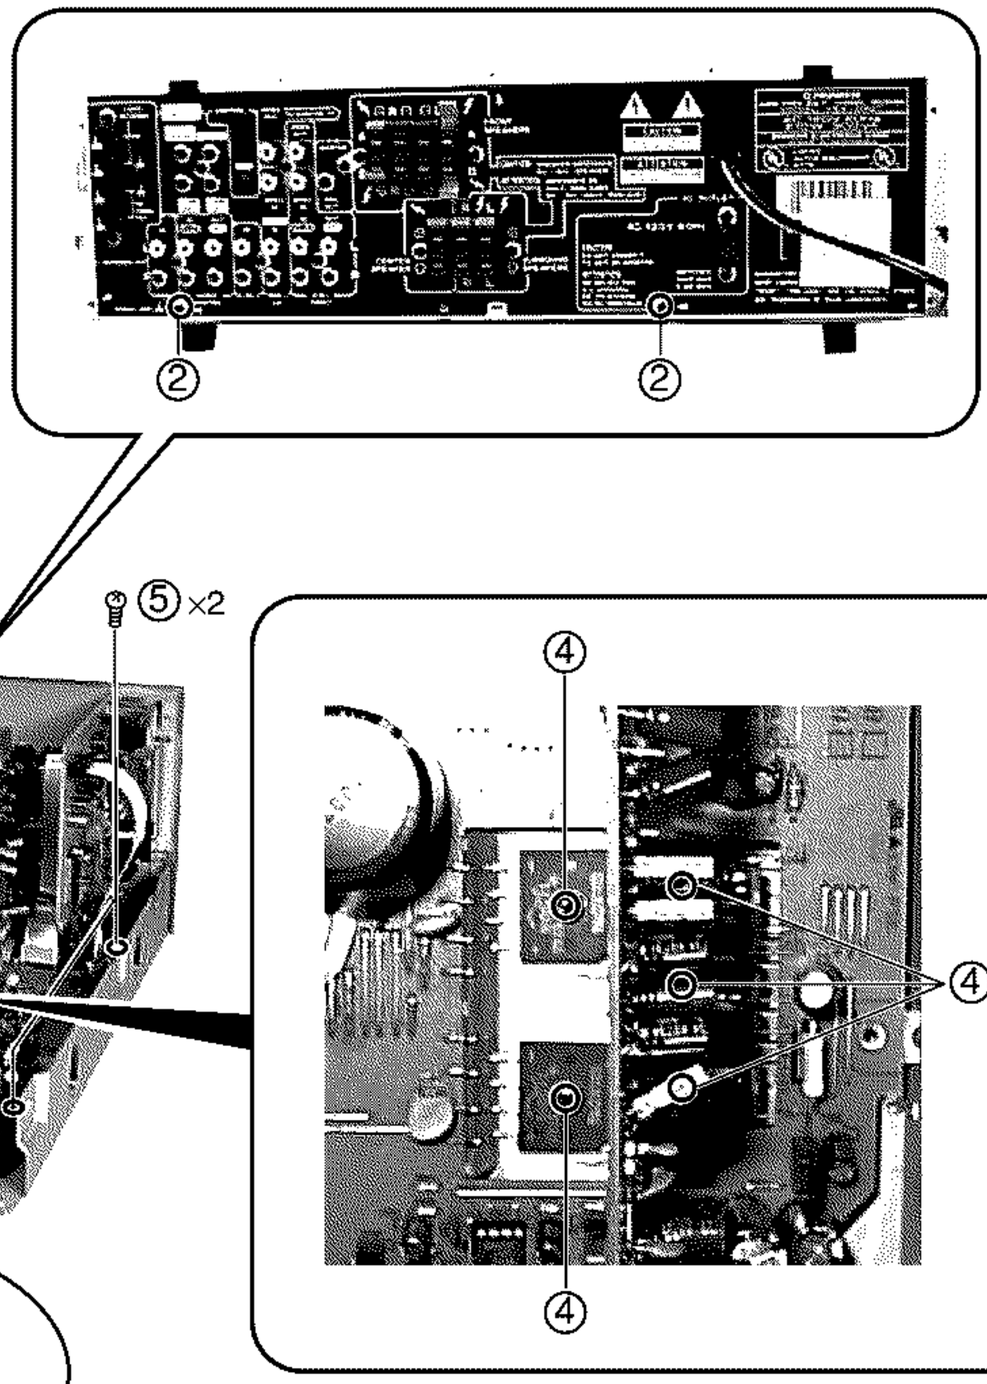

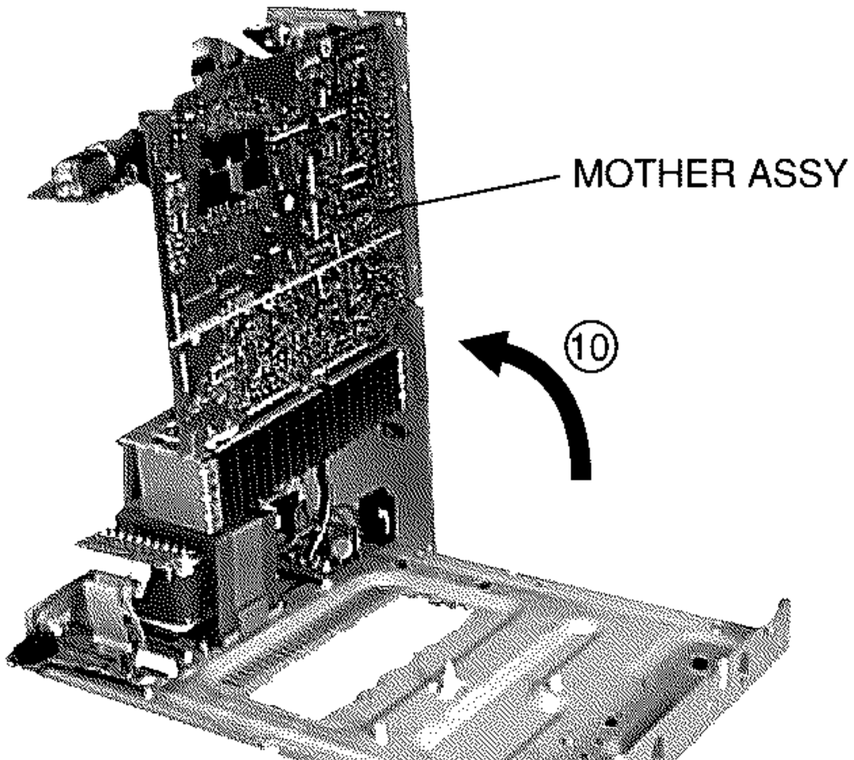

7.3 DIAGNOSIS

■ POWER PACK (MOTHER ASSY : IC401 and IC402) (At Bottom Side)

① Cut six portions on the Under Base by nipper and remove a Cover.

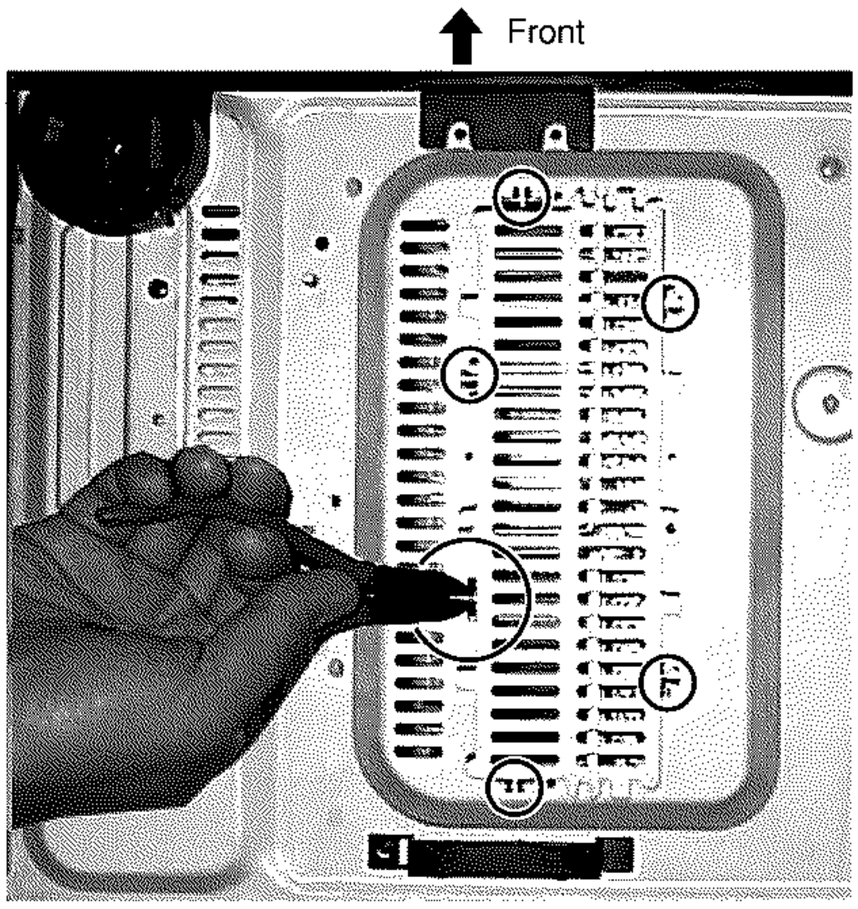

② Diagnose the POWER PACK (IC401 and IC402).

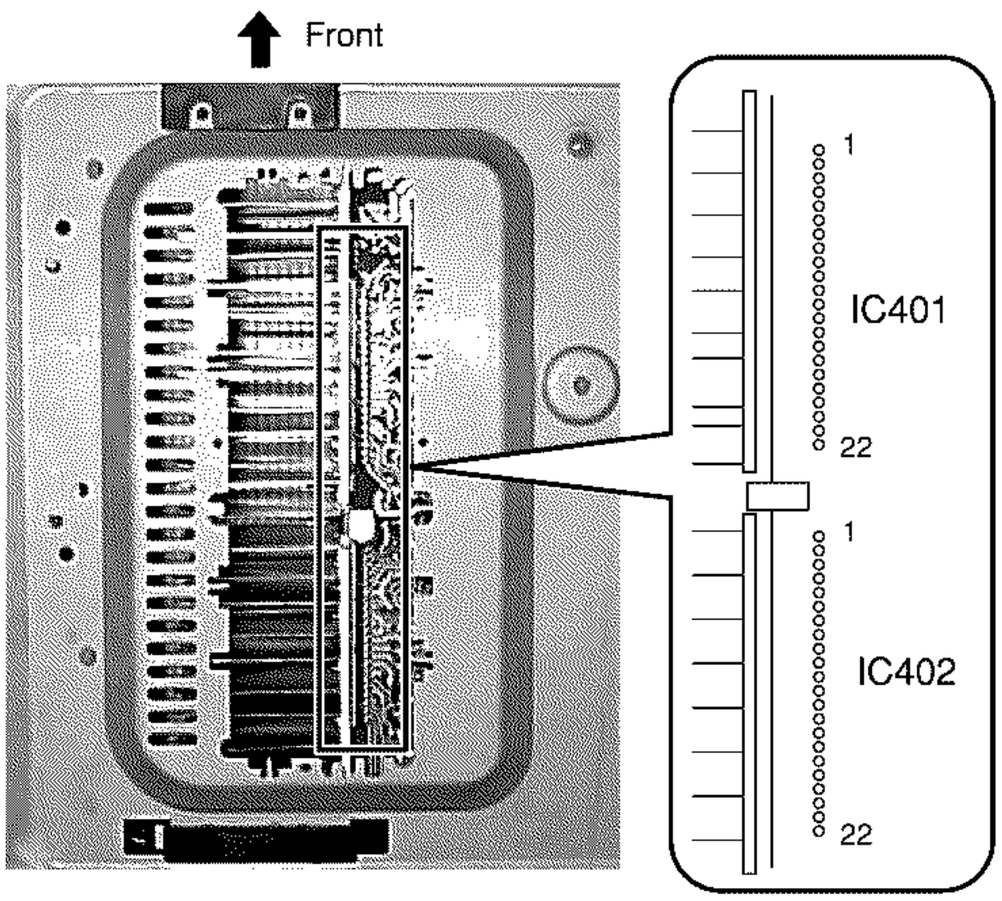

③ Turn the Cover.

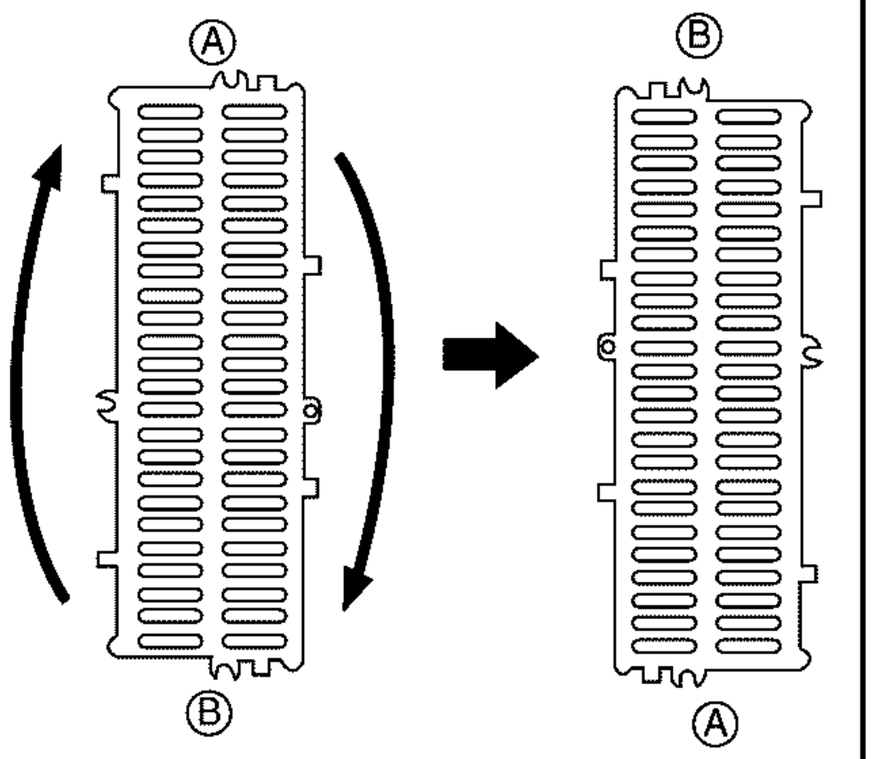

④ Fix the Cover with the four screws (BBZ30P080FMC),and stick the UL caution card (Part No : AAX-313) to the prescribed position.

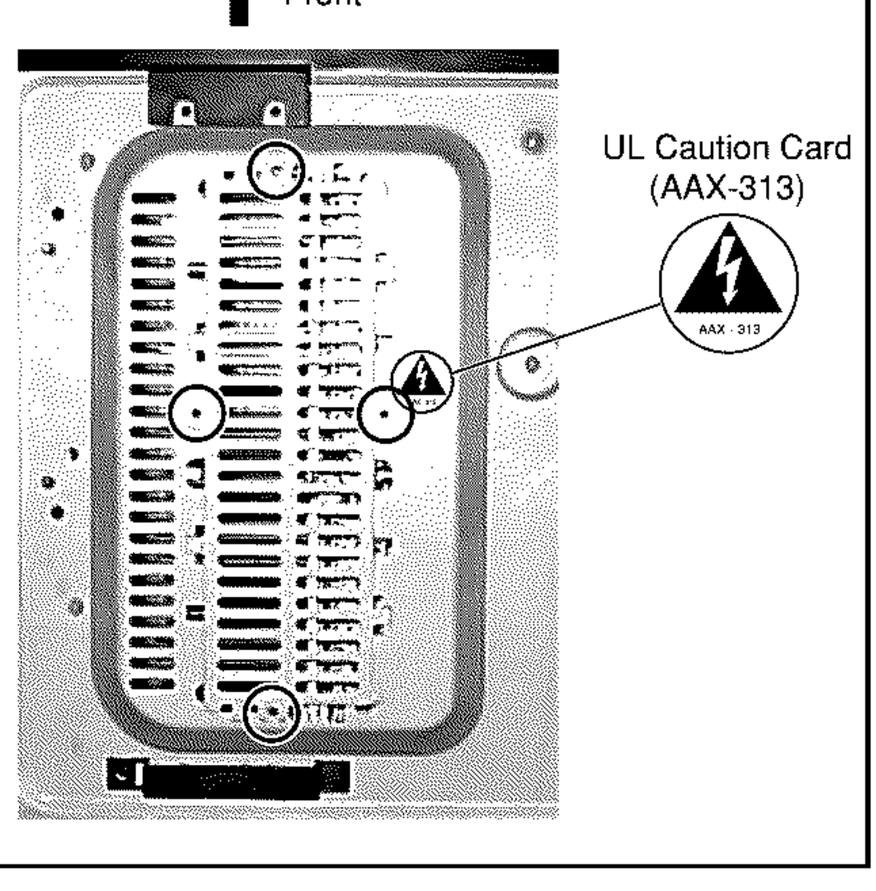

CAUTION :
After performing the above operation, be sure to stick the UL caution card (Part No.: AAX-313) to the prescribed position.(It is required by the UL regulations.)
After cutting the Under base and the Cover with a pair of nippers, be sure to smooth roughness from the edges to protect the user from a risk of damage caused by sharp edges.

7.4 BLOCK DIAGRAM

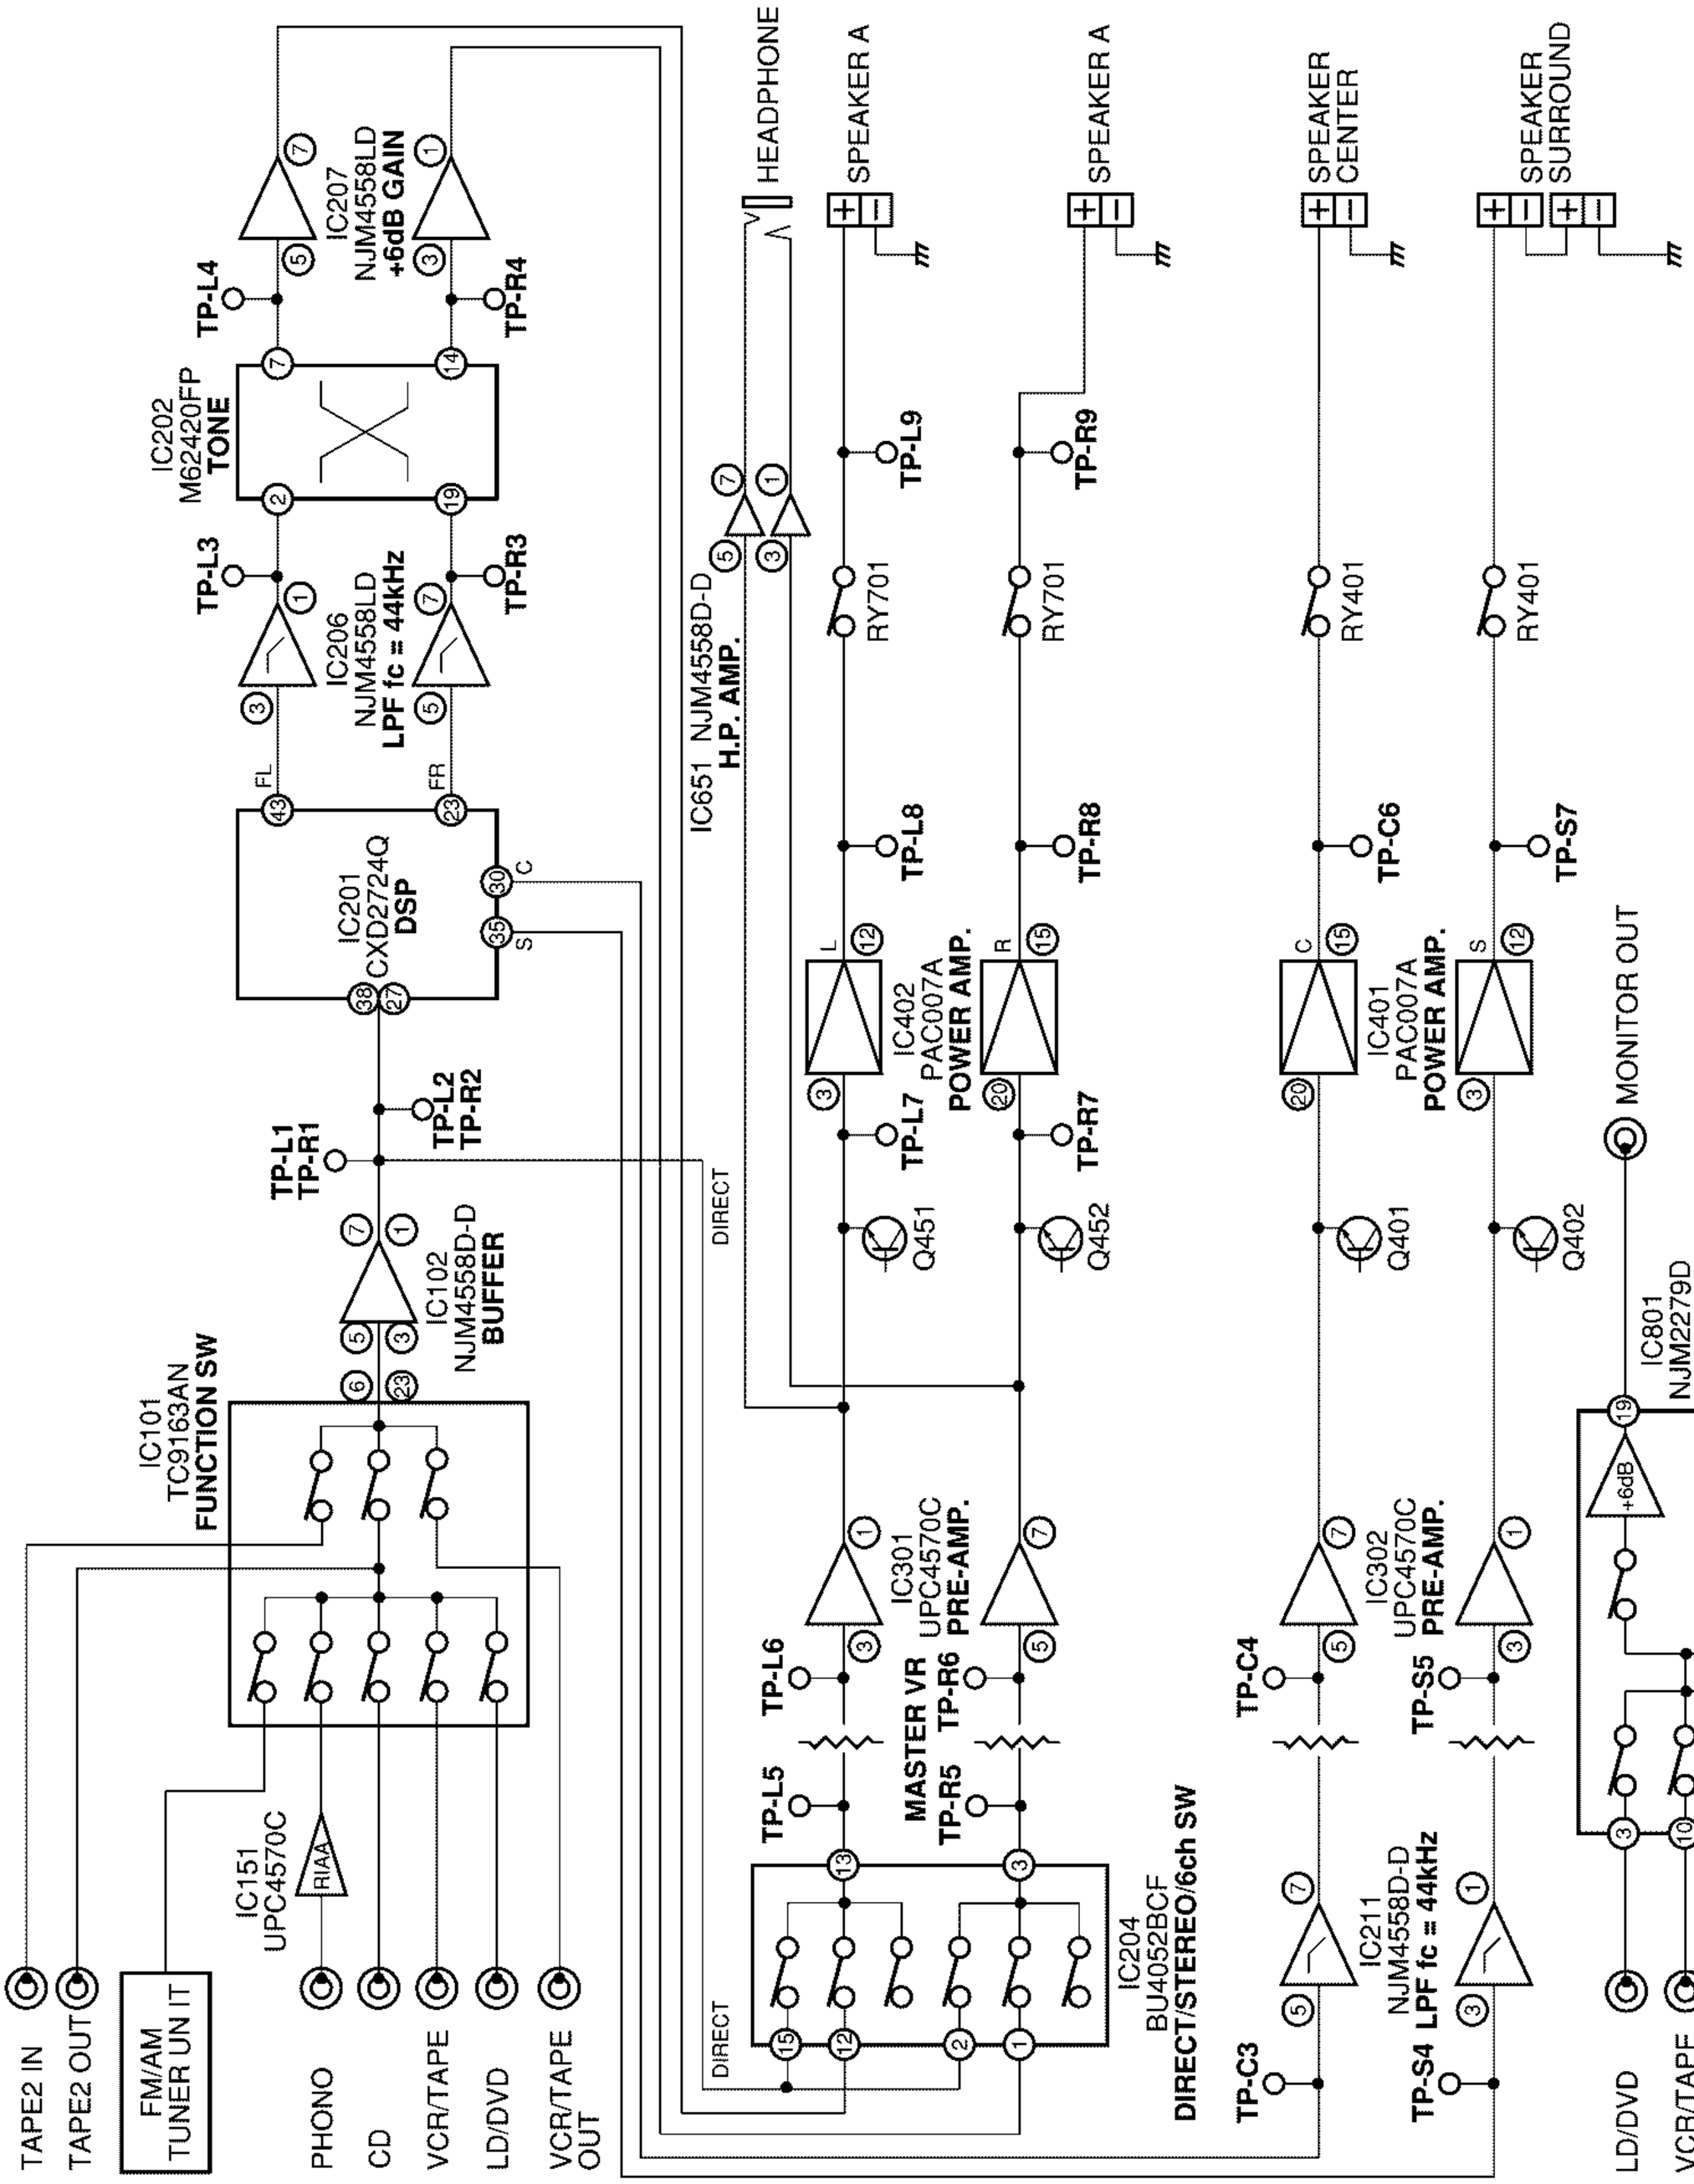

• Test Points for Diagnosis

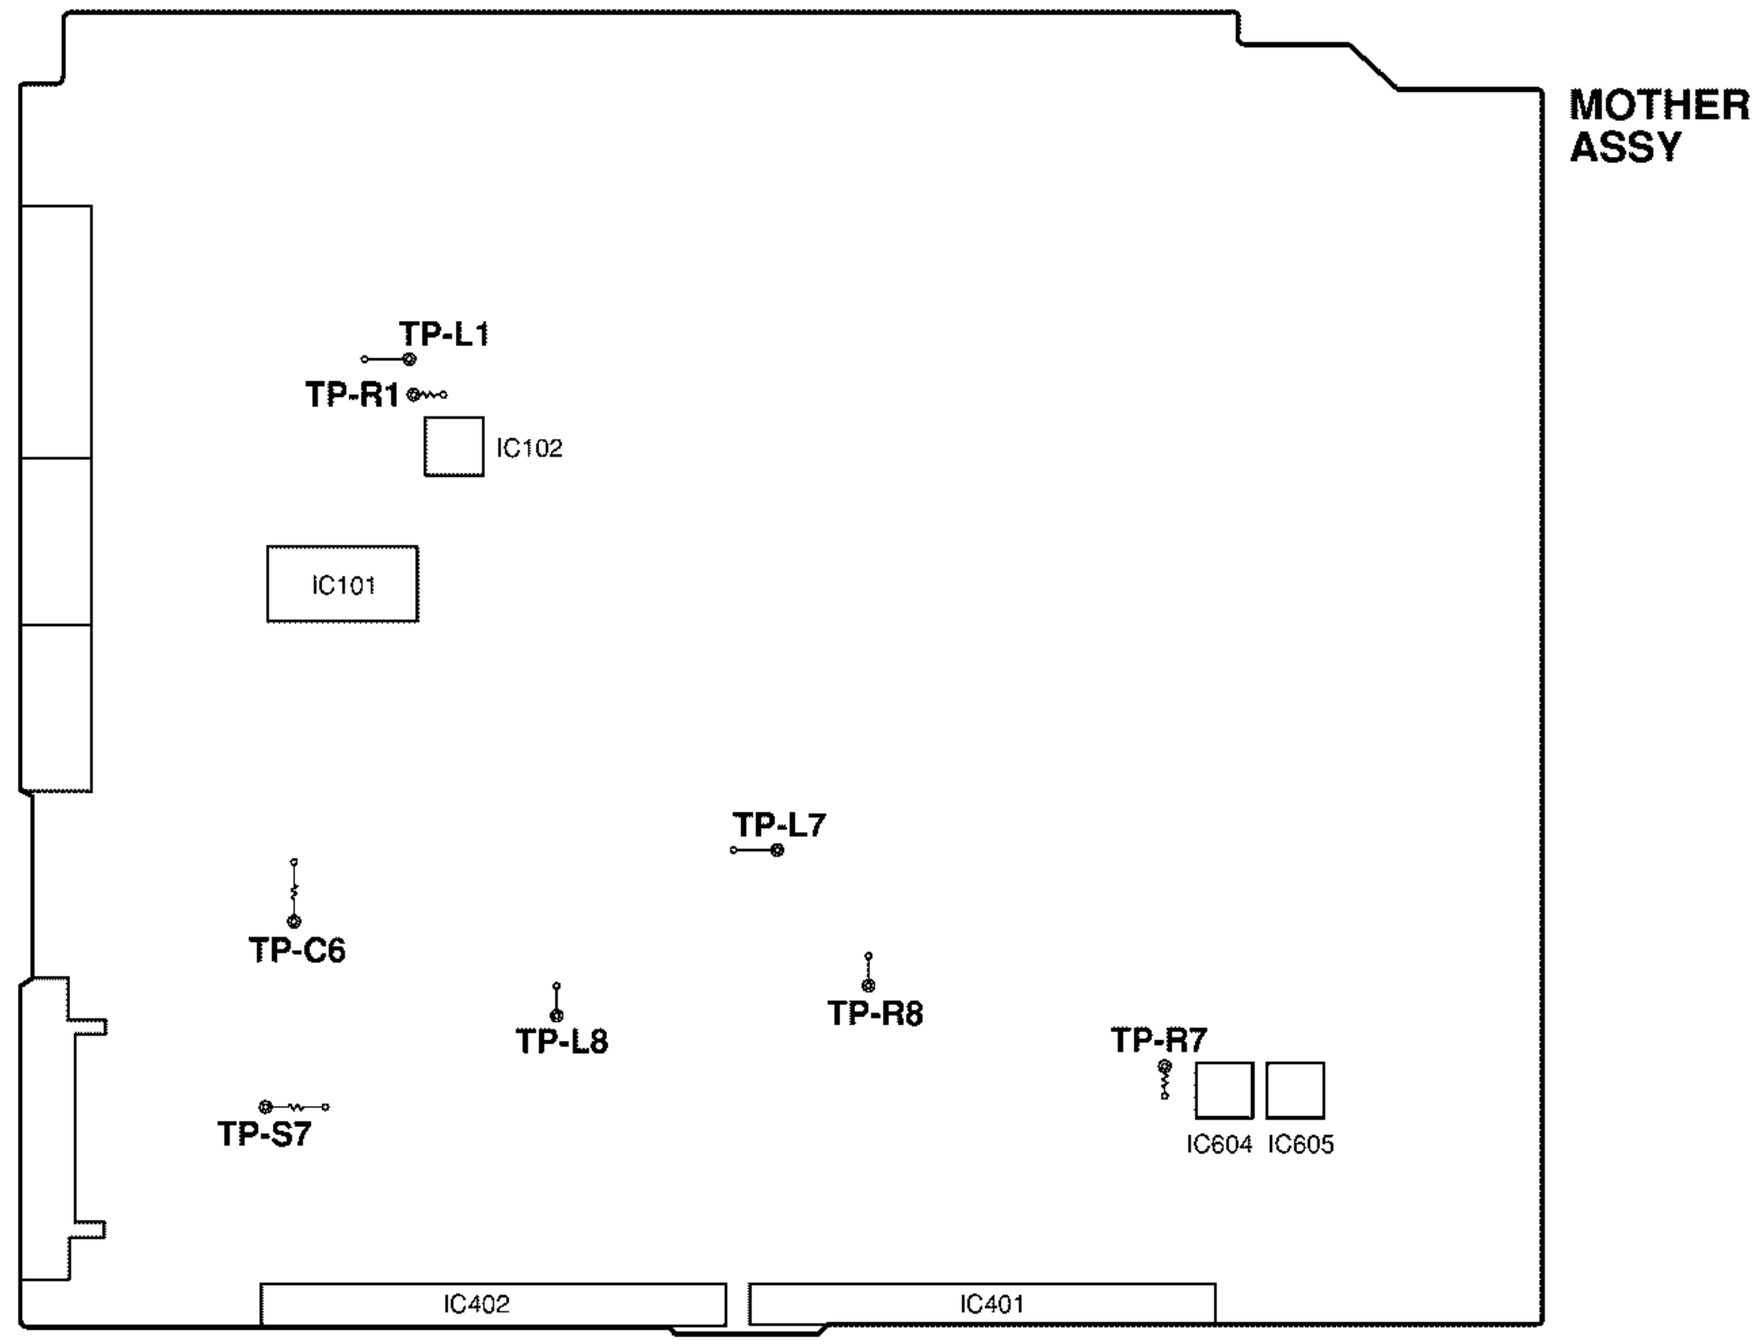

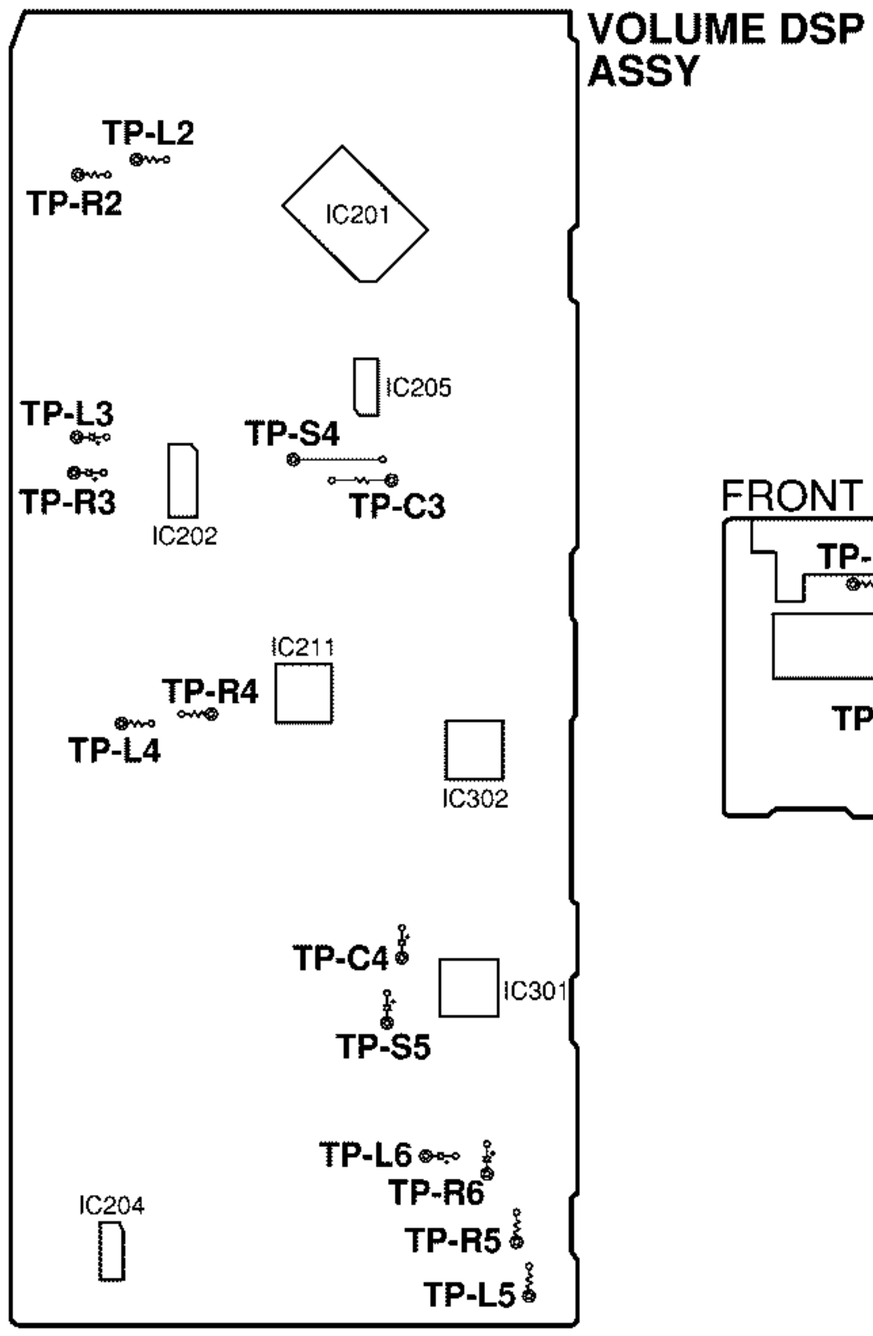

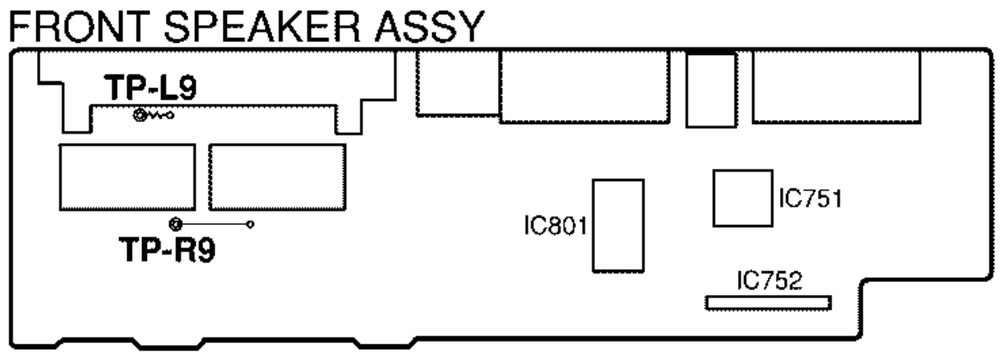

Fig.1 Test Point Location

8. PANEL FACILITIES AND SPECIFICATIONS

8.1 PANEL FACILITIES

Front Panel

The size of characters in the figure may different from that on the actual product.

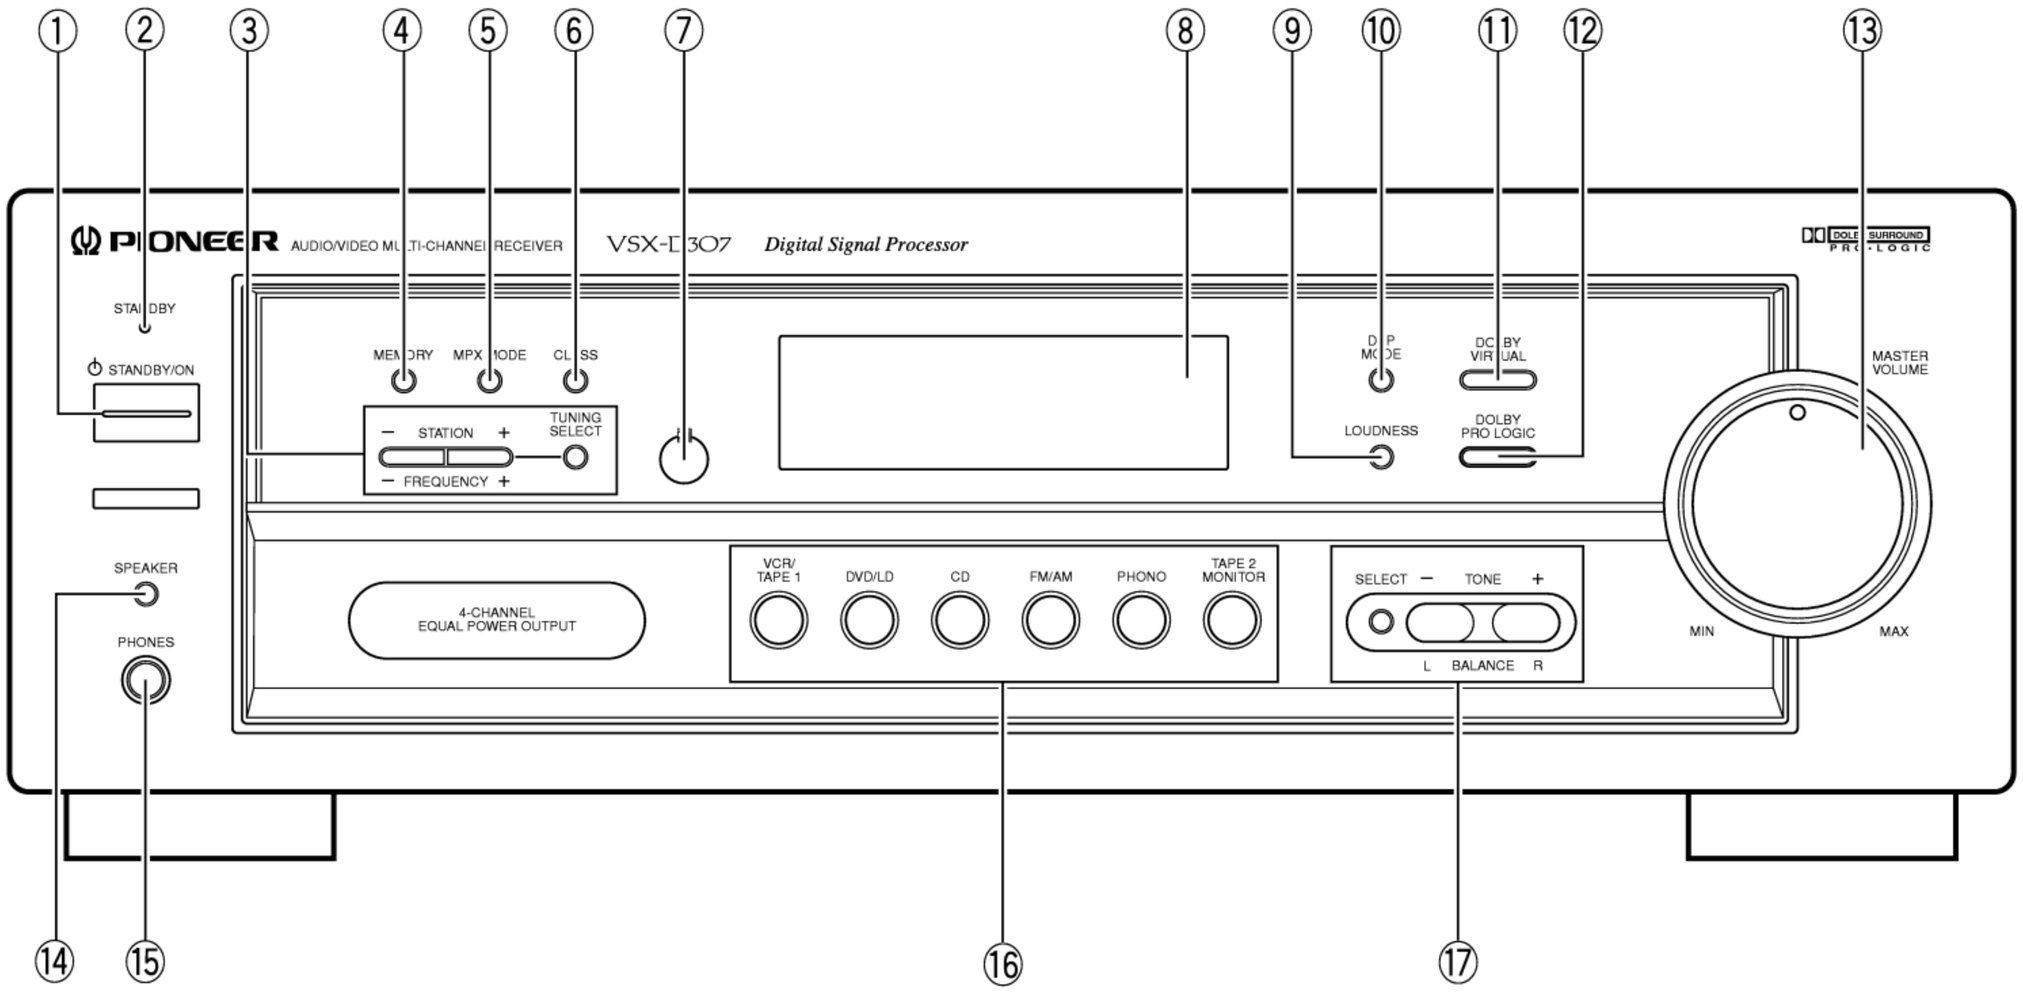

① **⏻STANDBY/ON button**

② **STANDBY indicator**

③ **TUNING SELECT, STATION(–, +), FREQUENCY (–, +) button**

TUNING SELECT:
Use to select the STATION mode and FREQUENCY mode when operating the tuner.

STATION (–, +):
Use to select the station number when operating the tuner.

FREQUENCY (–, +):
Use to select the frequency when operating the tuner.

④ **MEMORY button**

⑤ **MPX MODE button**

Use to switch the auto stereo/monaural mode for receiving FM broadcasts.
When the received broadcast signal is weak, press this button to set the monaural mode.

⑥ **CLASS button**

⑦ **Remote sensor**

⑧ **Display**

⑨ **LOUDNESS button**

Press this button when the volume is low to raise the low and high range levels so that the sound can be heard more easily.

⑩ **DSP MODE button**

⑪ **DOLBY VIRTUAL button**

⑫ **DOLBY PRO LOGIC button**

⑬ **MASTER VOLUME**

⑭ **SPEAKER button**

Switches as follows with each press.

FRONT SPEAKER ON → FRONT SPEAKER OFF → FRONT SPEAKER ON

⑮ **PHONES jack (Headphone terminal)**

⑯ **Function buttons**

⑰ **SELECT, TONE (–, +) and BALANCE (L, R) button**

SELECT:
Use to select the TONE (TREBLE, BASS) and BALANCE control.

TREBLE control → BASS control → BALANCE control → TREBLE control

TONE (–, +):
Use to adjust tone.

BALANCE (L, R):
Use to adjust volume balance.

Display

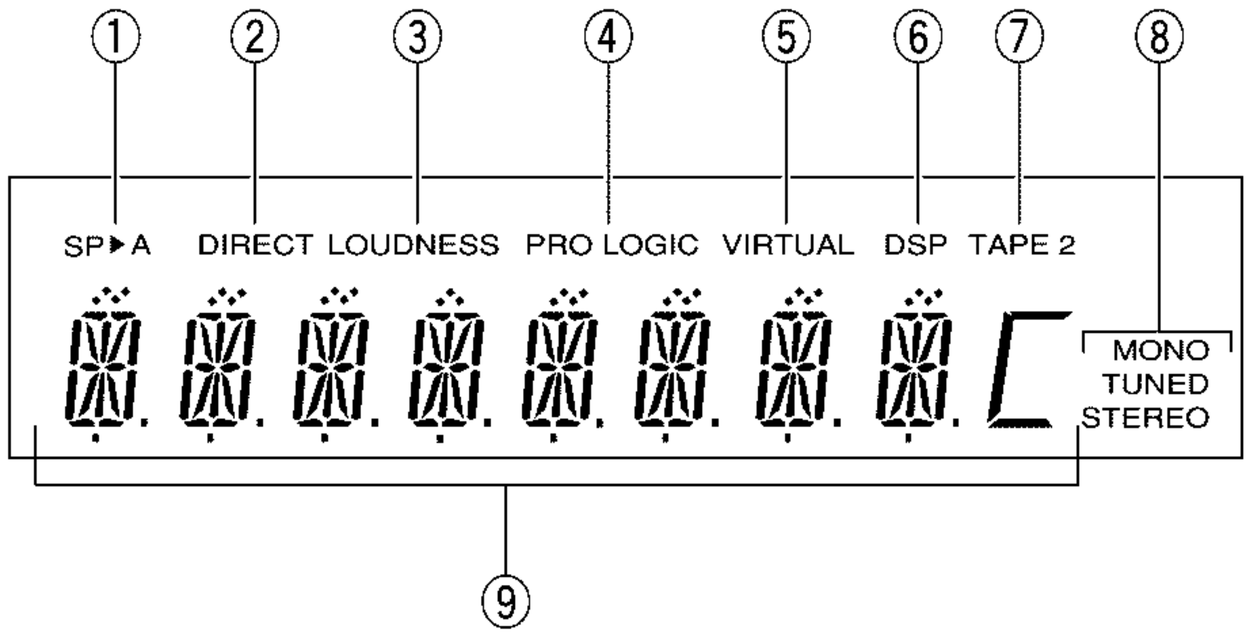

① SPEAKER A indicator
Lights when FRONT SPEAKER is ON.

② DIRECT indicator
Lights when DIRECT is ON.

③ LOUDNESS indicator
Lights when LOUDNESS is ON.

④ PRO LOGIC indicator
Lights when Dolby Pro Logic is selected.

⑤ VIRTUAL indicator
Lights when DOLBY VIRTUAL is selected.

⑥ DSP indicator
Lights when HALL, JAZZ, DANCE, THEATER 1 and THEATER 2 has been selected with the DSP MODE button.

⑦ TAPE 2 indicator
Lights when TAPE 2 MONITOR is ON.

⑧ TUNER indicator
MONO:
Lights when the monaural mode is set using the MPX MODE button.
TUNED:
Lights when broadcasts are being received.
STEREO:
Lights when stereo broadcasts are received during auto stereo mode.

⑨ CHARACTER display

CONNECTING DEVICES

When connecting or changing equipment, be sure to turn OFF the POWER switch, and disconnect the power cord from the wall outlet.

■ For better reception of signals, use the FM external antenna.

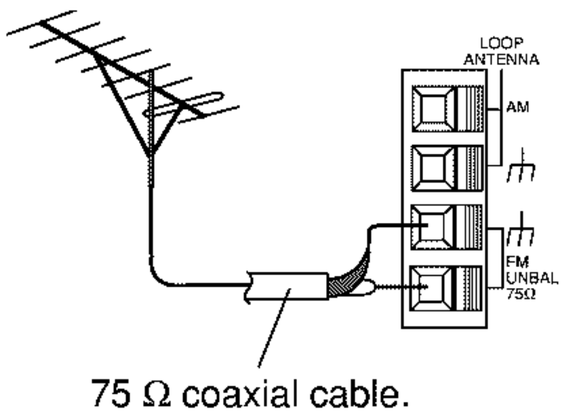

■ When AM broadcast reception is poor

Connect a 5 to 6 meter (15 to 18 feet) long vinyl-coated wire to the AM antenna. If possible draw horizontally outdoors to achieve better reception.

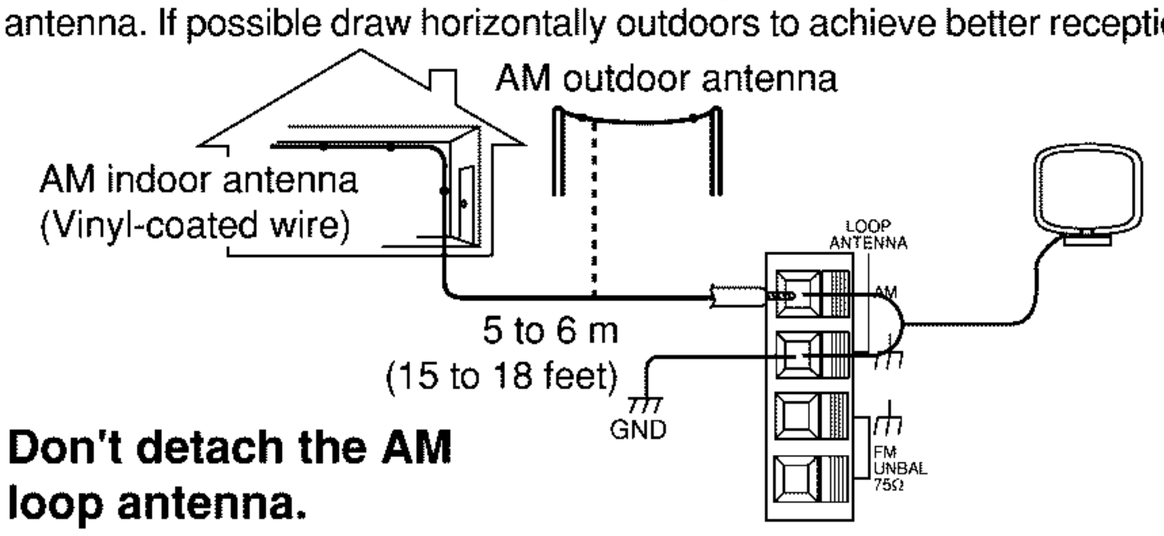

Don't detach the AM loop antenna.

■ Assembling the AM loop antenna

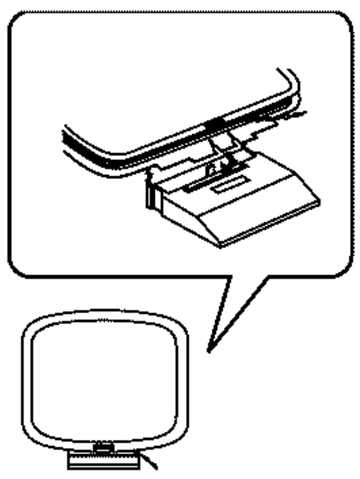

■ When attached on a wall, etc.

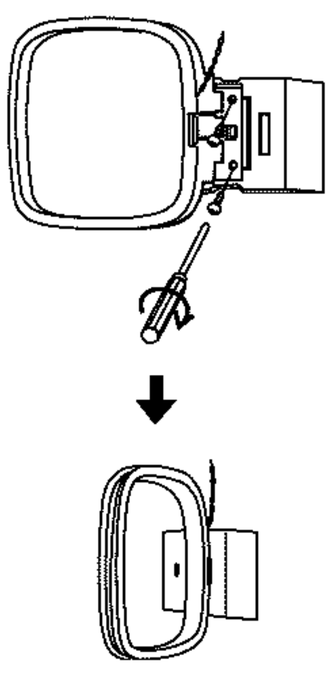

Face towards the direction with the best reception.

* The sub woofer can be connected in a different way. For details, refer to the instructions on the sub woofer.

FM antenna

Stretch out fully and secure onto the wall using pins.

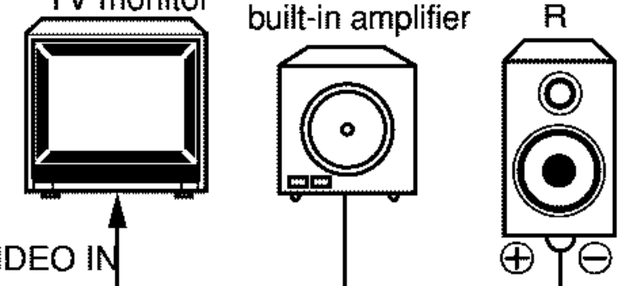

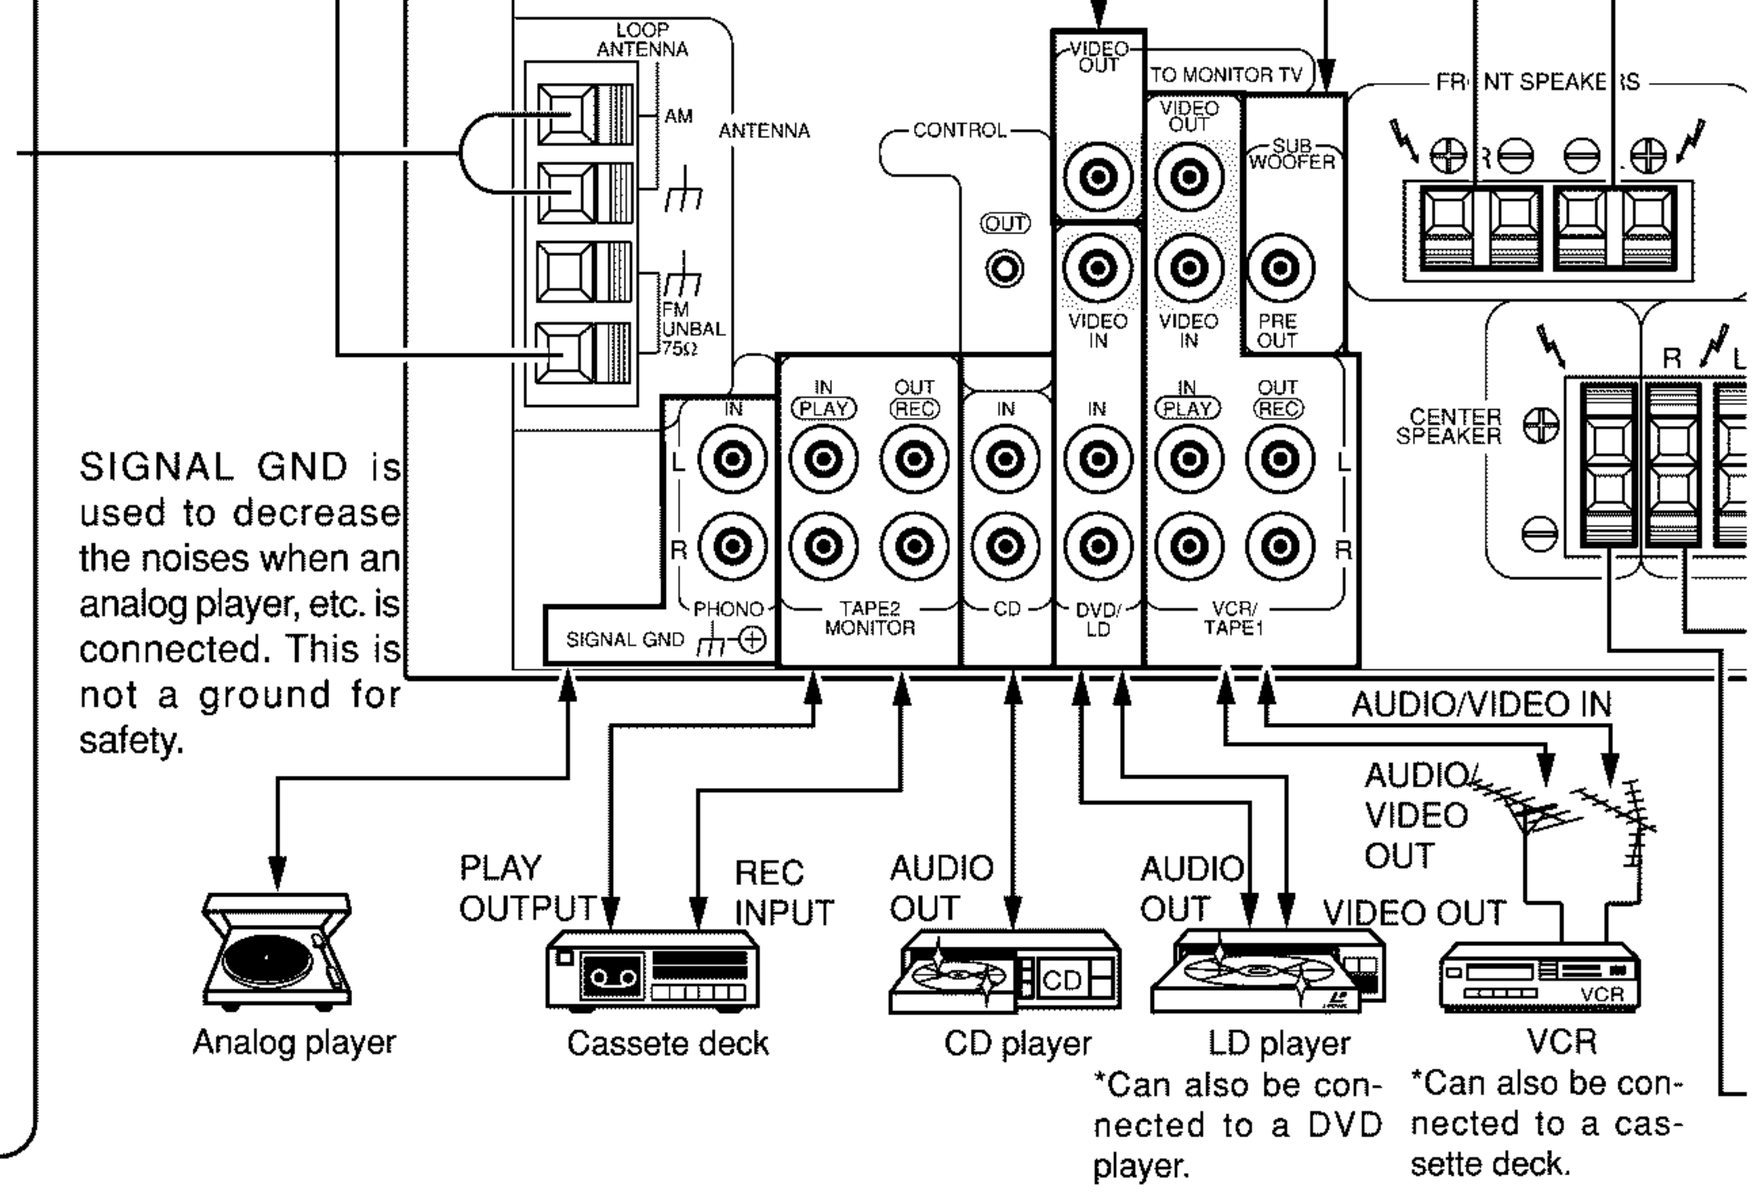

SIGNAL GND is used to decrease the noises when an analog player, etc. is connected. This is not a ground for safety.

Analog player

Cassete deck

CD player

LD player

*Can also be connected to a DVD player.

VCR

*Can also be connected to a cassette deck.

■ Antenna terminal

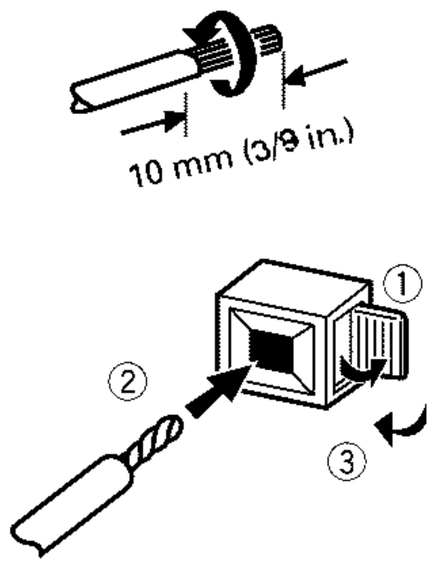

■ Input/output plug

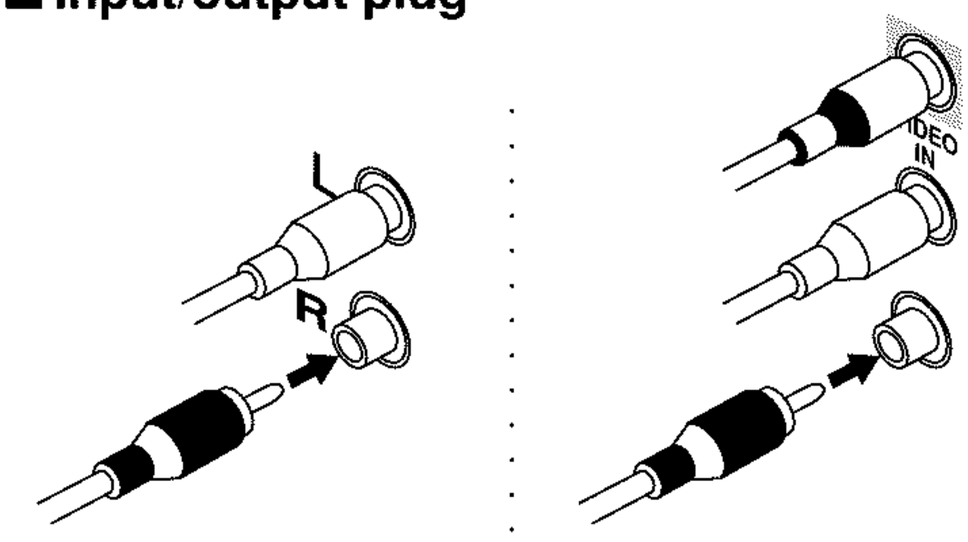

Connect the white plug to L, red plug to R, and yellow plug to VIDEO. Be sure to insert completely.

■ Speakers terminal

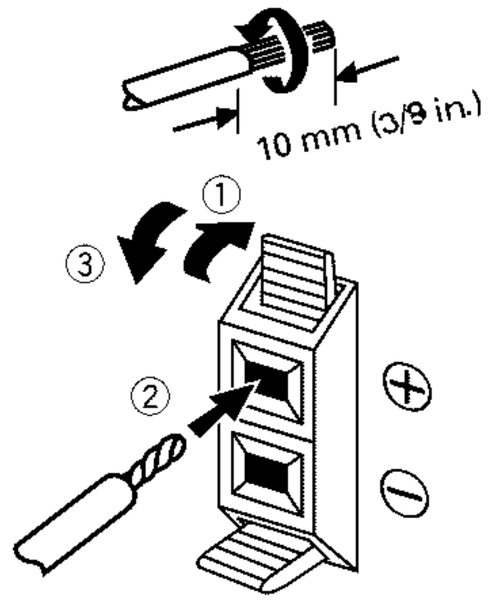

The size of characters and terminal positions in the figures may differ from those on the actual product.

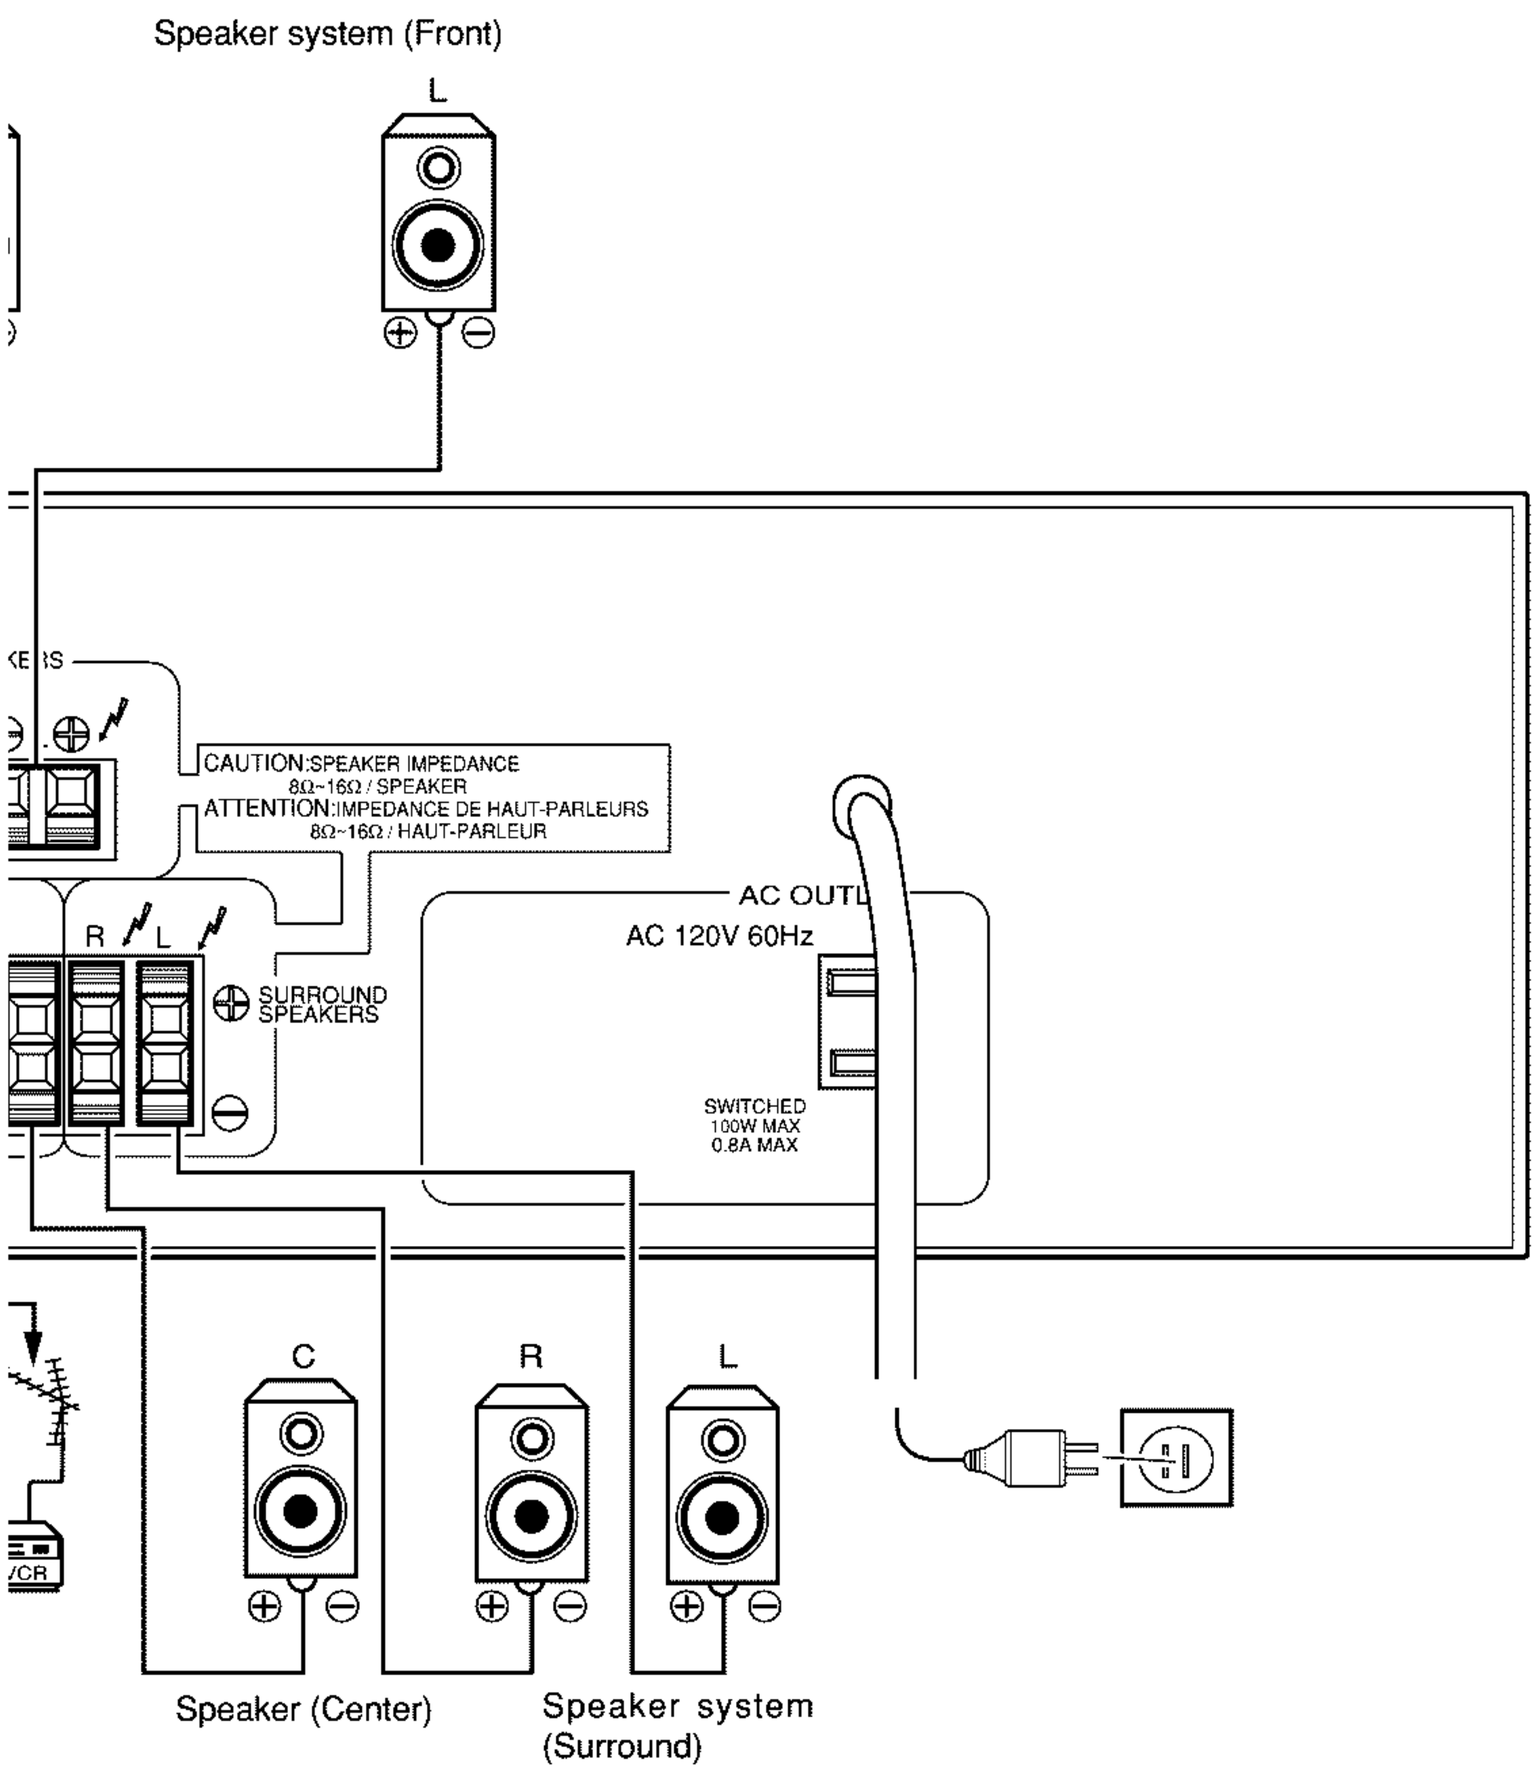

AC OUTLET [SWITCHED 100 W (0.8 A) MAX]

Power supplied through this outlet is turned on and off by the receiver's POWER switch.

Total electrical power consumption of connected equipment should not exceed 100 W (0.8 A).

Do not connect a heater, TV, etc.

REMOTE CONTROL UNIT

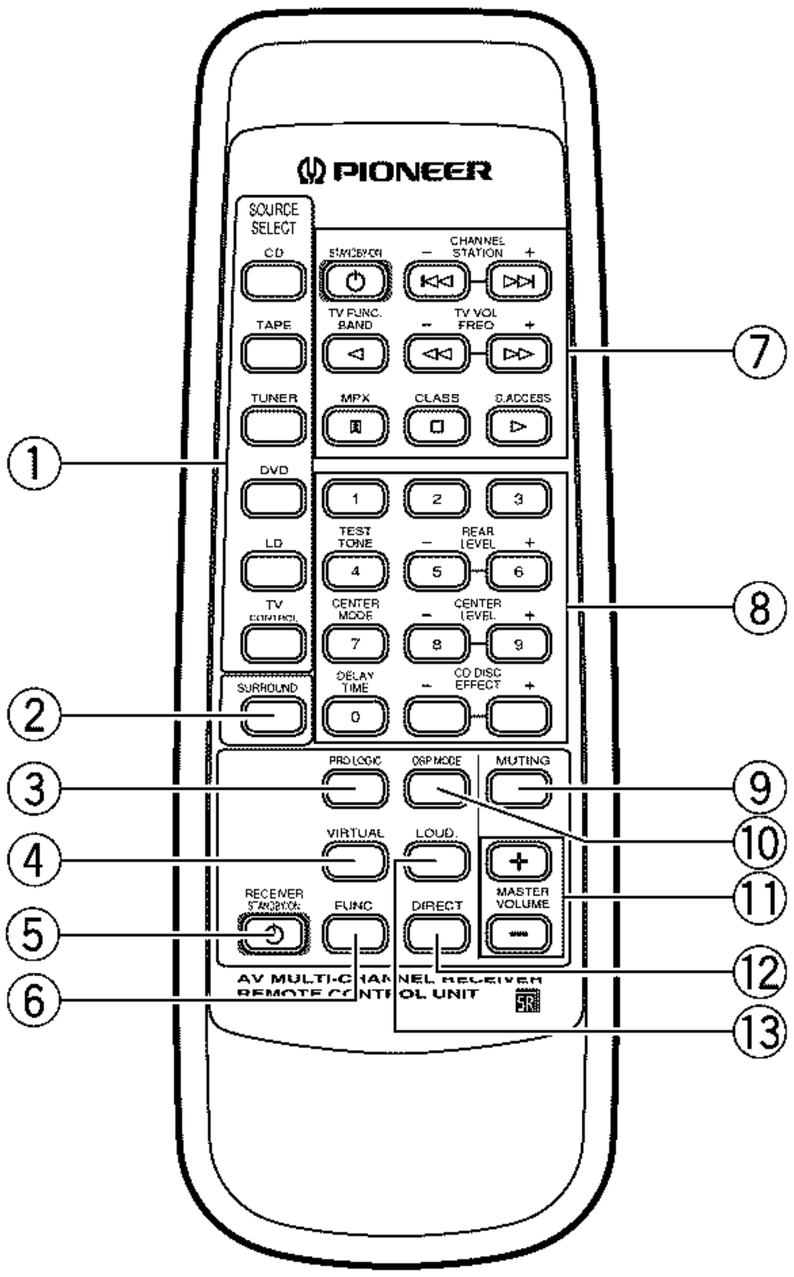

① SOURCE SELECT function buttons

When operating other devices, press any one of these buttons to specify the device to be operated.

memo

This button cannot be used to switch the functions of this unit.

② SURROUND button

Press to start the SURROUND function.

③ PRO LOGIC button

Use to turn ON/OFF DOLBY PRO LOGIC.

④ VIRTUAL button

Use to change the mode of DOLBY VIRTUAL.

⑤ RECEIVER STANDBY/ON button

⑥ FUNC. (FUNCTION) button

Use to switch the function setting of this unit.

TUNER → CD → DVD/LD → VCR/TAPE 1 → PHONO → TUNER

⑦ [TUNER operations]

STATION –,+, BAND, FREQ. –,+, MPX, CLASS, D.ACCESS buttons

[TV operations]

STANDBY/ON,CHANNEL –,+, TV FUNC., TV VOL. –,+, buttons

[CD, TAPE, DVD, LD operations]

STANDBY/ON, I◄◄, ►►I (Chapter/Track search), ◄ (Play), ◄◄ (Rewind), ►► (Fast Forward), II (Pause),■ (Stop), ► (Play)

⑧ Number/Surround setting buttons

TEST TONE: When turned ON (while in DOLBY PRO LOGIC), volume balance adjustment signals are output in order from the speakers and can be adjusted.
REAR LEVEL –,+: Adjusts the rear level.
CENTER MODE: Switches the center mode.
CENTER LEVEL –,+: Adjusts the center level.
DELAY TIME: Use to set the delay time.
EFFECT –,+: Adjusts DSP effects.

⑨ MUTING button

Press to mute the volume.

⑩ DSP MODE button

Use to switch the DSP mode.

⑪ MASTER VOLUME –/+ button

Use to adjust the volume.

⑫ DIRECT button

Use to playback sound without going through the tone and balance control circuits. DOLBY PRO LOGIC, DOLBY VIRTUAL, DSP MODE and LOUDNESS also turn off.

⑬ LOUD.(LOUDNESS) button

When LOUDNESS is turned ON at a small volume, the low frequency and high frequency levels increase, enabling the sound to be easier to hear.

8.2 SPECIFICATIONS

Amplifier section

Continuous average power output of 100 watts* per channel, min., at 8 ohms, from 40 Hz to 20,000 Hz with no more than 0.9 % total harmonic distortion (front).**

Continuous Power Output
- Front ..... 100 W + 100 W (1kHz, 0.9 %, 8 Ω)
- Center ..... 100 W (1kHz, 0.9 %, 8 Ω)
- Surround ..... 100 W (1kHz, 0.9 %, 8 Ω)

Input (Sensitivity/Impedance)
- PHONO MM ..... 2.8 mV/47 kΩ
- CD, VCR/TAPE 1, TAPE 2, DVD/LD ..... 200 mV/47 kΩ

Phono Overload level (T.H.D. 0.1 %, 1kHz)
- PHONO MM ..... 100 mV

Frequency Response
- PHONO MM ..... 20 Hz to 20,000 Hz ± 0.3 dB
- CD, VCR/TAPE 1, TAPE 2, DVD/LD ..... 5 Hz to 100,000 Hz $^{+0}_{-3}$ dB

Output (Level/Impedance)
- VCR/TAPE 1 REC, TAPE 2 REC ..... 200 mV/2.2 kΩ

Tone Control
- BASS ..... ± 8 dB (150 Hz)
- TREBLE ..... ± 8 dB (10 kHz)
- LOUDNESS ..... + 8 dB/+ 6 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio (IHF, short circuited, A network)
- PHONO MM ..... 72 dB
- CD, VCR/TAPE 1, TAPE 2, DVD/LD ..... 96 dB

Signal-to Noise Ratio [EIA, at 1 W (1 kHz)]
- PHONO MM ..... 75 dB
- CD, VCR/TAPE 1, TAPE 2, DVD/LD ..... 79 dB

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.

** Measured by Audio Spectrum Analyzer.

VIDEO Section

Input (Sensitivity/Impedance)
- VCR, DVD/LD ..... 1 Vp-p/75 Ω

Output (Level/Impedance)
- VCR ..... 1 Vp-p/75 Ω

Frequency Response
- VCR, DVD/LD → MONITOR ..... 5 Hz to 7 MHz $^{+0}_{-3}$ dB

Signal-to-Noise Ratio ..... 55 dB

Cross Talk ..... 55 dB

Manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby", "AC-3", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Copyright 1992 Dolby Laboratories, Inc. All rights reserved.

FM Tuner Section

Frequency Range ..... 87.5 MHz to 108 MHz
Usable Sensitivity ..... Mono:13.2 dBf, IHF (1.3 µV/75 Ω)
50 dB Quieting Sensitivity ..... Mono: 20.2 dBf
Stereo: 38.6 dBf
Signal-to-Noise Ratio ..... Mono: 73 dB (at 85 dBf)
Stereo: 70 dB (at 85 dBf)
Distortion ..... Stereo: 0.5 % (1 kHz)
Alternate Channel Selectivity ..... 60 dB (400 kHz)
Stereo Separation ..... 40 dB (1 kHz)
Frequency Response ..... 30 Hz to 15 kHz (±1) dB
Antenna Input ..... 75 Ω unbalanced

AM Tuner Section

Frequency Range ..... 530 kHz to 1,700 kHz
Sensitivity (IHF, Loop antenna) ..... 350 µV/m
Selectivity ..... 25 dB
Signal-to-Noise Ratio ..... 50 dB
Antenna ..... Loop antenna

Miscellaneous

Power Requirements ..... AC 120 V, 60 Hz
Power Consumption ..... 210 W
In Standby Condition ..... 5 W
AC Outlet
SWITCHED ..... 100 W (0.8 A) MAX
Dimensions ..... 420 (W) × 143 (H) × 325 (D) mm
16-9/16 (W) × 5-5/8 (H) × 12-13/16 (D) in
Weight (without package) ..... 7.4 kg (16 lb 5 oz)

Furnished Parts

FM Antenna 1
AM Loop Antenna 1
Dry Cell Batteries
[size "AA" (IEC R6P)] 2
Remote Control Unit 1
Operating Instructions 1

● The remote control unit and dry cell battery are not provided with VSX-D307-HT.

NOTE:
Specifications and the design are subject to possible modifications without notice, due to improvements.

MAINTENANCE OF EXTERNAL SURFACES

- Use a polishing cloth or dry cloth to wipe off dust and dirt.
- When the surfaces are very dirty, wipe with a soft cloth dipped in some neutral cleanser diluted five or six times with water, and wrung out well, and then wipe again with a dry cloth. Do not use furniture wax or cleaners.
- Never use thinners, benzene, insecticide sprays or other chemicals on or near this unit, since these will corrode surfaces.